

QSLA 68

PARTS LIST NO. M58703 00204




DCA - 300SSCU4i

PARTSLIST

Fan - 0602060017

Fan Pulley - 3929002

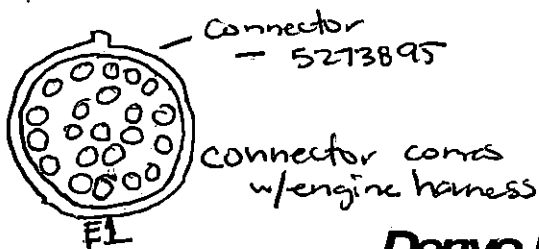

Denyo Manufacturing Corp.

SERIAL No. 9100305~

HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine-Driven AC Generator Model DCA-300SSCU2.
2. When placing orders, specify the following details:
 - 1) Model Number and Serial Number.
 - 2) Parts Number and Parts Name.
 - 3) Quantity required.
3. The parts listed with a serial number are new parts.
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration on the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the lefthand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

All	:Some parts differ from unit to unit	P.	:Page
Ass'y	:Assembly	Re.	:Rear
Fr.	:Front	R.H.	:Right
L.H.	:Left	STD	:Standard
No.	:Number	→	:Indication of the page where the modified or additional parts are listed.
O.P.	:Optional Parts		



Each symbol [A] [B] [C] listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol [A] [B] [C] is listed on the first top place of each assembly group.

Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.


8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "Cummins Inc. QSL9-G8 Diesel Engine Parts Catalogue."

INDEX

N a m e	Page
Engine-Driven AC Generator Set.....	1 - 1
Generator Ass'y.....	2 - 1
Control Box Ass'y.....	3 - 1
Engine & Radiator Ass'y.....	4 - 1
Engine Operating Panel Ass'y.....	5 - 1
Output Terminal Ass'y.....	6 - 1
Battery Ass'y.....	7 - 1
Muffler Ass'y.....	8 - 1
Fuel Tank Ass'y.....	9 - 1
Bonnet Ass'y (Part 1).....	10 - 1
Bonnet Ass'y (Part 2).....	11 - 1
Name Plate Ass'y.....	12 - 1

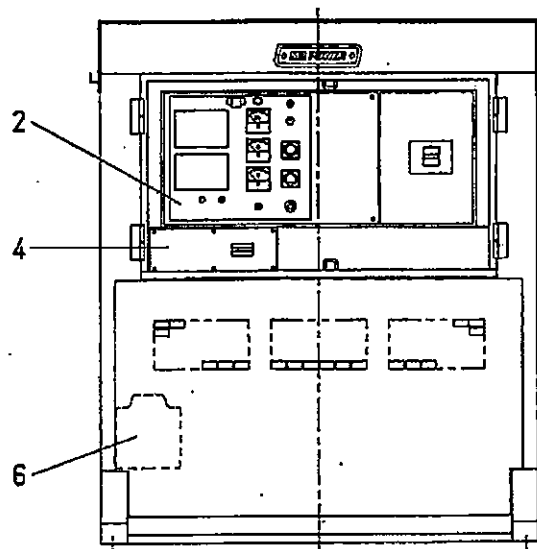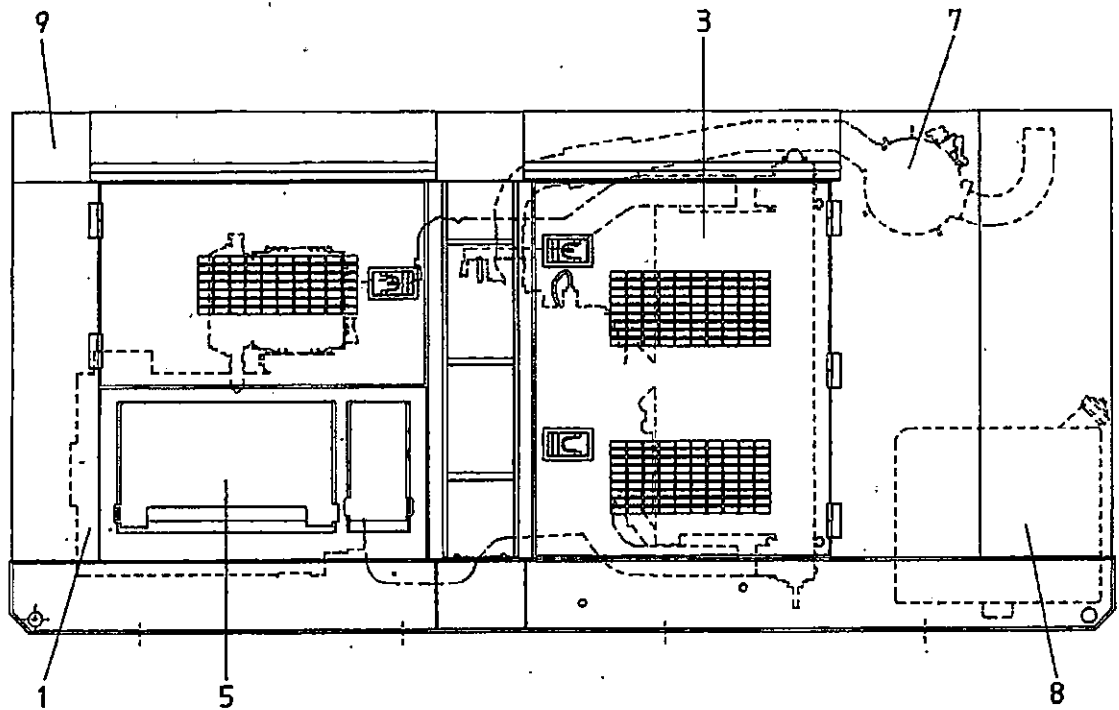


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1		Generator Ass'y	Refer to p.2-1						
2		Control Box Ass'y	Refer to p.3-1						
3		Engine & Radiator Ass'y	Refer to p.4-1						
4		Engine Operating Panel Ass'y	Refer to p.5-1						
5		Output Terminal Ass'y	Refer to p.6-1						
6		Battery Ass'y	Refer to p.7-1						
7		Muffler Ass'y	Refer to p.8-1						
8		Fuel Tank Ass'y	Refer to p.9-1						
9		Bonnet Ass'y(Part 1)	Refer to p.10-1						
		Bonnet Ass'y(Part 2)	Refer to p.11-1						
		Name Plate Ass'y	Refer to p.12-1						

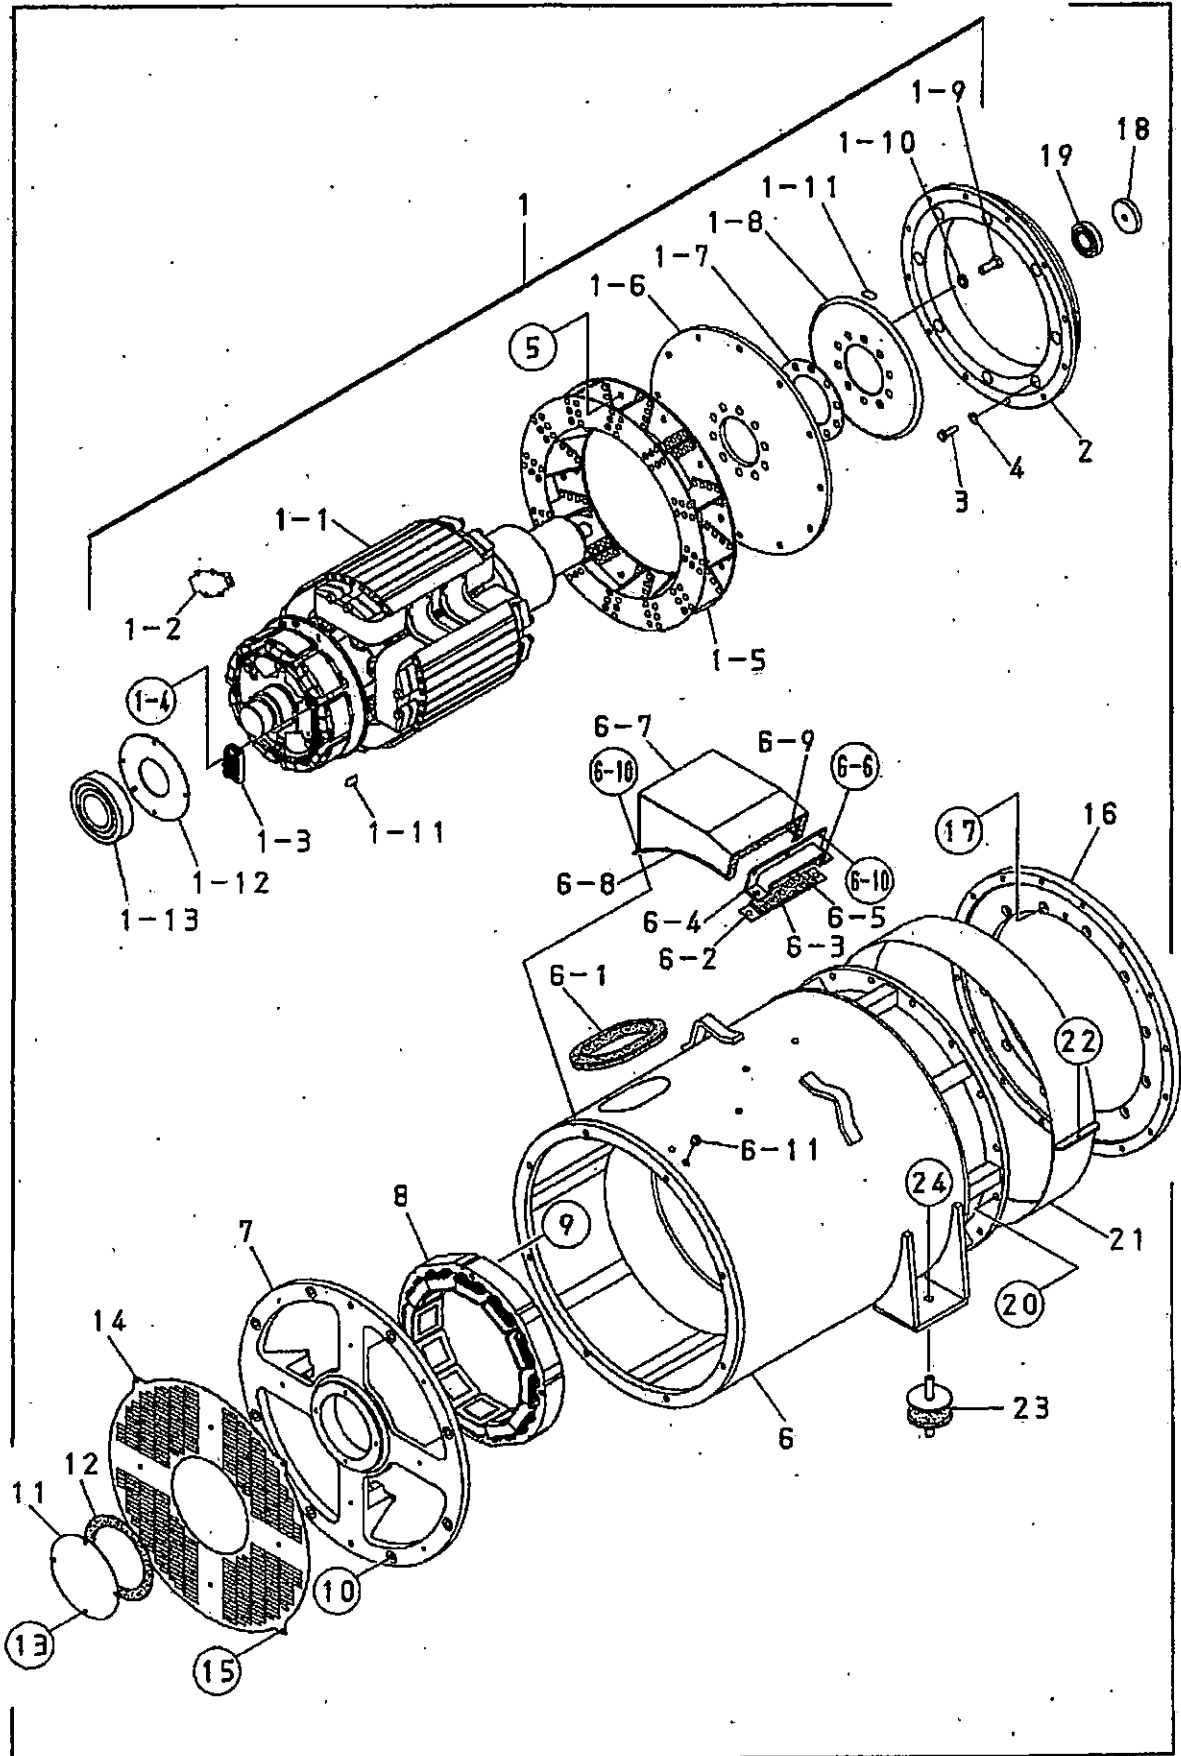

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	C 21100 00002	Rotor Ass'y		1					
*1- 1		Field Ass'y		(1)					
1- 2	Y 06018 42401	Resistor	SMRK 80W 300ΩK	(2)					
1- 3	Y 06018 23282	Rectifier	RM50TC-24	(1)					
1- 4	Y 00182 05020	Hex. Socket Head Cap Screw		(2)					
	Y 00400 05000	Spring Washer		(2)					
	Y 00412 05000	Plain Washer		(2)					
1- 5	W 82010 70002	Fan		(1)					
1- 6	W 82016 11004	Coupling Disk		(12)					
1- 7	C 31642 00004	Washer, coupling hub		(1)					
1- 8	W 82010 15003	Balancing Plate Please purchase a set of 1-11 at the same time.		(1)					
1- 9	Y 00121 16045	Hex. Head Bolt	S=38	(10)					
1-10	Y 00426 16000	Spring Washer		(10)					
1-11	Y 06010 00209	Balancing Weight Kit		(1)					
1-12	C 31125 00004	Bearing Flange		(1)					
1-13	Y 00719 06315	Bearing	6315 DDU C3	(1)					
2	M 51634 00103	Coupling Ring		1					
3	Y 03432 06200	Hex. Head Bolt		8					
4	Y 00436 06000	Spring Washer		8					
5	Y 00121 12040	Hex. Head Bolt	S=30	12					
	Y 00425 12000	Spring Washer		12					
6	C 21301 00103	Stator Ass'y		1					
6- 1	Y 02262 00430	Rubber Seal		(1)					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
6- 2	W 82013 23004	Clamper		(1)					
6- 3	Y 02233 00140	Rubber Seal		(1)					
6- 4	W 82013 23103	Clamper		(1)					
6- 5	Y 02212 00350	Rubber Seal		(1)					
6- 6	Y 00101 10035	Hex. Head Bolt		(2)					
	Y 00412 10000	Plain Washer		(2)					
6- 7	G 21322 00003	Cover		(1)					
6- 8	Y 02260 00275	Rubber Seal		(2)					
6- 9	Y 02250 00500	Rubber Seal		(1)					
6-10	Y 00171 06016	Hex. Head Bolt		(6)					
6-11	Y 06018 50144	Grommet	G-45	(1)					
7	G 31540 00002	End Bracket		1					
8	G 31380 00003	Field Ass'y, exciter		1					
9	Y 00121 10080	Hex. Head Bolt	S-26	4					
	Y 00426 10000	Spring Washer		4					
	Y 00412 10000	Plain Washer		4					
10	Y 00171 12045	Hex. Head Bolt		8					
11	G 31543 00104	Cover, bearing		1					
12	G 31543 00004	Gasket, bearing		1					
13	Y 00101 06060	Hex. Head Bolt		4					
	Y 00400 06000	Spring Washer		4					
	Y 00412 06000	Plain Washer		4					
14	G 31544 00003	Suction Cover		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty.				Symbol	Serial No.
				All	A	B	C		
15	Y 00171 06015	Hex. Head Bolt		8					
16	M 51636 00303	Coupling Adapter		1					
17	Y 03432 05150	Hex. Head Bolt		12					
	Y 00436 05000	Spring Washer		12					
18	M 51637 00004	Spacer, bearing		1					
19	Y 00705 06208	Bearing	6208ZZ	1					
20	Y 00121 12040	Hex. Head Bolt	S=30	28					
	Y 00425 12000	Spring Washer		28					
21	C 31323 00014	Cover, fan		1					
22	Y 00101 06030	Hex. Head Bolt		1					
	Y 00412 06000	Plain Washer		1					
	Y 06008 15000	Nut	USN-6001	1					
23	Y 06050 00012	Rubber Suspension	EA-1013	2					
24	Y 00300 20000	Hex. Nut		4					
	Y 00400 20000	Spring Washer		4					

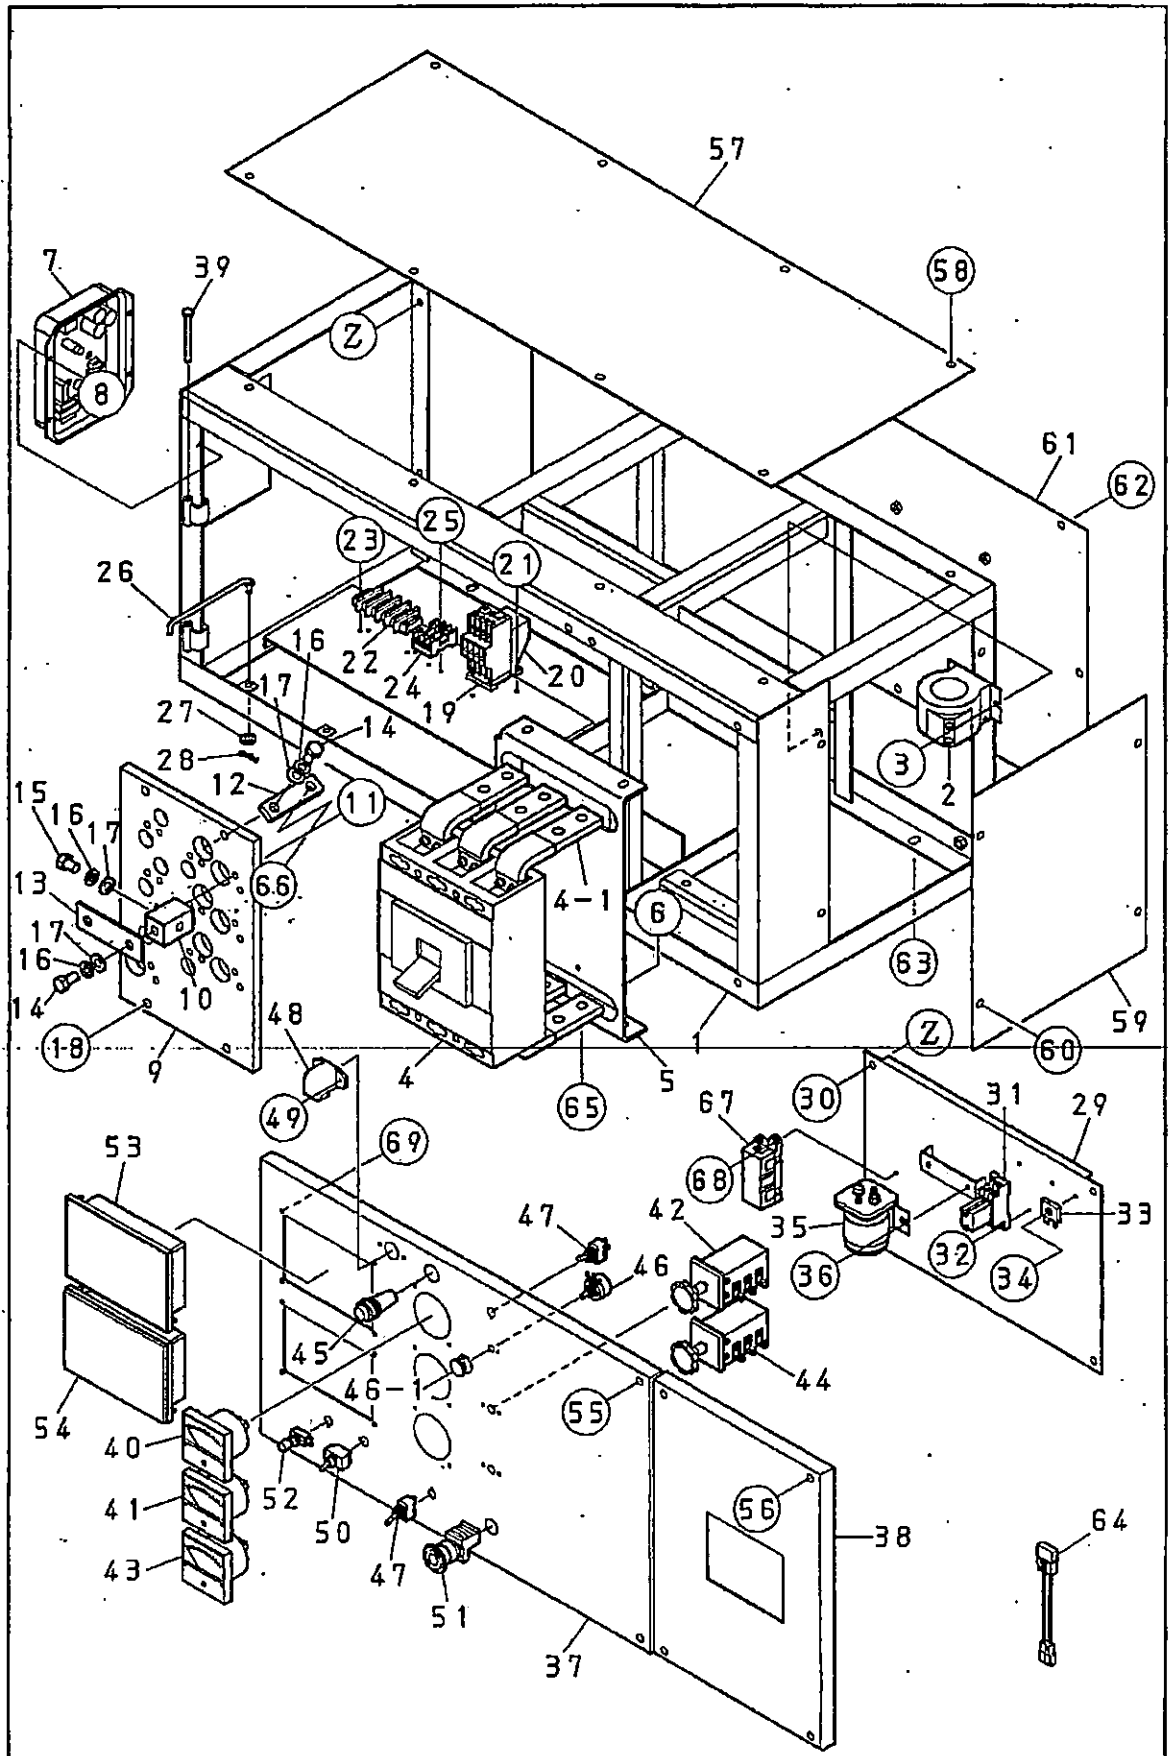 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	M 52467 00804	Wire Harness, generator		1					
	M 53572 00302	Wire Harness, engine		1					
1	M 52130 00202	Control Box		1					
2	Y 06018 09659	Current Transformer	CR2-5 500/5A	3				CT1~3	
3	Y 00271 06016	Machine Screw		6					
4	Y 06018 07519	Circuit Breaker	T6H 800A M52433 00204	1				CB1	
4- 1	Y 06018 27410	Bus Bar	K6RT	2 (Set)					
5	M 52616 00004	Bracket, circuit breaker		1					
6	Y 00169 08020	Hex. Head Bolt		4					
7	Y 06018 20604	Automatic Voltage Regulator	NTA-5E-2TX	1				AVR	
8	Y 00271 05016	Machine Screw		4					
9	M 52730 00103	Change-Over Board, voltage		1					
10	M 52764 00104	Change Terminal		10					
11	Y 00171 08030	Hex. Head Bolt		20					
12	M 52762 00004	Terminal Plate		3					
13	M 52763 00104	Change Plate		6					
14	M 92201 01104	Hex. Head Bolt		13					
15	M 22331 00004	Hex. Head Bolt		13					
16	Y 00400 12000	Spring Washer		26					
17	Y 00414 12000	Plain Washer		26					
18	Y 00171 10030	Hex. Head Bolt		4					
19	Y 06018 20847	Over Current Relay	TA25DU4.0	1				OC	
20	Y 06018 20848	Over Current Relay	DB25/25A	1				OC	

300SSCU2

Control Box Ass'y


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				Alt	A	B	C		
21	Y 00271 04020	Machine Screw		2					
	Y 02070 04000	Hex. Nut		2					
22	Y 06018 15153	Terminal Board	603-GP-04	1				TB2	
23	Y 00271 04020	Machine Screw		2					
24	Y 06018 02218	Holder, fuse	F-7111 3P	1					
	Y 06018 06671	Fuse(Left side)	15A	1				F2	
	Y 06018 02131	Fuse(Center)	1A	1				F3	
	Y 06018 02133	Fuse(Right)	F-5 5A	1				F4	
25	Y 00271 03020	Machine Screw		2					
26	M 42136 00104	Stopper, control panel		1					
27	Y 00412 06000	Plain Washer		1					
28	Y 06050 10502	Snap Pin	SSP-6	1					
29	M 52605 00303	Set Panel, electric parts		1					
30	Y 00169 08020	Hex. Head Bolt		4					
31	Y 06018 27655	Relay	LY2-D DC24V	1				RELAY1	
	Y 06018 23109	Socket	PTF08A	1					
	Y 06018 24400	Holder	PYC-A1	1					
32	Y 00271 04020	Machine Screw		2					
33	Y 06018 23240	Rectifier	DE45	2				Re1, 2	
34	Y 00271 04020	Machine Screw		2					
35	Y 06022 01457	Relay, heater	586-905	1					
36	Y 00169 06016	Hex. Head Bolt		2					
37	M 52230 00304	Control Panel		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
38	M 52230 00204	Control Panel		1					
39	Y 06050 11211	Pin	B-99-2	2					
40	Y 06018 07622	Frequency Meter	RSC-80F 45~65Hz 240V	1				F	
41	Y 06018 06979	AC Ammeter	RSS-80 0~500A/1000A:5A	1				A	
42	Y 06018 01040	Change-Over Switch, ammeter	SL-2 AS	1				AS	
43	Y 06018 06887	AC Voltmeter	RSR-80 0~600V	1				V	
44	Y 06018 01041	Change-Over Switch, voltmeter	SL-2 VS	1				VS	
45	Y 06018 10072	Pilot Lamp	LP-132DC 220V	1				PL1	
	Y 06018 10261	Bulb	CT-13W	(1)					
46	Y 06018 40073	Rheostat(Voltage Regulator)	RA20A2SE102BJ 2W 1kΩ	1				VR	
46-1	Y 06018 40121	Knob	25N	1					
47	Y 06018 30710	Switch	S-301T	2					
48	Y 06018 10171	Panel Light	60002 DC24V	1				IL	
49	Y 00271 04020	Machine Screw		2					
	Y 02070 04000	Hex. Nut		2					
50	Y 06018 31340	Switch	2GM54-63	1					
51	Y 06018 31557	Stop Button	AR22V2R-01R	1					
52	Y 06018 31205	Switch	SB-221 NO/O RED	1					
53	Y 06022 02642	Controller Ecu	ECU-800	1					
54	Y 06021 20569	Gauge Ass'y		1					
55	M 92201 00004	Set Screw		2					
	Y 00802 00007	Snap Ring		2					
56	Y 00171 08040	Hex. Head Bolt		4					

300SSCU2

Control Box Ass'y

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
57	M 52145 00004	Cover, control box		1					
58	Y 00169 08020	Hex. Head Bolt		8					
59	M 52143 00004	Side Panel, control box		1					
60	Y 00169 08020	Hex. Head Bolt		4					
61	M 52134 00104	Panel, control box		1					
62	Y 00169 08020	Hex. Head Bolt		9					
63	Y 00169 10030	Hex. Head Bolt		5					
	Y 02070 10000	Hex. Nut		5					
64	Y 06018 06646	Fuse	20A 7127-3025	1				F2	
65	Y 00171 12040	Hex. Head Bolt		6					
	Y 00300 12000	Hex. Nut		6					
	Y 00412 12000	Plain Washer		6					
66	Y 00171 12040	Hex. Head Bolt		3					
	Y 00300 12000	Hex. Nut		3					
	Y 00412 12000	Plain Washer		3					
67	Y 06018 15153	Fuse Holder	CUMMINS 98K4453	1				F1	
	Y 06018 72130	Fuse	CUMMINS 12J4291	1					
68	Y 00271 04020	Machine Screw		2					
69	Y 02067 07000	Hex. Nut		8					
	Y 00448 07000	Spring Washer		8					

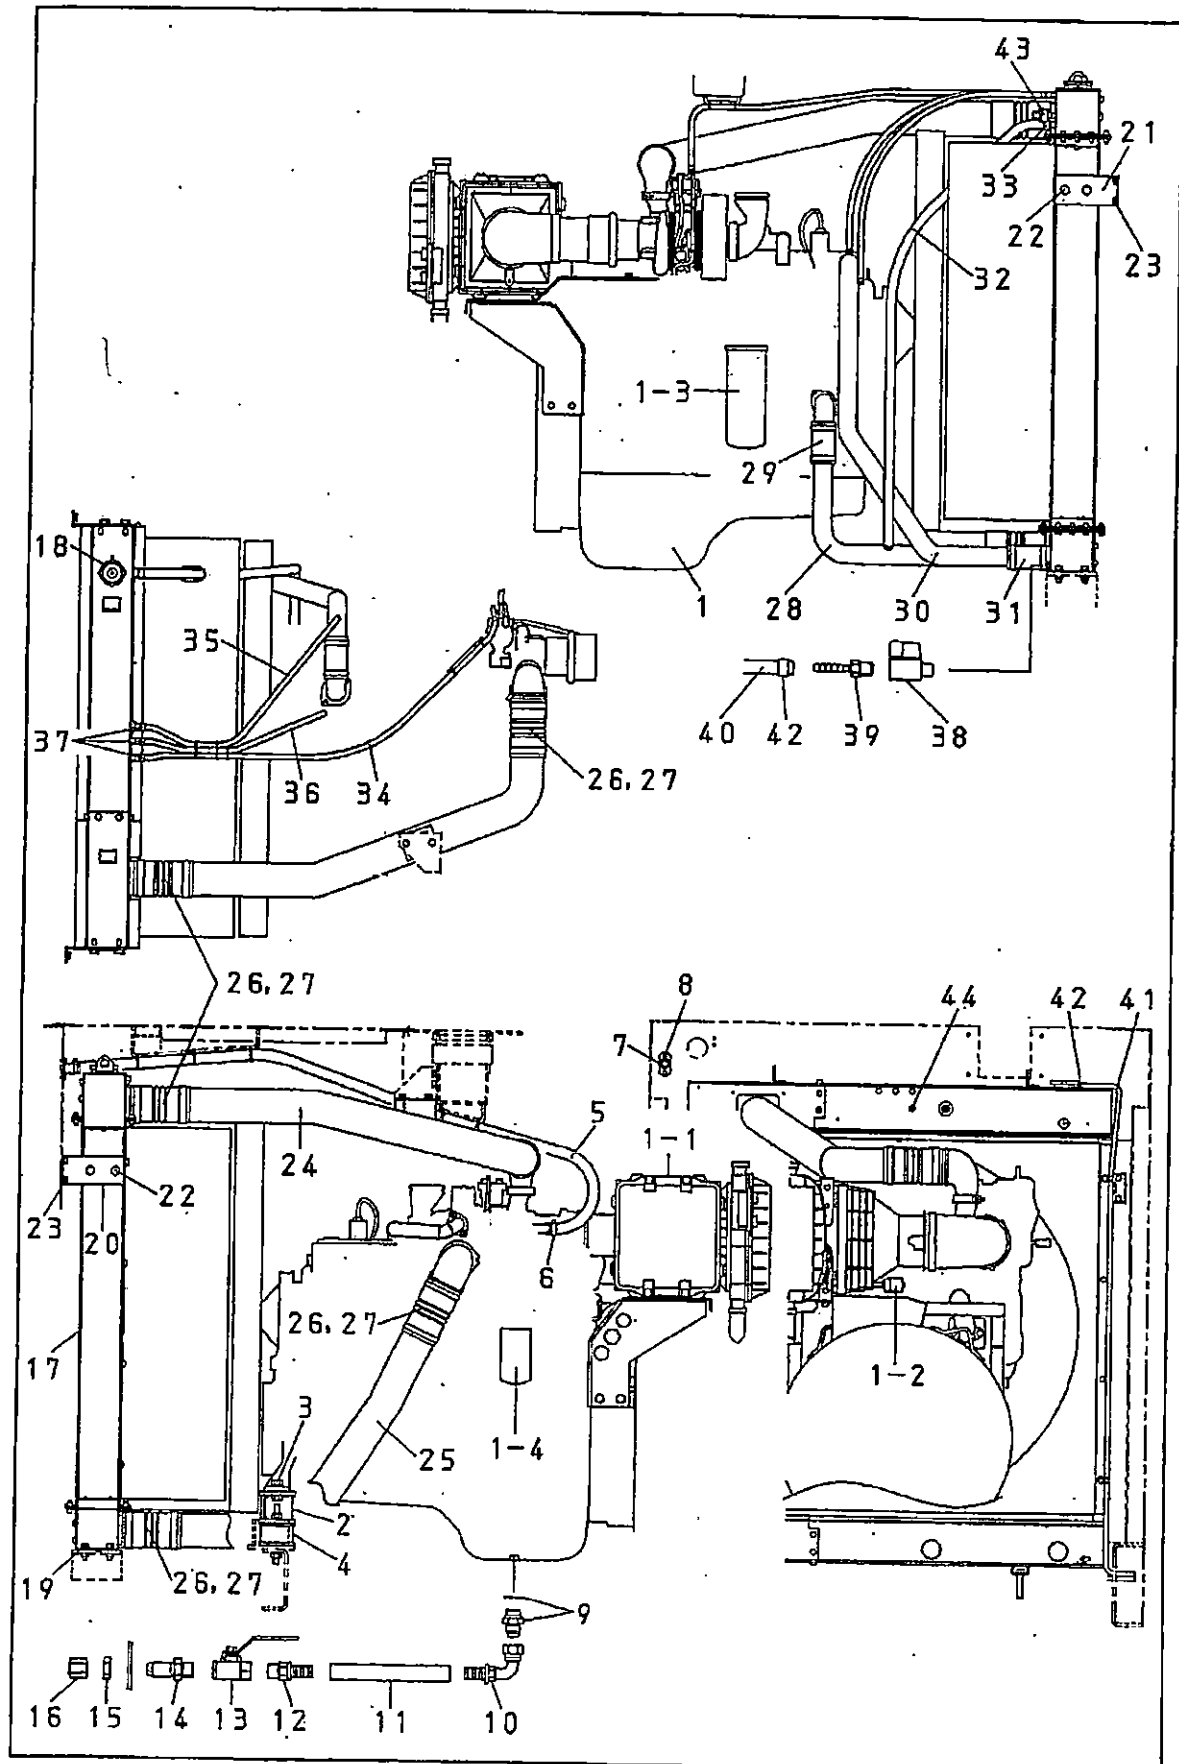 

300SSCU2

Engine & Radiator Ass'y


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 59232 00044	Engine	CUMMINS QSL9-G8	1					
	Y 06020 15247	Fan Belt	CUMMINS 3289952	1					
1-1	Y 06020 46658	Element, air cleaner (Primary)	CUMMINS AF55016	1					
		Element, air cleaner (Secondary)	CUMMINS AF55309	1					
1-2	Y 06020 40650	Air Cleaner Indicator	RBX00-2252	1					
1-3	Y 06020 41224	Cartridge, oil filter	CUMMINS LF9009	1					
1-4	Y 06020 42588	Cartridge, fuel filter	CUMMINS FF5580	1					
2	M 53032 00404	Engine Foot		1					
3	Y 00103 18050	Hex. Head Bolt		2					
	Y 00400 18000	Spring Washer		2					
	Y 00412 18000	Plain Washer		4					
	Y 00300 18000	Hex. Head Nut		2					
4	Y 06050 00011	Rubber Suspension		2					
	Y 00300 16000	Hex. Head Nut		4					
	Y 00400 16000	Spring Washer		4					
5	Y 01917 01950	Blowby Hose		1					
6	Y 06055 15149	Hose Band	5024	2					
7	M 53261 00004	Blowby Pipe		1					
8	Y 00192 06020	Hex. Head Bolt		2					
9	Y 06020 22586	Adapter	7400-10-18	1					
10	Y 06020 22579	90° Elbow	191321-10S	1					
11	Y 03795 00850	Drain Hose	FC332-10	1					
12	Y 06033 06399	Hose Joint	PM10-8	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
13	Y 06055 11399	Valve	FBV050	1					
14	Y 06033 06597	Connector	2706-10-08	1					
15	Y 06033 00286	Rocknut	306-10	1					
16	Y 06020 21071	Cap	304-C-10	1					
17	Y 06020 12910	Radiator/CAC Ass'y	CUMMINS 01-24146	1					
18	Y 06020 11036	Cap	CUMMINS 15LB, 10294	1					
19	Y 00169 10025	Hex. Head Bolt		4					
20	M 53102 00404	Bracket		1					
21	M 53102 00304	Bracket		1					
22	Y 00130 08120	Hex. Head Bolt		4					
	Y 00431 06000	Plain Washer		4					
23	Y 00169 10025	Hex. Head Bolt		4					
24	Y 06020 13265	Tube, CAC hot side	CUMMINS 085-0050-0200	1					
25	Y 06020 14825	Tube, CAC cold side	CUMMINS 085-0050-001	1					
26	Y 06020 15160	Hose, hump	CUMMINS 367-400-070	4					
27	Y 06020 15303	Clamp, hose	CUMMINS 3926704	8					
28	Y 06020 14824	Tube, water inlet	CUMMINS 085-0050-009	1					
29	Y 06020 15305	Hose	CUMMINS 70225-IN	2					
	Y 06020 15304	Clamp, hose	CUMMINS CT-9440	4					
30	Y 06020 13264	Tube, water outlet	CUMMINS 085-0050-003	1					
31	Y 06020 15305	Hose	CUMMINS 70225-IN	2					
	Y 06020 15304	Clamp, hose	CUMMINS CT-9440	4					

300SSCU2

Engine & Radiator Ass'y


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
32	Y 06020 15162	Hose	CUMMINS 80075	1					
	Y 06020 15305	Clamp, hose	CUMMINS CT-9412	2					
33	Y 06055 12198	Hose Joint		3					
34	Y 06020 15126	Hose	CUMMINS 80235G-L L=53"	1					
35	Y 06020 15125	Hose	CUMMINS 80235G-L L=42"	1					
36	Y 06020 15127	Hose	CUMMINS 80235G-L L=39"	1					
37	Y 06055 15073	Hose Band	HS-10	6					
38	Y 06055 11394	Valve	MV608-4	1					
39	Y 06055 12192	Hose Joint		1					
40	Y 01936 00450	Drain Hose		1					
41	Y 01936 02000	Over Flow Hose		1					
42	Y 06055 15106	Hose Band	RS-8006	2					
43	Y 06022 11320	Coolant Level Switch	CASCO 1035100001-001	1					
44	Y 06033 06799	Plug		1					

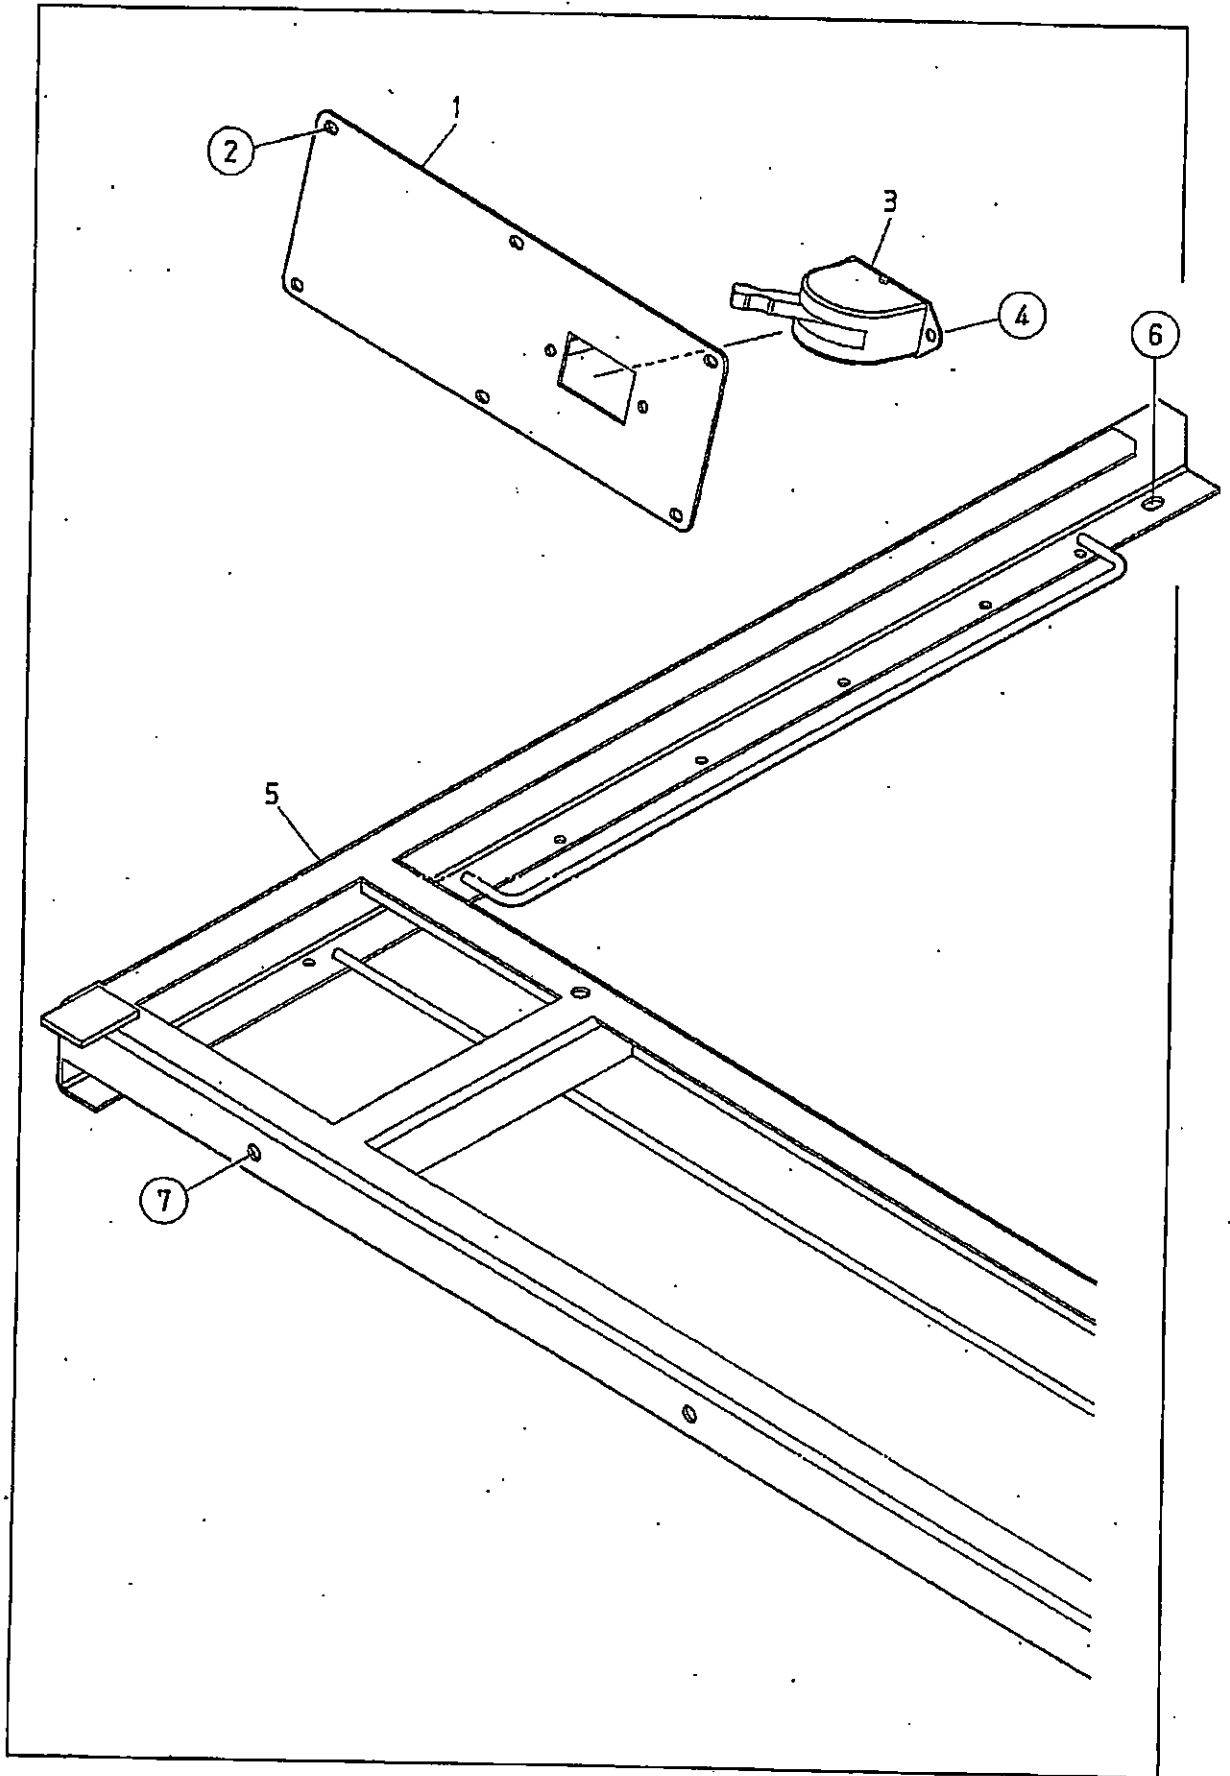 

300SSCU2

Engine Operating Panel Ass'y

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 53511 00204	Operating Panel		1					
2	Y 00169 06016	Hex. Head Bolt		6					
3	Y 06021 01000	Battery Switch	98273-00090	1					
4	Y 00210 08080	Machine Screw		2					
	Y 02070 08000	Hex. Nut		2					
	Y 00400 08000	Spring Washer		2					
	Y 00412 08000	Plain Washer		2					
5	M 54830 00203	Set Frame		1					
6	Y 00169 10030	Hex. Head Bolt		2					
	Y 02070 10000	Hex. Nut		2					
7	Y 00169 10030	Hex. Head Bolt		3					

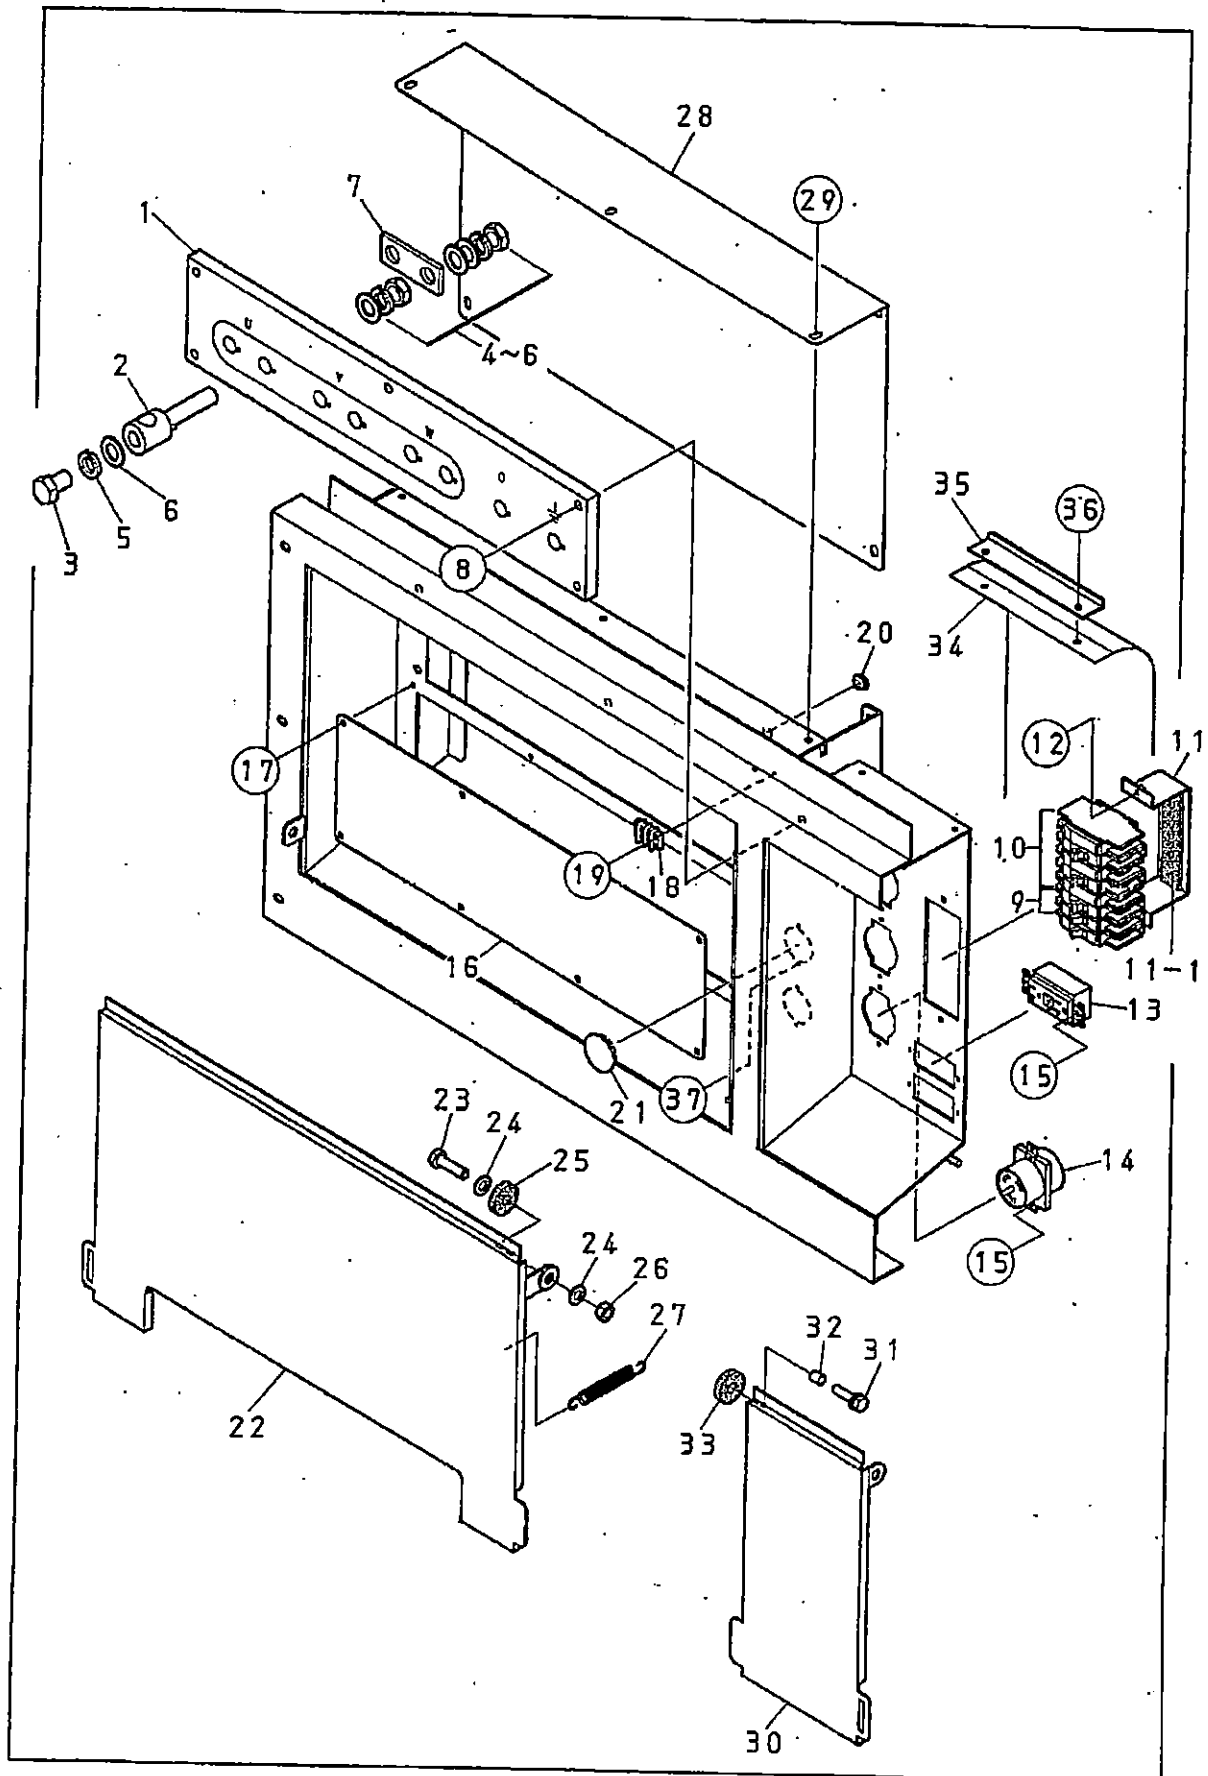 


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 52307 00003	Set Board, output terminal		1					
2	M 92201 00914	Output Terminal		8					
3	M 92201 01004	Hex. Head Bolt		8					
4	Y 00393 20000	Hex. Nut		16					
5	Y 00400 20000	Spring Washer		24					
6	Y 00414 20000	Plain Washer		32					
7	M 52332 00004	Terminal Plate		3					
8	Y 00171 10050	Hex. Head Bolt		5					
9	Y 06018 08803	Circuit Breaker	QOU120B 20A	2				CB2, 3	
10	Y 06018 08804	Circuit Breaker	QOU250B 50A	3				CB4~6	
11	M 42606 00104	Bracket, circuit breaker		1					
11- 1	Y 02221 00150	Rubber Cushion		1					
12	Y 00169 06020	Hex. Head Bolt		2					
13	Y 06018 14013	Receptacle	GF-20LA	2				CON1, 2	
14	Y 06018 14014	Receptacle	GS-6369L	3				CON3~5	
15	Y 00271 04016	Machine Screw		10					
	Y 02070 04000	Hex. Nut		10					
16	M 42364 00204	Cover		1					
17	Y 00169 06016	Hex. Head Bolt		8					
18	Y 06018 15194	Terminal Block	601-GP-02	1					
19	Y 00271 04016	Machine Screw		2					
20	Y 06018 50275	Grommet	SG-14A	1					
21	Y 06033 06775	Blind Plug	9563K95	2					

300SSCU2

Output Terminal Ass'y


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
22	M 52361 00003	Cover, output terminal		1					
23	Y 00101 12045	Hex. Head Bolt		2					
24	Y 00412 12000	Plain Washer		4					
25	M 93102 00004	Stay Rubber		2					
26	Y 00300 12000	Hex. Nut		2					
27	M 92100 00204	Spring		2					
28	M 52361 00204	Cover		1					
29	Y 00169 08020	Hex. Head Bolt		7					
30	M 52361 00104	Cover, output terminal		1					
31	Y 00171 10040	Hex. Head Bolt		2					
32	M 91160 00004	Collar		2					
33	M 93102 00004	Stay Rubber		1					
34	M 42361 00604	Cover		1					
35	M 42364 00304	Bracket		1					
36	Y 00169 06016	Hex. Head Bolt		2					
37	Y 00271 04016	Machine Screw		4					

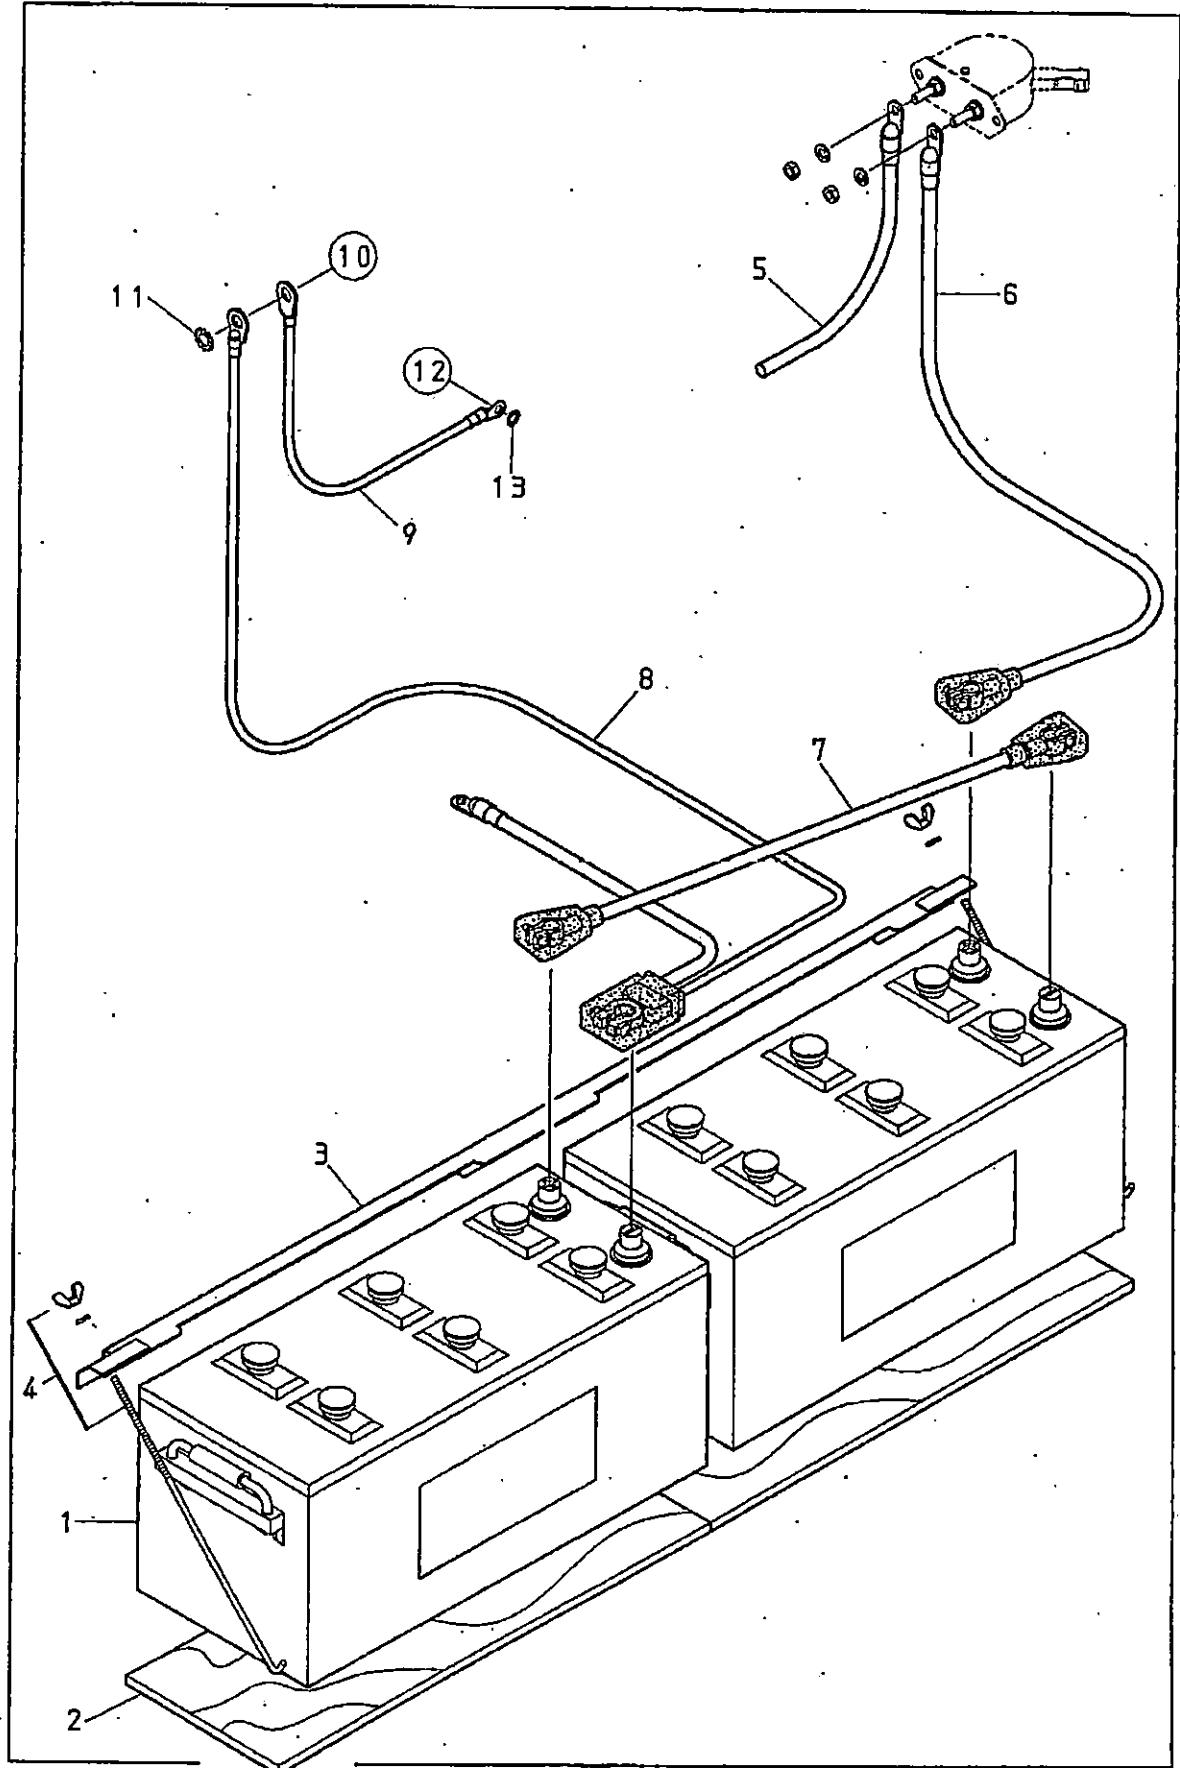 

300SSCU2


Battery Ass'y

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 06022 20196	Battery	4D-2	2					
2	M 93105 00404	Battery Sheet		2					
3	M 91040 00004	Battery Band		1					
4	Y 06022 20921	Battery Bolt Set	BHB-12J, 1/4-L12	2					
5	M 53469 00604	Battery Cable		1					
6	M 53469 00704	Battery Cable		1					
7	M 43464 00314	Battery Cable		1					
8	M 53469 00804	Battery Cable		1					
9	M 53462 00304	Earth Cable		1					
10	Y 00171 16030	Hex. Head Bolt		1					
11	Y 00405 16000	Toothed Washer		1					
12	Y 00171 12025	Hex. Head Bolt		1					
13	Y 00405 12000	Toothed Washer		1					

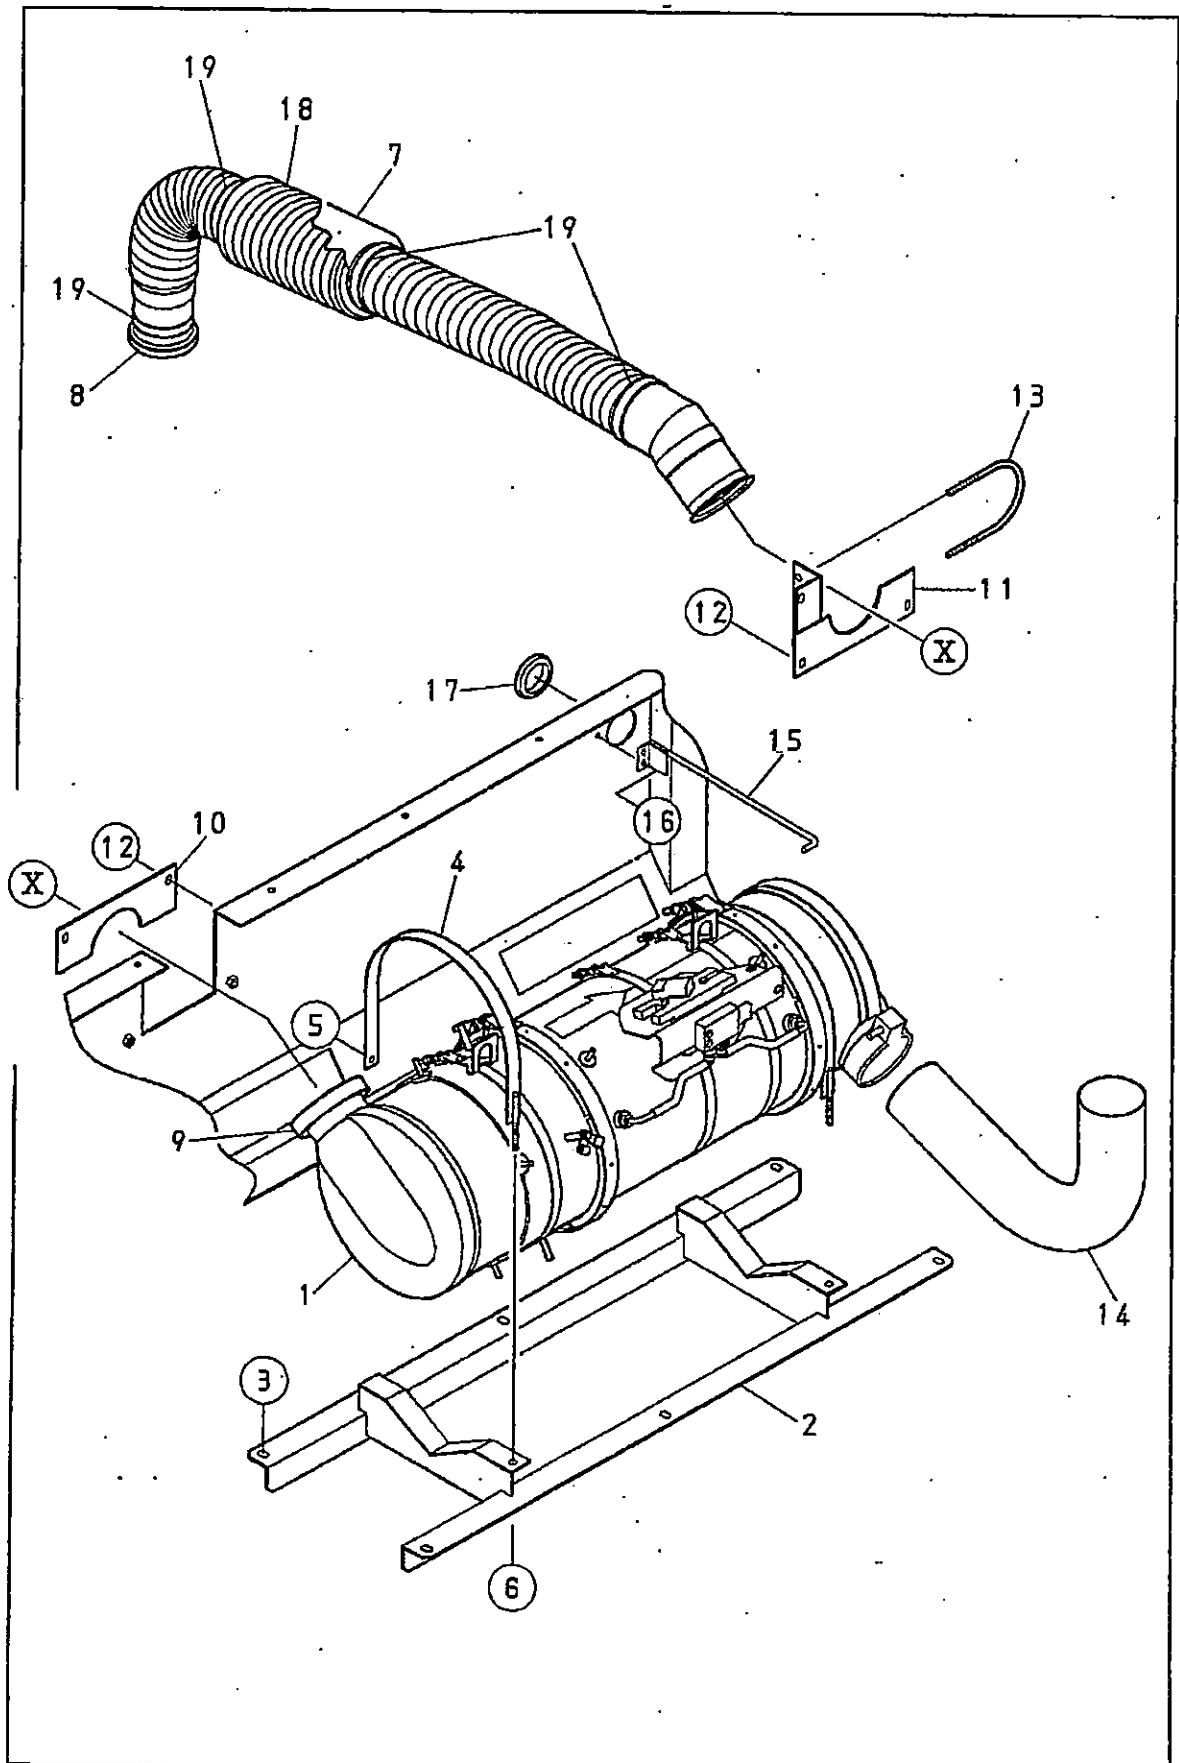 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 06023 00241	Device, aftertreatment	CUMMINS A034V423	1					
2	M 53304 00003	Bracket		1					
3	Y 00169 10025	Hex. Head Bolt		6					
4	M 53304 00104	Band		2					
5	Y 00169 08020	Hex. Head Bolt		2					
6	Y 02073 08000	Super Lock Nut		2					
7	M 53330 00203	Exhaust Pipe		1					
8	Y 06023 25039	V-Band Clamp	CUMMINS 3087979	1					
	Y 06023 20129	Gasket	CUMMINS 4966447	1					
9	Y 06023 25038	V-Band Clamp	CUMMINS A029T534	1					
	Y 06023 20128	Gasket	CUMMINS Q312526	1					
10	M 53303 00204	Exhaust Pipe Cover		1					
11	M 53303 00304	Exhaust Pipe Bracket		1					
12	Y 00169 08020	Hex. Head Bolt		4					
13	Y 06023 26062	U Bolt Set	89548K	1					
14	M 43331 00004	Exhaust Tail Pipe		1					
15	M 53573 00204	Harness Clamp		1					
16	Y 00192 06020	Hex. Head Bolt		2					
17	Y 06018 51736	Grommet	C-30-SG-60A	1					
18	Y 06023 11140	Exhaust Insulating Wrap		1					
19	Y 06055 15225	Hose Band		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 53601 00203	Fuel Tank		1					
1- 1	Y 06055 05070	Cap, fuel tank		(1)					
2	Y 06055 01069	Fuel Sensor Unit		(1)					
3	Y 06055 16090	Gasket		(1)					
4	Y 00271 04016	Machine Screw		(5)					
5	M 53642 00004	Tank Band		2					
6	M 93105 00104	Supporter Sheet		4					
7	Y 00169 08020	Hex. Head Bolt		2					
8	Y 02073 08000	Super Lock Nut		2					
9	Y 06055 15198	Hose Band	5008	4					
10	M 92000 00003	Drain Joint		1					
11	M 92002 00004	Drain Bolt		1					
12	Y 01500 00018	O Ring	AP18	1					
13	Y 00169 06020	Hex. Head Bolt		2					
14	Y 01915 00270	Drain Pipe	DI:15 L=270	1					
15	Y 06055 15198	Hose Band	5008	2					
16	Y 06020 42682	Connection	CUMMINS 4601-10-10-NOW-FG	1					
17	Y 06020 42683	Connection	CUMMINS 2111-10-08-B	1					
18	Y 01915 03400	Suction Hose		1					
19	Y 01915 03700	Return Hose		1					

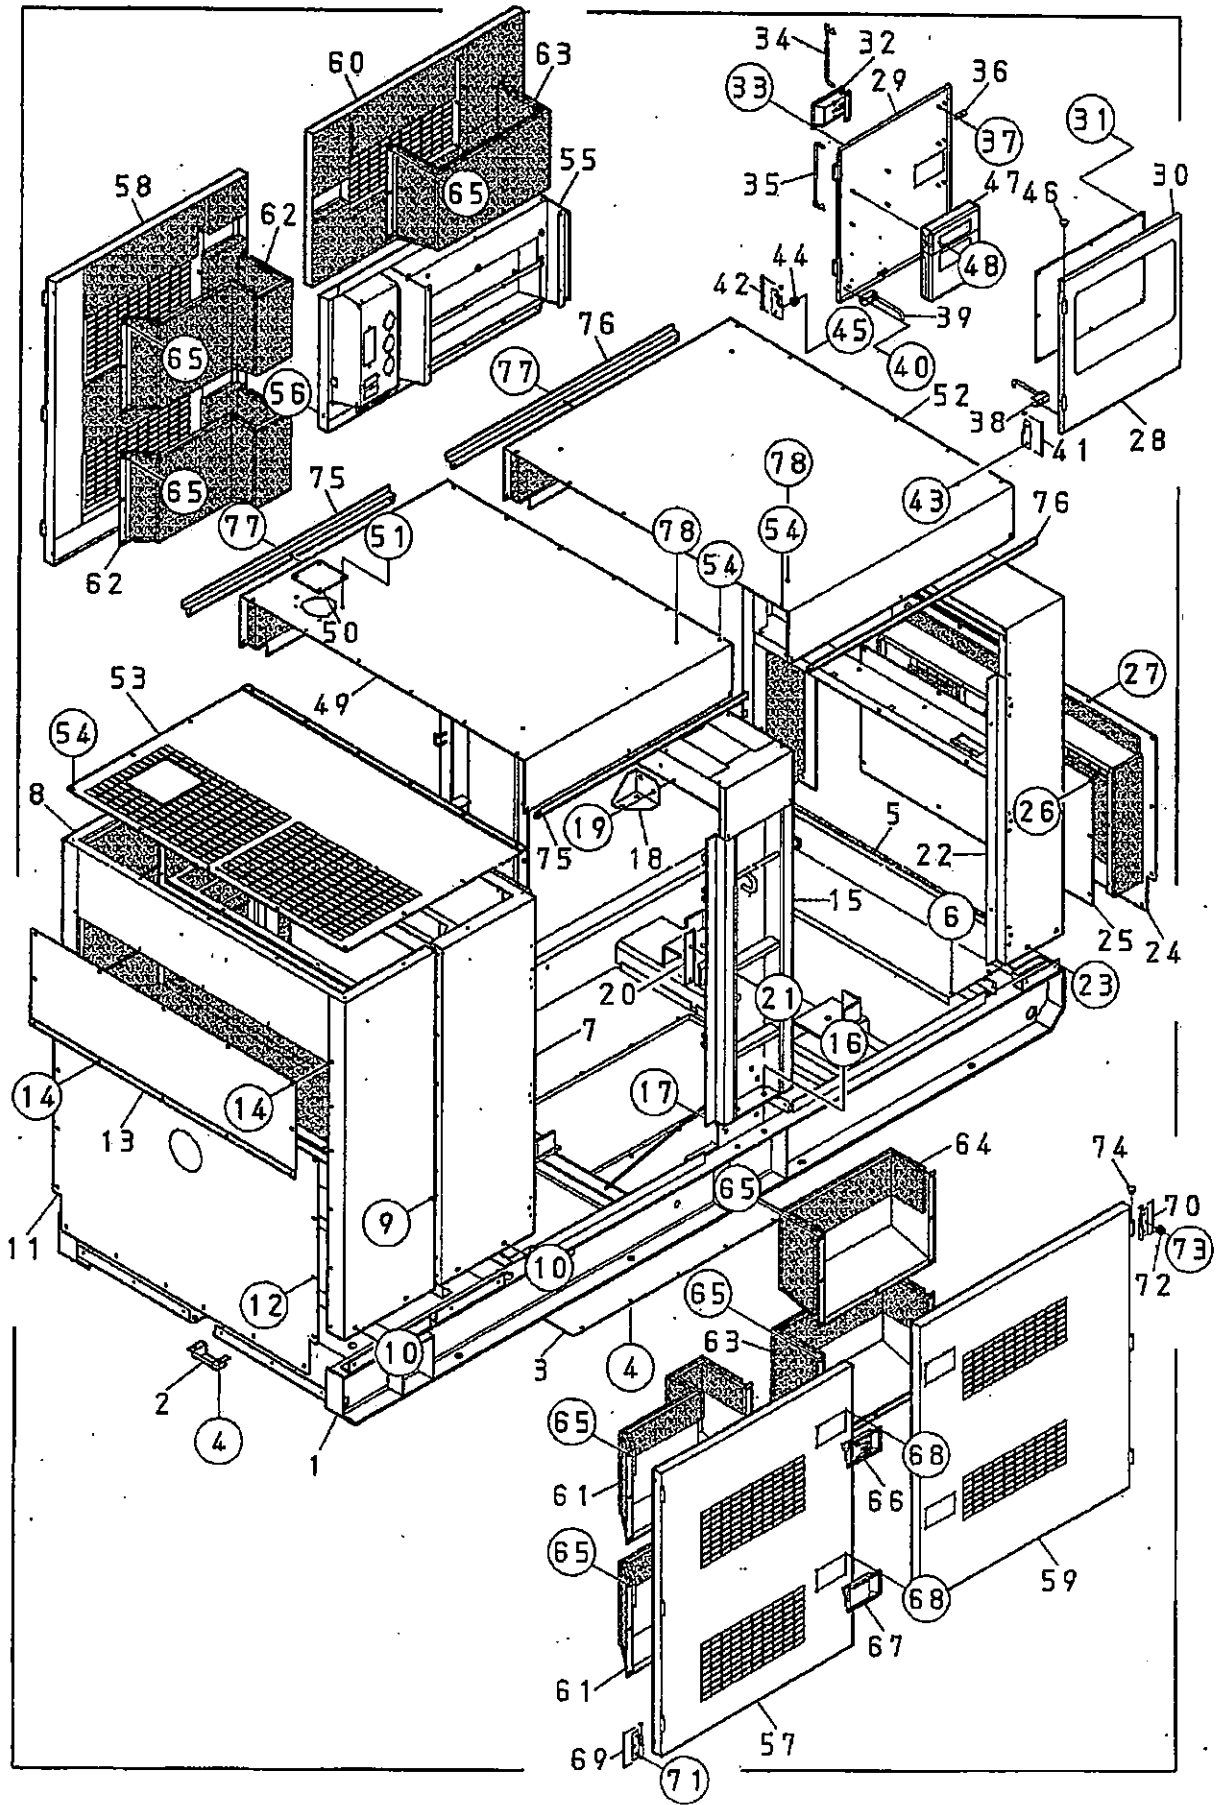 


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 54130 00302	Base		1					
2	M 14134 00004	Floor Panel		1					
3	M 54131 00204	Floor Panel		1					
4	Y 00192 08020	Hex. Head Bolt		12					
5	M 54136 00204	Duct		1					
	M 54930 00104	Acoustic Sheet		1					
6	Y 00169 08020	Hex. Head Bolt		4					
7	M 54230 00602	Front Frame		1					
	M 54931 03403	Acoustic Sheet		1					
8	M 54230 00702	Front Frame		1					
	M 54931 03403	Acoustic Sheet		1					
9	Y 00169 08020	Hex. Head Bolt		10					
10	Y 00192 10025	Hex. Head Bolt		8					
11	M 54232 00503	Cover, front frame		1					
12	Y 00192 08020	Hex. Head Bolt		12					
13	M 54232 00603	Cover, front frame		1					
	M 54941 03504	Acoustic Sheet		1					
14	Y 00192 08020	Hex. Head Bolt		12					
15	M 54330 00202	Center Frame		1					
16	Y 00101 14050	Hex. Head Bolt		4					
	Y 00300 14000	Hex. Nut		4					
	Y 00400 14000	Spring Washer		4					
	Y 00412 14000	Plain Washer		8					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
17	Y 00101 14040	Hex. Head Bolt		8					
	Y 00300 14000	Hex. Nut		8					
	Y 00400 14000	Spring Washer		8					
	Y 00412 14000	Plain Washer		16					
18	M 54334 00004	Bracket		1					
19	Y 00169 10030	Hex. Head Bolt		2					
20	M 53367 00204	Cover		1					
21	Y 00192 08020	Hex. Head Bolt		2					
22	M 54430 00302	Rear Frame		1					
	M 54933 00904	Acoustic Sheet		2					
23	Y 00192 10025	Hex. Head Bolt		4					
24	M 54433 00303	Cover, rear frame		1					
	M 54933 01504	Acoustic Sheet		1					
25	M 54433 00404	Panel		1					
	M 54933 01604	Acoustic Sheet		3					
26	Y 00169 08020	Hex. Head Bolt		12					
27	Y 00192 08020	Hex. Head Bolt		14					
28	M 54432 00203	Door, rear frame		1					
29	M 54442 00103	Door, rear frame		1					
30	M 44436 00004	Window Plate		1					
31	Y 02073 06000	Super Lock Nut		6					
	Y 00412 06000	Plain Washer		6					
32	M 91130 00202	Door Handle		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
33	Y 00218 06016	Machine Screw		4					
	Y 00300 06000	Hex. Nut		4					
34	M 91143 00004	Door Rod		1					
35	M 91143 00104	Door Rod		1					
36	M 91133 00004	Stay		4					
37	Y 02070 06000	Hex. Nut		8					
38	M 91134 00104	Stopper, door		1					
39	M 91134 00204	Stopper, door		1					
40	Y 02070 06000	Hex. Nut		4					
41	M 91101 00204	Hinge		2					
	M 91161 00004	Washer		2					
42	M 91101 00304	Hinge		2					
	M 91161 00004	Washer		2					
43	Y 00192 08020	Hex. Head Bolt		6					
44	Y 06018 50097	Stopper		2					
45	Y 00272 08025	Machine Screw		2					
46	M 93100 00004	Cap		4					
47	Y 06008 00320	Manual-Pak	9000-07	1					
48	Y 02070 06000	Hex. Nut		4					
49	M 54631 00202	Roof Panel		1					
	M 54935 03104	Acoustic Sheet		1					
50	M 33106 00004	Cover		1					
51	Y 00192 08020	Hex. Head Bolt		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
52	M 54632 00202	Roof Panel		1					
	M 54935 03204	Acoustic Sheet		1					
53	M 54232 00703	Cover, front frame		1					
54	Y 00192 08020	Hex. Head Bolt		41					
55	M 54532 00002	Splasher Panel		1					
56	Y 00191 08065	Hex. Head Bolt		6					
	Y 00423 08000	Spring Washer		6					
	Y 00424 08000	Plain Washer		6					
57	M 54530 01103	Side Panel		1					
	M 54934 14304	Acoustic Sheet		1					
58	M 54530 01203	Side Panel		1					
	M 54934 14404	Acoustic Sheet		1					
59	M 54530 00803	Side Panel		1					
	M 54934 09304	Acoustic Sheet		1					
60	M 54530 00903	Side Panel		1					
	M 54934 09404	Acoustic Sheet		1					
61	M 54533 01004	Duct		2					
	M 54934 14104	Acoustic Sheet		2					
62	M 54533 01104	Duct		2					
	M 54934 14204	Acoustic Sheet		2					
63	M 54533 00904	Duct		2					
	M 54934 09504	Acoustic Sheet		2					
64	M 54533 00204	Duct		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	M 54934 00404	Acoustic Sheet		1					
65	Y 02070 08000	Hex. Nut		49					
66	M 91130 00002	Door Handle		4					
67	M 91130 00102	Door Handle		3					
68	Y 00218 06016	Machine Screw		28					
	Y 00300 06000	Hex. Nut		28					
69	M 91101 00804	Hinge		5					
	M 91161 00004	Washer		5					
70	M 91101 00904	Hinge		6					
	M 91161 00004	Washer		6					
71	Y 00192 08020	Hex. Head Bolt		25					
72	Y 06018 50097	Stopper		8					
73	Y 00272 08025	Machine Screw		8					
74	M 93100 00004	Cap		11					
75	M 54635 00004	Gutter		2					
76	M 54635 00104	Gutter		2					
77	Y 00192 08020	Hex. Head Bolt		4					
78	Y 00192 10025	Hex. Head Bolt		8					

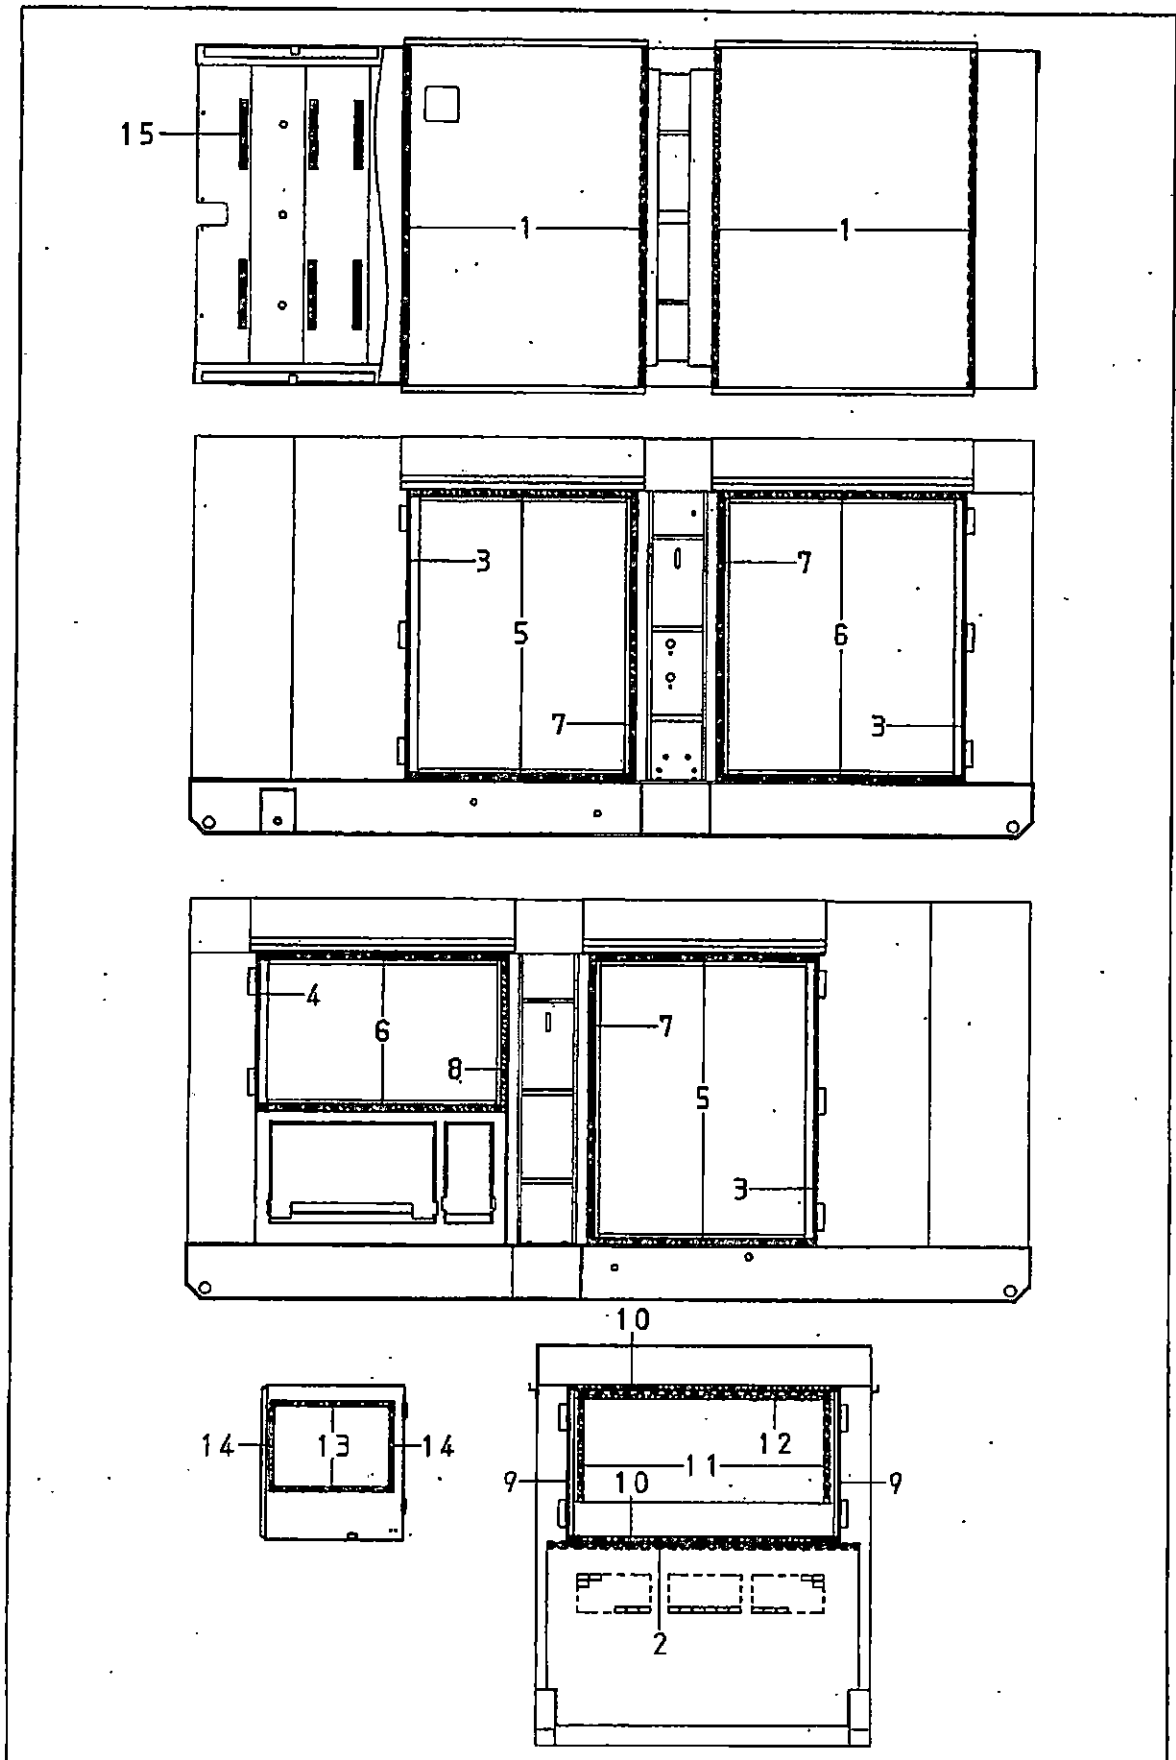 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	Y 02292 01500	Seal Rubber		4					
2	Y 02292 01400	Seal Rubber		1					
3	Y 02289 01310	Seal Rubber		3					
4	Y 02289 00710	Seal Rubber		1					
5	Y 02289 01015	Seal Rubber		4					
6	Y 02289 01120	Seal Rubber		4					
7	Y 02289 01250	Seal Rubber		3					
8	Y 02289 00650	Seal Rubber		1					
9	Y 02294 00705	Seal Rubber		2					
10	Y 02288 01210	Seal Rubber		2					
11	Y 02292 00470	Seal Rubber		2					
12	Y 02292 01130	Seal Rubber		1					
13	Y 02281 00560	Seal Rubber		2					
14	Y 02281 00370	Seal Rubber		2					
15	Y 02221 00300	Rubber Sheet		6					

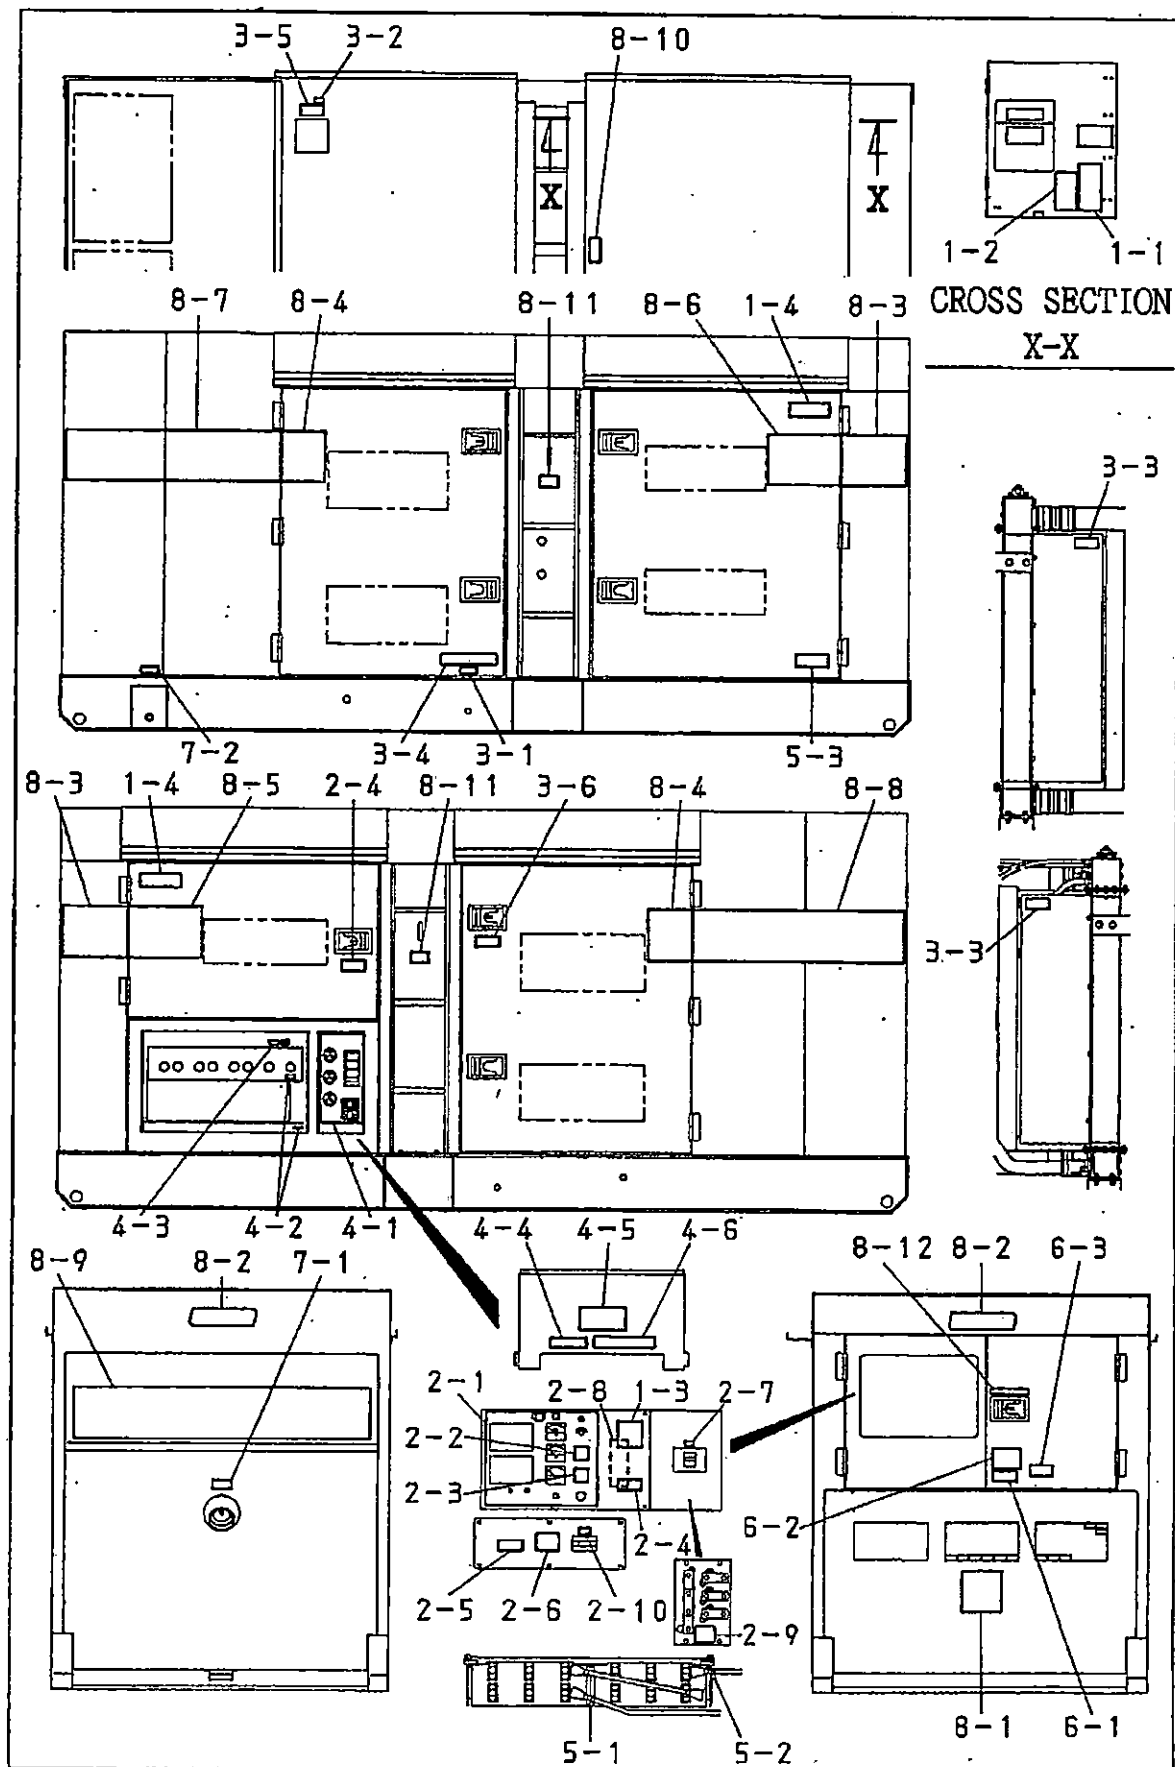 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1-1	M 45500 00603	Decal:Operating Procedures	M4500 0060	1					
1-2	M 45500 00713	Decal:DPF Regeneration Procedures	M4500 0071	1					
1-3	M 95201 00304	Decal:Safety Instructions	M9201 0030	1					
1-4	M 95201 00603	Decal:Caution	M9201 0060	2					
		Control Panel & Box Group							
2-1	M 55500 00702	Decal: Control Panel	M5500 0070	1					
2-2	M 95200 00104	Plate:Ammeter Change-Over Sw.	M9200 0010	1					
2-3	M 95200 00204	Plate:Voltmeter Change-Over Sw.	M9200 0020	1					
2-4	M 95201 00004	Decal:Warning:Electrical Shock Hazard	M9201 0000	2					
2-5	M 95201 00704	Decal:Warning:Arc Flash	M9201 0070	1					
2-6	M 95202 00404	Decal:Over Current Relay	M9202 0040	1					
2-7	M 95220 00504	Decal:Circuit Breaker	M9220 0050	1					
2-8	M 95202 00303	Decal:Setting For Output Voltage	M9202 0030	1					
2-9	M 95202 00504	Decal:Setting For Output Voltage(S)	M9202 0050	1					
2-10	M 95200 02204	Decal:Battery Switch	M9200 0220	1					
		Engine & Radiator Group							
3-1	M 95000 00004	Decal:Oil Drain Plug	M9000 0000	1					
3-2	M 95001 00004	Decal:Water	M9001 0000	1					
3-3	M 95030 00004	Decal:Warning:Rotating Part	M9030 0000	2					
3-4	M 95030 00103	Decal:Water - Oil Check	M9030 0010	1					
3-5	M 95031 00004	Decal:Warning:Hot Coolant	M9031 0000	1					
3-6	M 95101 00004	Decal:Caution:Hot Parts	M9101 0000	1					
		Output Terminal Group							

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
4-1	M 45500 00103	Decal:Auxiliary Outputs	M4500 0010	1					
4-2	M 95200 00004	Decal:Ground	M9200 0000	2					
4-3	M 95200 00504	Decal:Start Contact	M9200 0050	1					
4-4	M 95200 00704	Decal:3-Phase Output Terminal	M9200 0070	1					
4-5	M 95201 00404	Decal:Danger:High Voltage	M9201 0040	1					
4-6	M 95201 00503	Decal:Warning	M9201 0050	1					
		Battery Group							
5-1	M 95003 00004	Decal:-	M9003 0000	1					
5-2	M 95003 00104	Decal:+	M9003 0010	1					
5-3	M 95101 00403	Decal:Caution	M9101 0040	1					
		Muffler Group							
6-1	M 95032 00004	Decal:Warning:Engine Exhaust	M9032 0000	1					
6-2	M 95032 00104	Decal:Danger:Exhaust	M9032 0010	1					
6-3	M 95042 00004	Decal:Warning:Start Fires	M9042 0000	1					
		Fuel Tank Group							
7-1	M 95015 00004	Decal:Diesel Fuel	M9015 0000	1					
7-2	M 95005 00104	Decal:Fuel Drain Plug	M9005 0010	1					
		Bonnet Group							
8-1	M 95102 00002	Decal:MQ	M9102 0000	1					
8-2	Y 06005 00090	Emblem		2					
	Y 00211 06016	Machine Screw		4					
8-3	M 55601 01004	Stripe	M5601 0100	2					
8-4	M 55601 01604	Stripe	M5601 0160	2					

300SSCU2

Name Plate Ass'y

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
8-5	M 55601 01704	Stripe	M5601 0170	1					
8-6	M 55601 01804	Stripe	M5601 0180	1					
8-7	M 55601 01903	Stripe	M5601 0190	1					
8-8	M 55601 02003	Stripe	M5601 0200	1					
8-9	M 55601 02103	Stripe	M5601 0210	1					
8-10	M 55500 00004	Decal:Caution:Lifting Cap	M5500 0000	1					
8-11	M 95120 00004	Decal:Support Hook	M9120 0000	2					
8-12	M 95100 00104	Decal:Document Box Located	M9100 0010	1					

MANUFACTURED FOR MULTQUIP INC.
by
DENYO MANUFACTURING CORP.



MULTIQUIP INC.
Post Office Box 6254 • Carson, Ca. 90749
18910 Wilmington Av. • Carson, Ca. 90746
Phone. (310) 537 3700 • (800) 421 1244
Fax. (310) 632 2656