

4HK1X



PARTS LIST NO. M38703 01214A

Oil - 1132402322

Outer Air - 0602046684

Inner Air - P777639

Main Fuel - 8981430410

Prc Fuel - 8980742880

Fuel Pump Elem - 8980714010

DCA - 125SSIU

Turbo
8981824910
Gaskets
8970397771 } ea
8973744120 }

PARTS LIST



Denyo Manufacturing Corp.

SERIAL No. 7510251~



HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine Generator Model DCA-125SSIU.
2. When placing orders, specify the following details:
 - 1) Model Number and Serial Number.
 - 2) Parts Number and Parts Name.
 - 3) Quantity required.
3. The parts listed with a serial number are new parts.
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration or the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:


All	:Some parts differ from unit to unit	p.	:Page
Ass'y	:Assembly	Re.	:Rear
Fr.	:Front	R.H.	:Right
L.H.	:Left	STD	:Standard
No.	:Number	→	:Indication of the page where the modified or additional parts are listed.
O.P.	:Optional Parts		

Each symbol [A] [B] [C] listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol [A] [B] [C] is listed on the first top place of each assembly group.
Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.

8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "ISUZU Motors Ltd. 4HK1X Diesel Engine Parts Catalogue".

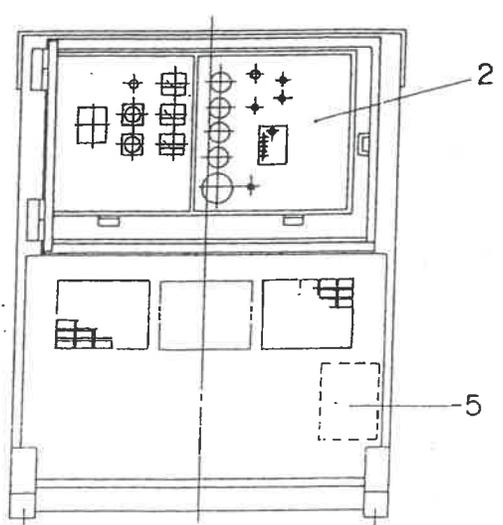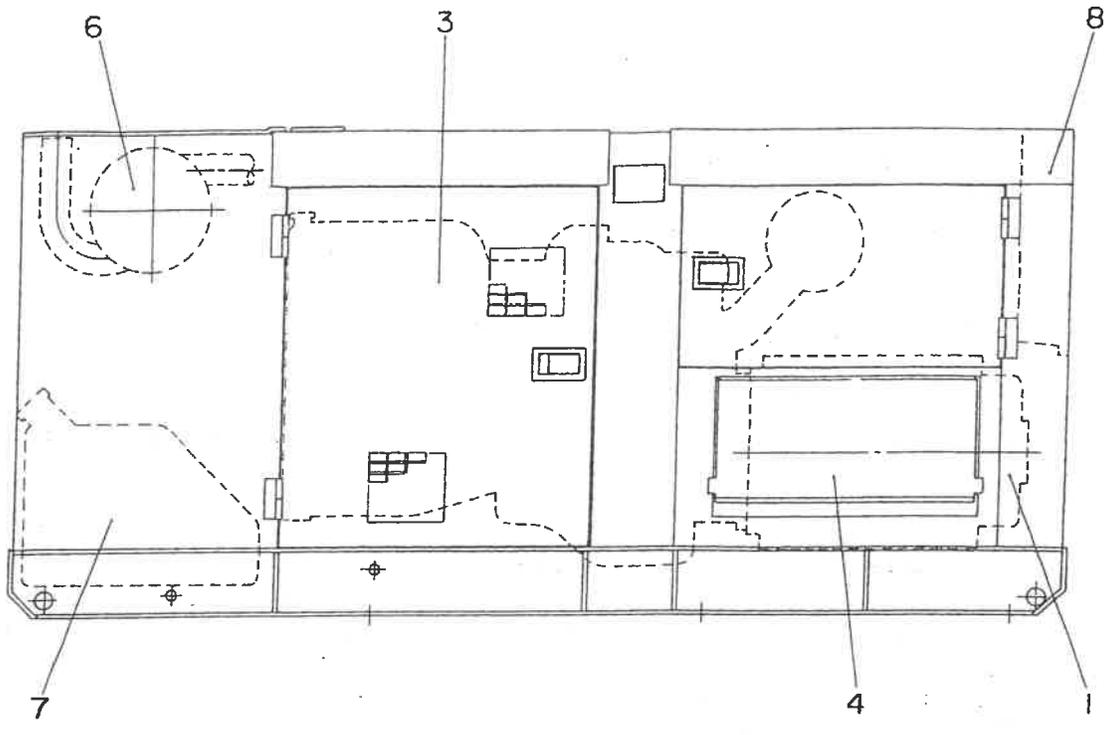



Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1		Generator Ass'y	Refer to p. 2-1						
2		Control Box Ass'y	Refer to p. 3-1					7510001~ 7510365	
		Control Box Ass'y	Refer to p. 3-1-1					7510366~	
3		Engine & Radiator Ass'y	Refer to p. 4-1					7510001~ 7510285	
		Engine & Radiator Ass'y	Refer to p. 4-1-1					7510286~	
4		Output Terminal Ass'y	Refer to p. 5-1					7510001~ 7510365	
		Output Terminal Ass'y	Refer to p. 5-1-1					7510366~	
5		Battery Ass'y	Refer to p. 6-1						
6		Muffler Ass'y	Refer to p. 7-1						
7		Fuel Tank Ass'y	Refer to p. 8-1						
8		Bonnet Ass'y (Part 1)	Refer to p. 9-1						
		Bonnet Ass'y (Part 2)	Refer to p. 10-1						
		Name Plate Ass'y	Refer to p. 11-1					7510001~ 7510250	
		Name Plate Ass'y	Refer to p. 11-1-1					7510251~ 7510365	
		Name Plate Ass'y	Refer to p. 11-1-2					7510366~	

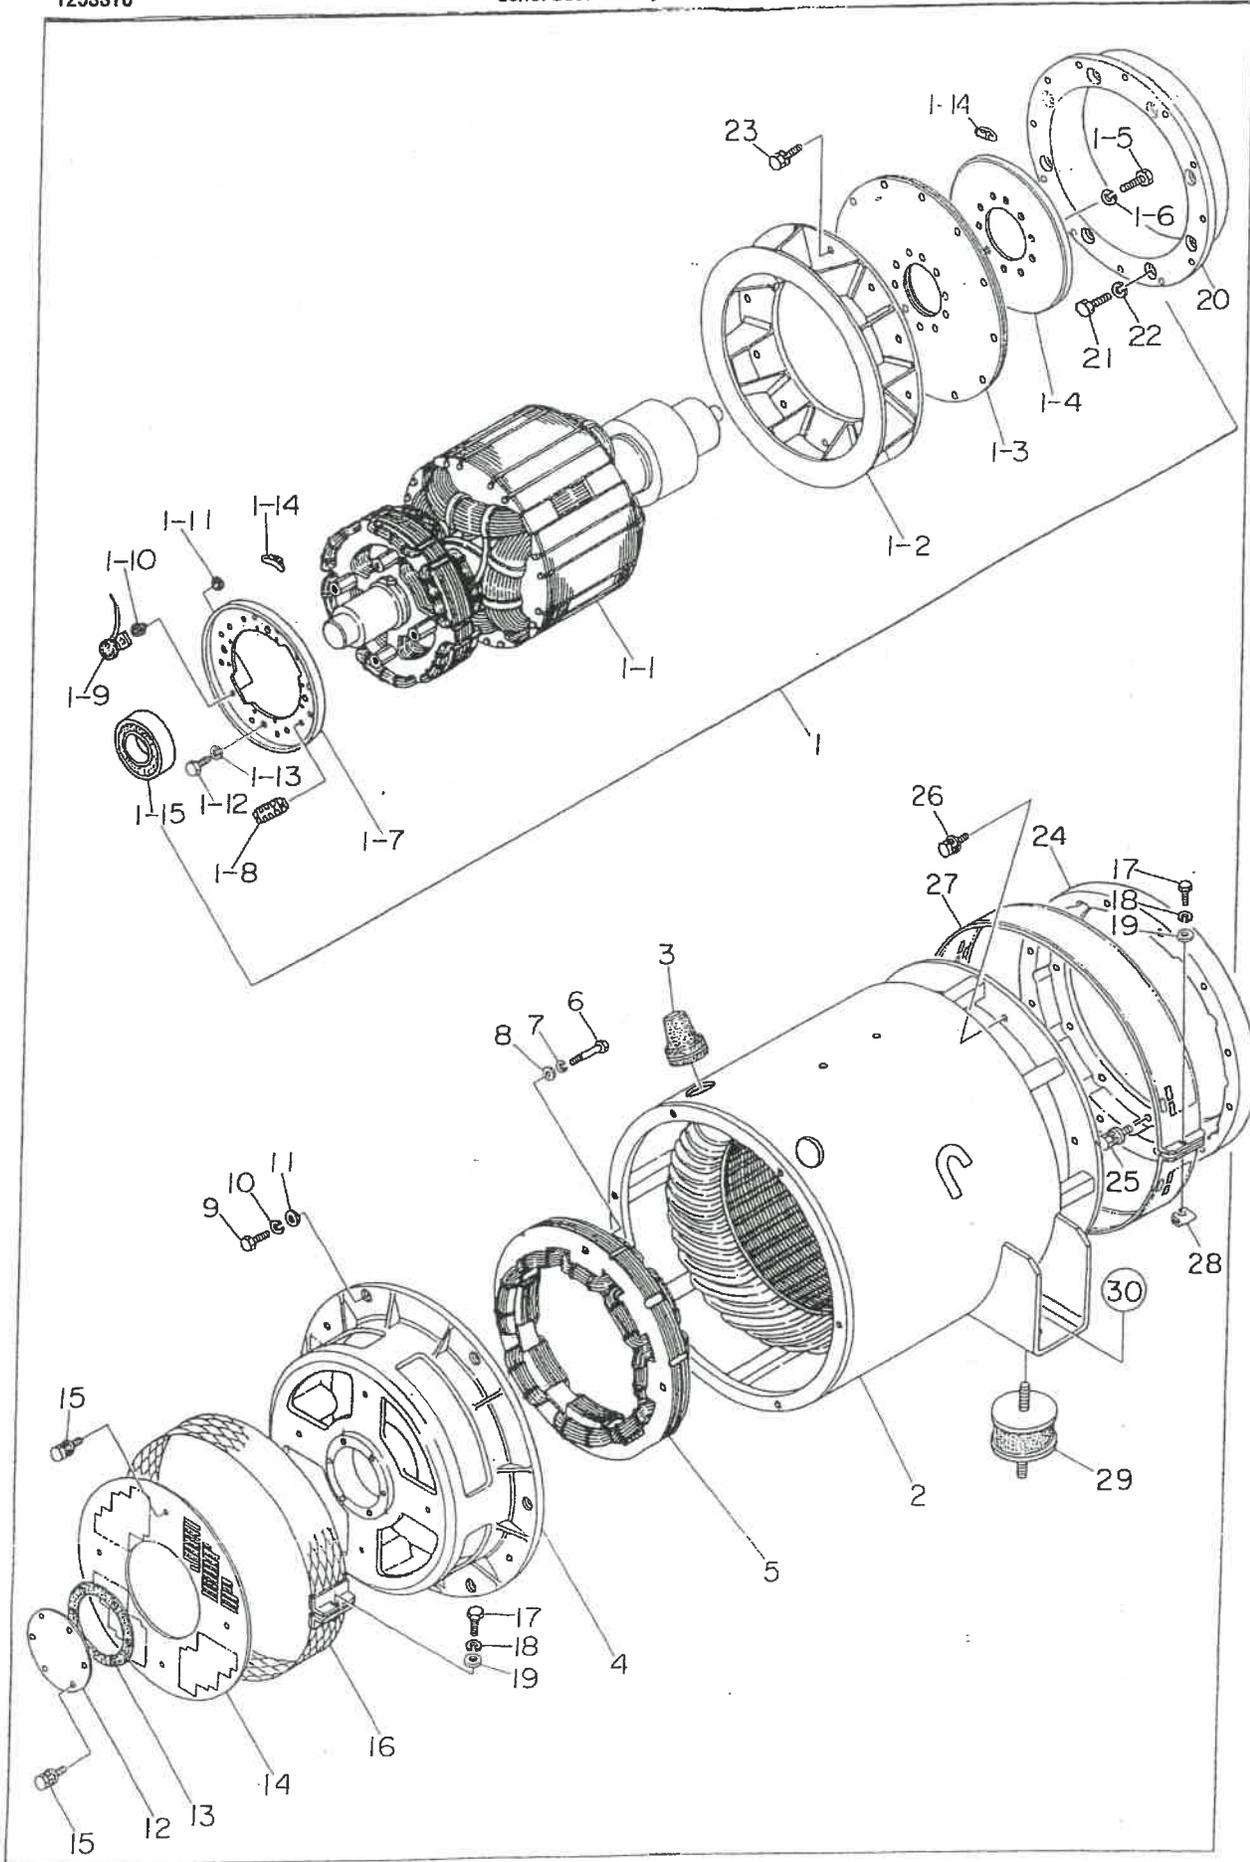

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	C 01100 01002	Rotor Ass'y		1					
* 1- 1		Field Ass'y		(1)					
1- 2	81310 70013	Fan		(1)					
1- 3	81316 11014	Coupling Disk		(8)					
1- 4	81310 15003	Balancing Plate Please purchase a set of 1-14 at the same time.		(1)					
1- 5	00121 12035	Hex. Head Bolt	S=30	(10)					
1- 6	00426 12000	Spring Washer		(10)					
1- 7	81010 26013	Set Plate, rectifier Please purchase a set of 1-14 at the same time.		(1)					
1- 8	06018 21349	Rectifier	PT 3610	(2)				Re	
1- 9	06018 22601	Surge Absorber	ERZ-M14JK621A	(1)					
1-10	80010 20004	Insulator Washer		(1)					
1-11	80010 20504	Insulator Washer		(1)					
1-12	00101 10020	Hex. Head Bolt		(4)					
1-13	00400 10000	Spring Washer		(4)					
1-14	06010 00209	Balancing Weight Kit		(1)					
1-15	00719 06312	Bearing	6312 DDU C3	(1)					
2	C 01300 00503	Startor Ass'y	C01340 00804	1					
3	08450 41804	Grommet		2					
4	81313 15202	End Bracket		1					
5	81013 50013	Field Ass'y, exciter		1					
6	00121 10060	Hex. Head Bolt	S=26	4					
7	00426 10000	Spring Washer		4					
8	00412 10000	Plain Washer		4					
9	00101 12035	Hex. Head Bolt		6					
10	00400 12000	Spring Washer		6					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
11	00412 12000	Plain Washer		6					
12	81313 10104	Cover, bearing		1					
13	81313 12204	Gasket, bearing		1					
14	81313 31003	Cover, end bracket		1					
15	00171 06012	Hex. Head Bolt		10					
16	81013 33003	Cover, end bracket		1					
17	00101 06030	Hex. Head Bolt		2					
18	00400 06000	Spring Washer		2					
19	00412 06000	Plain Washer		2					
20	M 31634 00503	Coupling Ring		1					
21	00103 10075	Hex. Head Bolt		8					
22	00425 10000	Spring Washer		8					
23	00128 10030	Hex. Head Bolt		12					
24	M 31636 00003	Coupling Adapter		1					
25	00128 10030	Hex. Head Bolt		12					
26	00128 10030	Hex. Head Bolt		12					
27	81313 32014	Cover, fan		1					
28	06008 15000	Nut	USN-6001	1					
29	06050 00063	Rubber Suspension	KA-120SS	2					
30	00300 16000	Hex. Nut		2					
	00400 16000	Spring Washer		2					

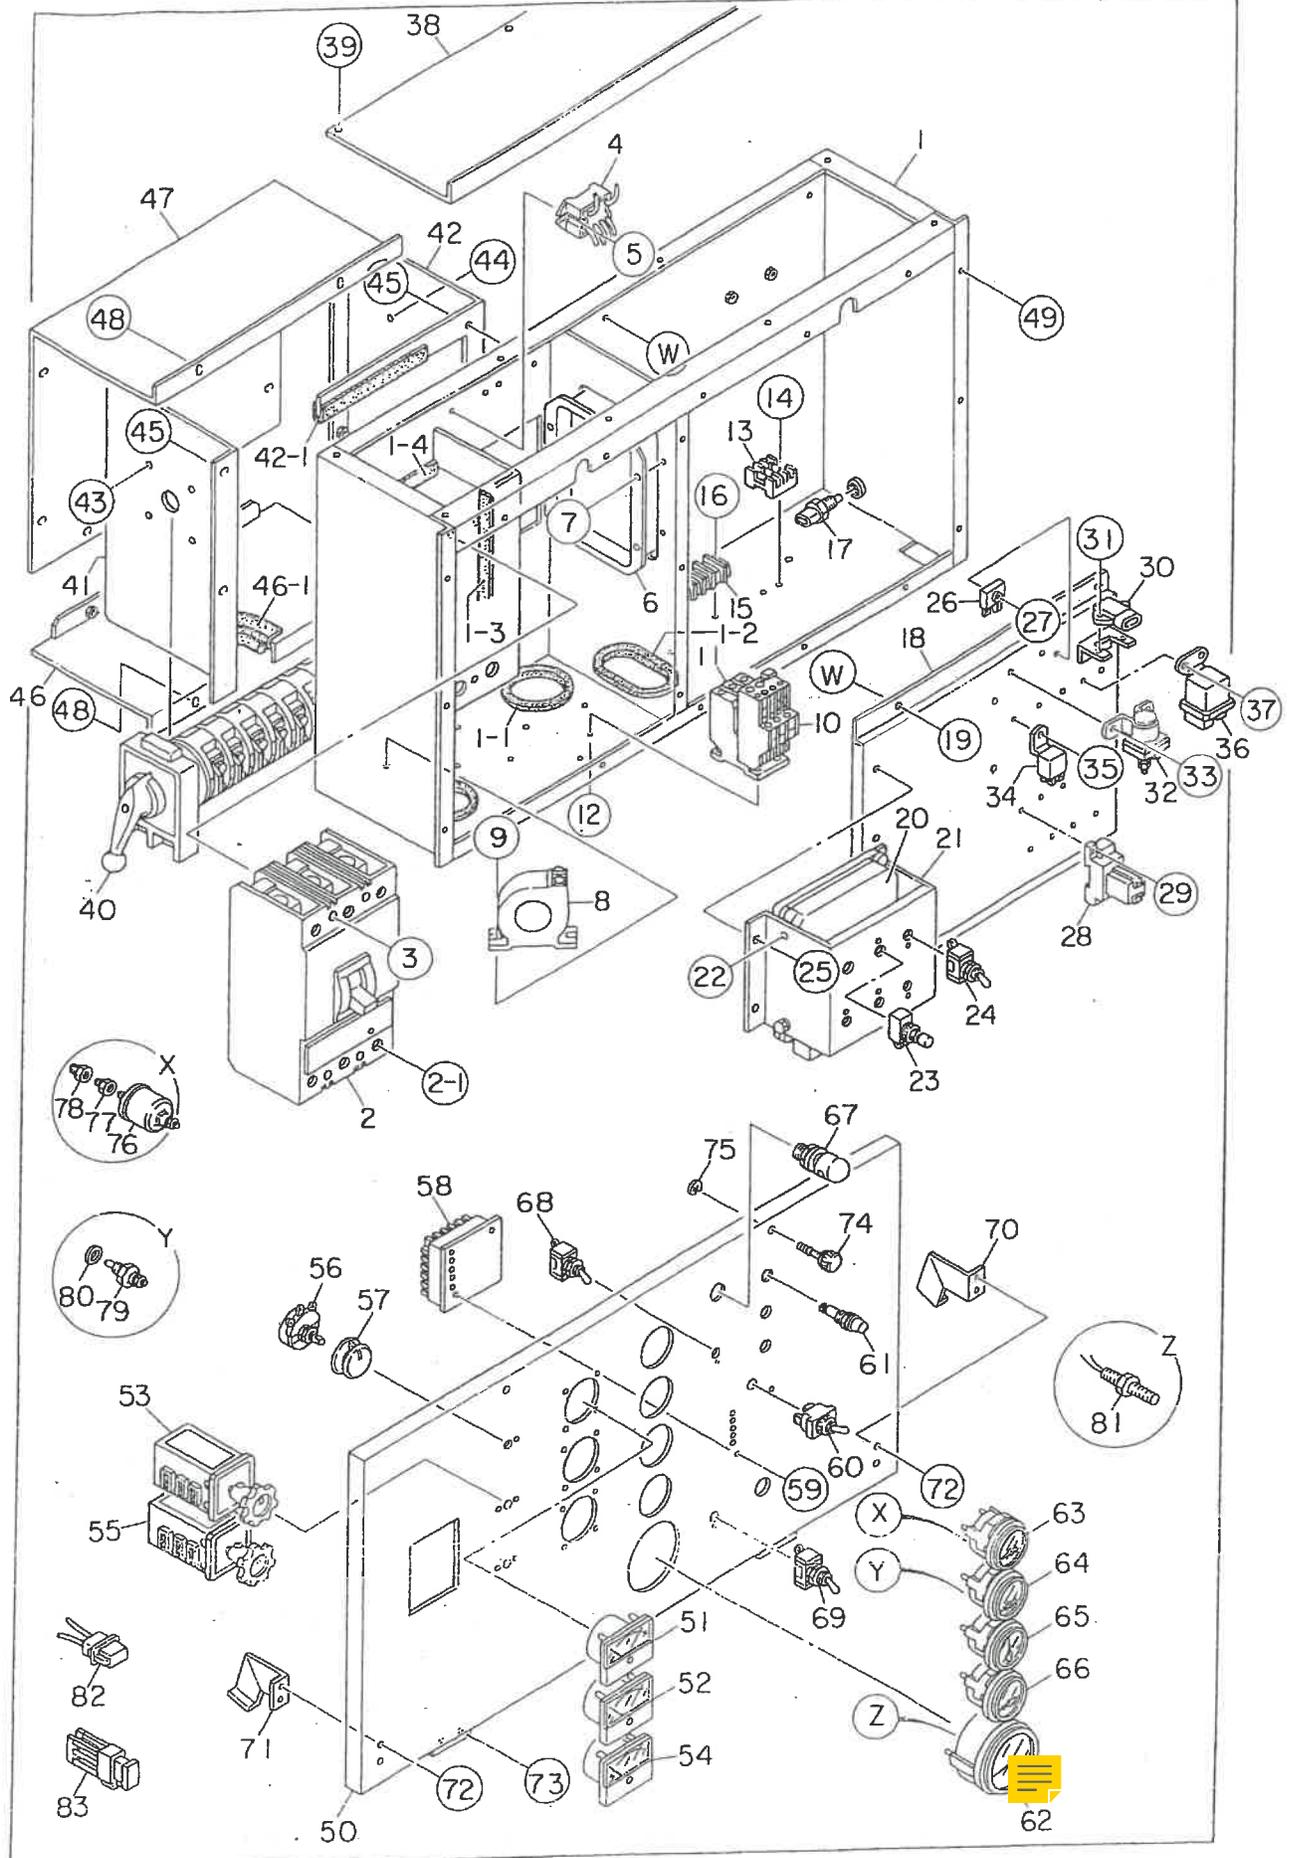

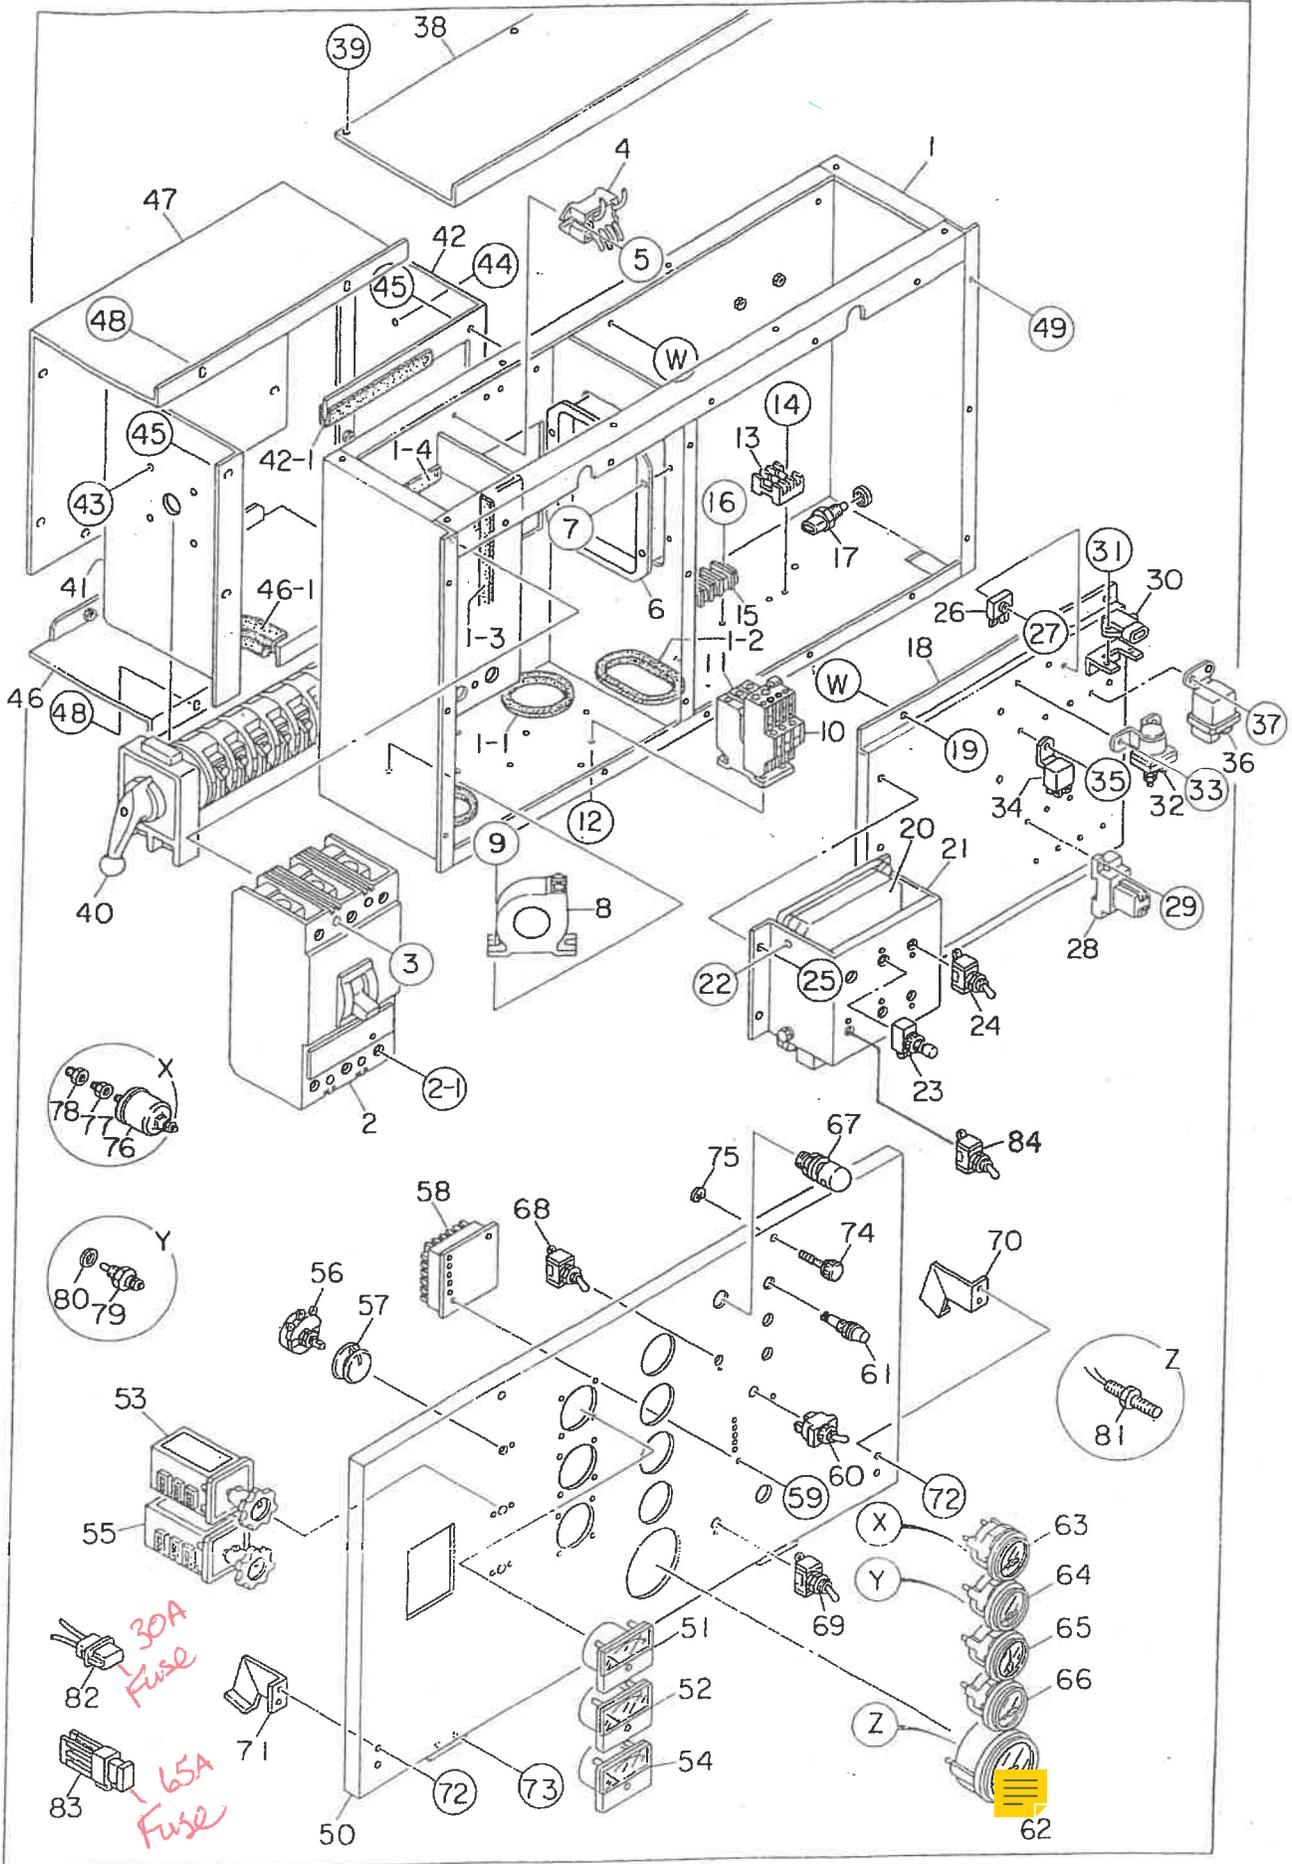



Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	M 32467 02804	Wire Harness, generator		1					
	M 32572 01702	Wire Harness, engine		1				7510001~ 7510365	
	M 32572 01712	Wire Harness, engine		1				7510366~	
	M 33572 01802	Wire Harness, controller		1					
1	M 32130 01702	Control Box		1					
1- 1	03300 00210	Edging		2					
1- 2	03300 00280	Edging		1					
1- 3	03300 00180	Edging		1					
1- 4	03300 00160	Edging		2					
2	06018 08823	Circuit Breaker	LAF363001039 3P 300A	1				CB1	
2- 1	03426 04120	Hex. Socket Head Cap Screw		6					
3	00210 06080	Machine Screw		4					
4	06018 23863	Relay Unit	MSA9013A	2				RY1. 2	
5	00271 04016	Machine Screw		4					
6	06018 20671	Automatic Voltage Regulator	NTA-5A-2DB	1				AVR 7510001~ 7510250	
	06018 20602	Automatic Voltage Regulator	NTA-5A-2DD	1				AVR 7510251~	
7	00271 05016	Machine Screw		4					
8	06018 01124	Current Transformer	COC-3 200/5A	3				CT1~3	
9	00271 06020	Machine Screw		6					
10	06018 20847	Over Current Relay	TA25DU4. 0	1				OC	
11	06018 20848	Over Current Relay	DB25/25A	1				OC	
12	00271 04020	Machine Screw		2					
	02070 04000	Hex. Nut		2					
13	06018 02218	Holder, fuse	F-7111 3P	1					
	06018 06671	Fuse	15A	3				F4, 6, 7	
14	00271 03020	Machine Screw		2					
15	06018 15153	Terminal	603-GP-04	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
16	00271 04016	Machine Screw		2					
17	06032 10240	Sensor, inlet air temp.	ISUZU 812146-8300	1					
18	M 32605 00503	Set Panel, electric parts		1					
19	00169 06016	Hex. Head Bolt		4					
20	06022 02686	Controller	ISUZU 898071-0280	1					
21	M 32065 00604	Bracket		1					
22	00169 06016	Hex. Head Bolt		4					
23	06018 31205	Push Button Switch	SB-221	1					
24	06018 31330	Diagnostic Switch	90-0001	1					
25	00169 06016	Hex. Head Bolt		4					
26	06018 23240	Rectifier	DE45	1				Rel	
27	00271 04020	Machine Screw		1					
28	06018 27656	Relay	LY-2D DC12V	2					
	06018 23109	Base	PTF-08A	2					
	06018 24400	Clip	PYC-A1	4					
29	00271 04020	Machine Screw		4					
30	06021 30220	Sensor, barometric pressure	ISUZU 897217-7780	1					
31	00271 04016	Machine Screw		2					
32	06022 01402	Relay, starter	ISUZU 582553-0444	1					
33	00271 06016	Machine Screw		2					
34	06022 01400	Relay	ISUZU 582550-0290	3					
35	00271 05016	Machine Screw		3					
36	06022 02685	Relay, glow plug	ISUZU 897011-9490	1					
37	00271 05016	Machine Screw		2					
38	M 32135 00604	Control Box Cover		1					
39	00169 06016	Hex. Head Bolt		8					

Key No.	Parts No.	Parts Name	Remarks	Qty				Symbol	Serial No.
				All	A	B	C		
40	M 32701 00404	Selector Switch	C125 USN200	1				SW	
41	M 32136 01504	Switch Bracket		1					
42	M 32136 01604	Switch Bracket		1					
42- 1	03300 00170	Edging		2					
43	00271 04035	Machine Screw		4					
	02070 04000	Hex. Nut		4					
44	00271 04016	Machine Screw		4					
	02070 04000	Hex. Nut		4					
45	00169 06016	Hex. Head Bolt		6					
46	M 32136 02404	Switch Cover		1					
46- 1	03177 00180	Weather Strip		1					
47	M 32136 02304	Switch Cover		1					
48	00169 06016	Hex. Head Bolt		10					
49	00169 06016	Hex. Head Bolt		19					
	00405 06000	Toothed Washer		1					
50	M 32230 01103	Control Panel		1					
51	06018 07641	Frequency Meter	FCF-6 45~65Hz 240V	1				F	
52	06018 08988	AC Ammeter	ACF-6 0~200A/400A:5A	1				A	
53	06018 01040	Change-Over Switch, ammeter	SL-2AS	1				AS	
54	06018 06859	AC Voltmeter	SCF-6 0~600V	1				V	
55	06018 01041	Change-Over Switch, voltmeter	SL-2VS	1				VS	
56	06018 40073	Rheostat(Voltage Regulator)	RA20A2SE102BJ 2W 1kΩ	1				VR	
57	06018 40121	Knob	25N	1					
58	06022 02641	Controller	ECU(CAN77)	1					
59	00210 04040	Machine Screw		2					
	02070 04000	Hex. Nut		2					
60	06018 31340	Switch	2GM54-63	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
61	06021 03092	Alarm Lamp	PL-05	2					
	06018 10245	Bulb	E-10 T-10 DC18V	(2)					
62	06021 20095	Tachometer 	111810	1					
63	06021 22093	Oil Pressure Gauge	100174	1					
64	06021 23090	Water Temperature Gauge	100683	1					
65	06021 21081	Charging Ammeter	100160	1					
66	06021 25090	Fuel Gauge	100176	1					
67	06018 10141	Panel Light	98268-00370	1					
68	06018 31330	Switch, panel light	90-0001	1					
69	06018 31395	Switch, engine speed	S302	1				7510001~ 7510250	
	06018 30710	Switch, engine speed	S-301T	1				7510251~	
70	M 12231 00004	Stopper		1					
71	M 32231 00004	Stopper		1					
72	00271 05010	Machine Screw		4					
73	00271 05010	Machine Screw		4					
74	M 92201 00004	Set Screw		2					
75	00802 00007	Snap Ring	S-7	2					
76	06021 22272	Unit, oil pressure	108497	1					
77	M 92001 00004	Adapter		1					
78	06020 20220	Adapter	ISUZU 894399-8582	1					
79	06021 23260	Unit, water temperature	02094-00	1					
80	06020 21109	Packing	ISUZU 909572-0140	1					
81	06021 20465	Pick Up, tachometer		1					
82	06018 06644	Fuse	30A	1					
83	06018 06640	Fuse	65A	1					
84	06018 30762	Fuel Pump Switch	S-305T	1				7510366~	

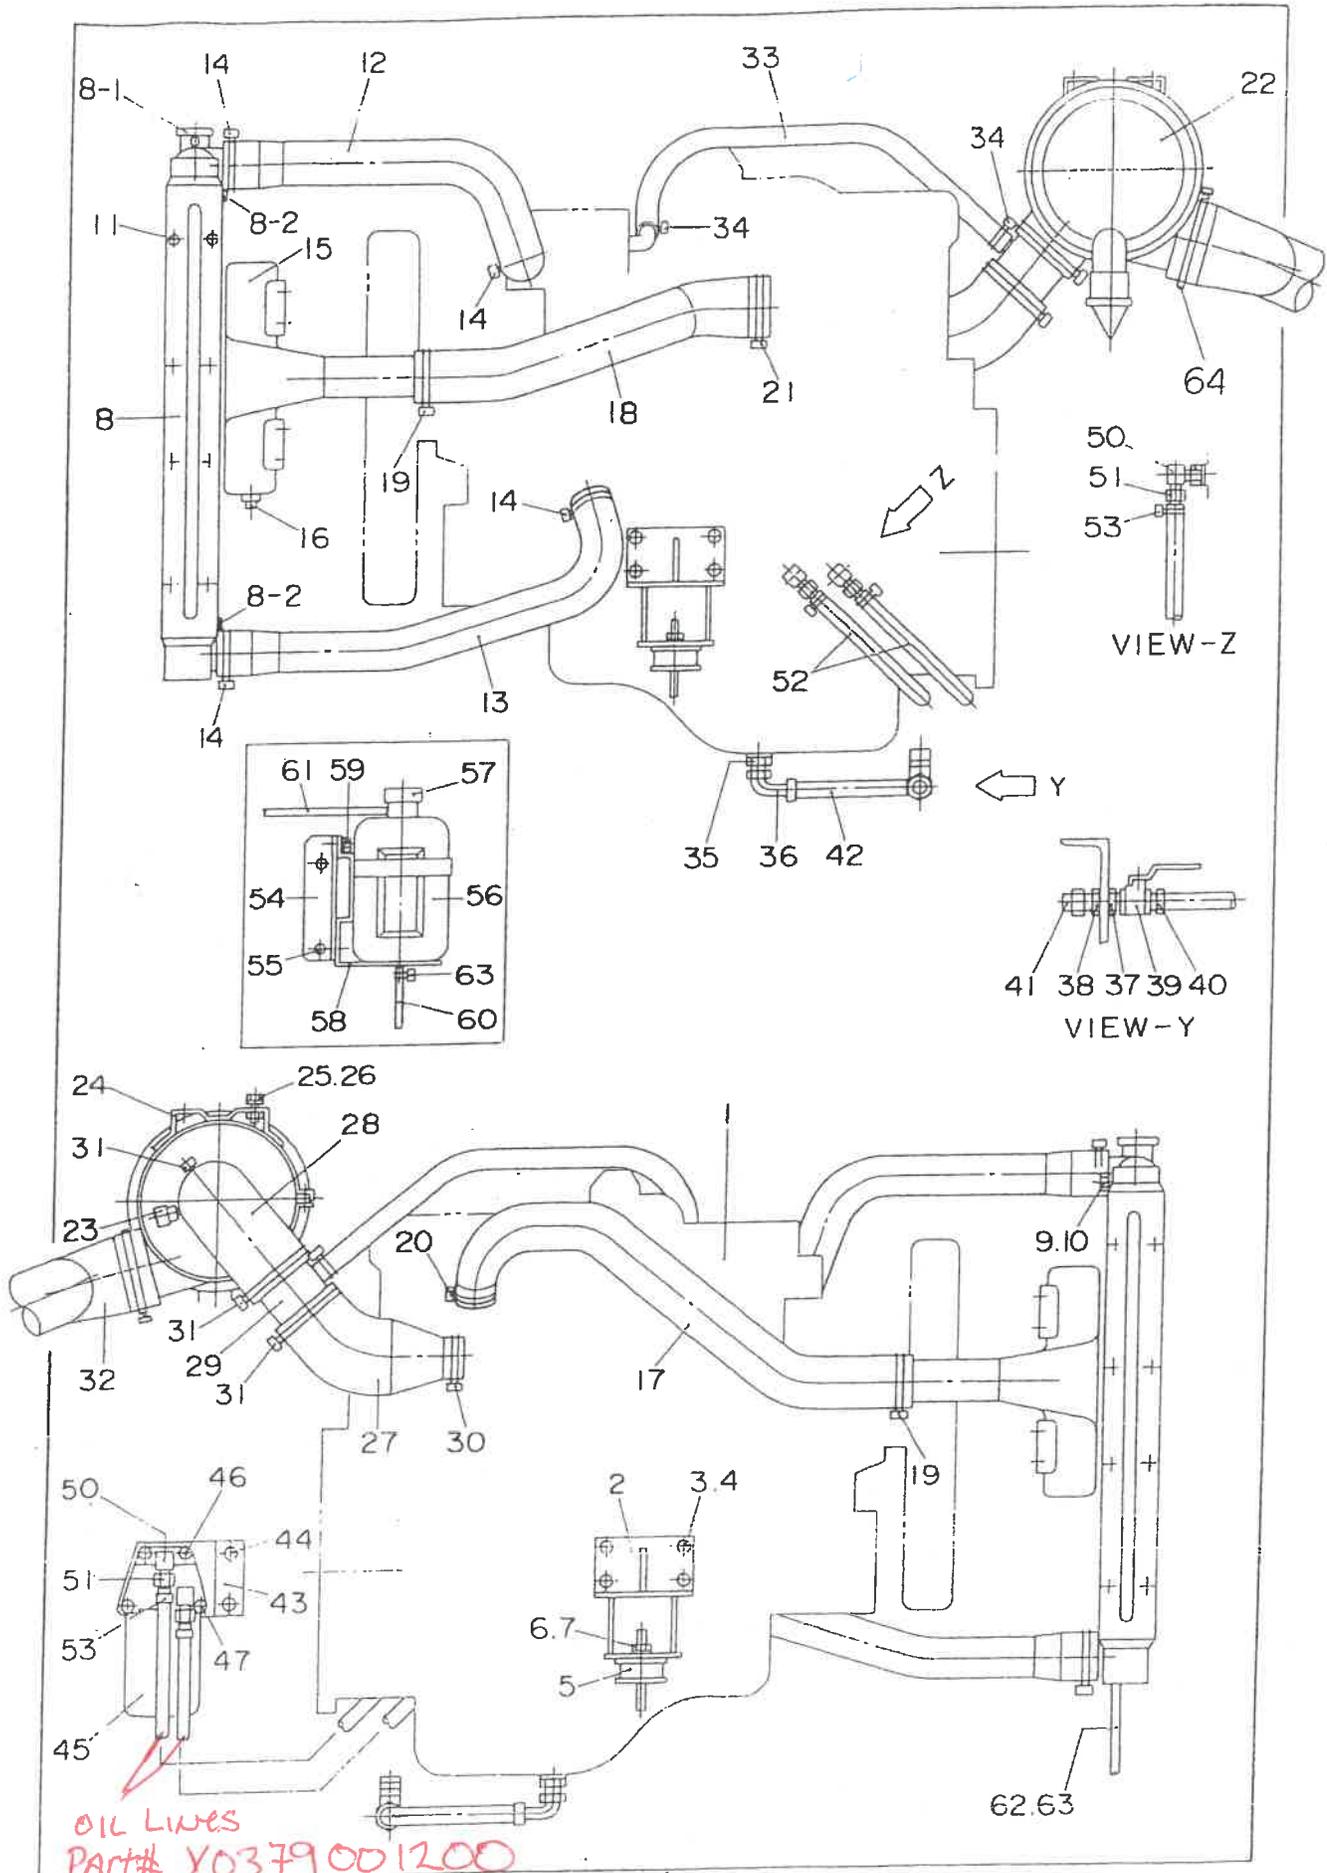

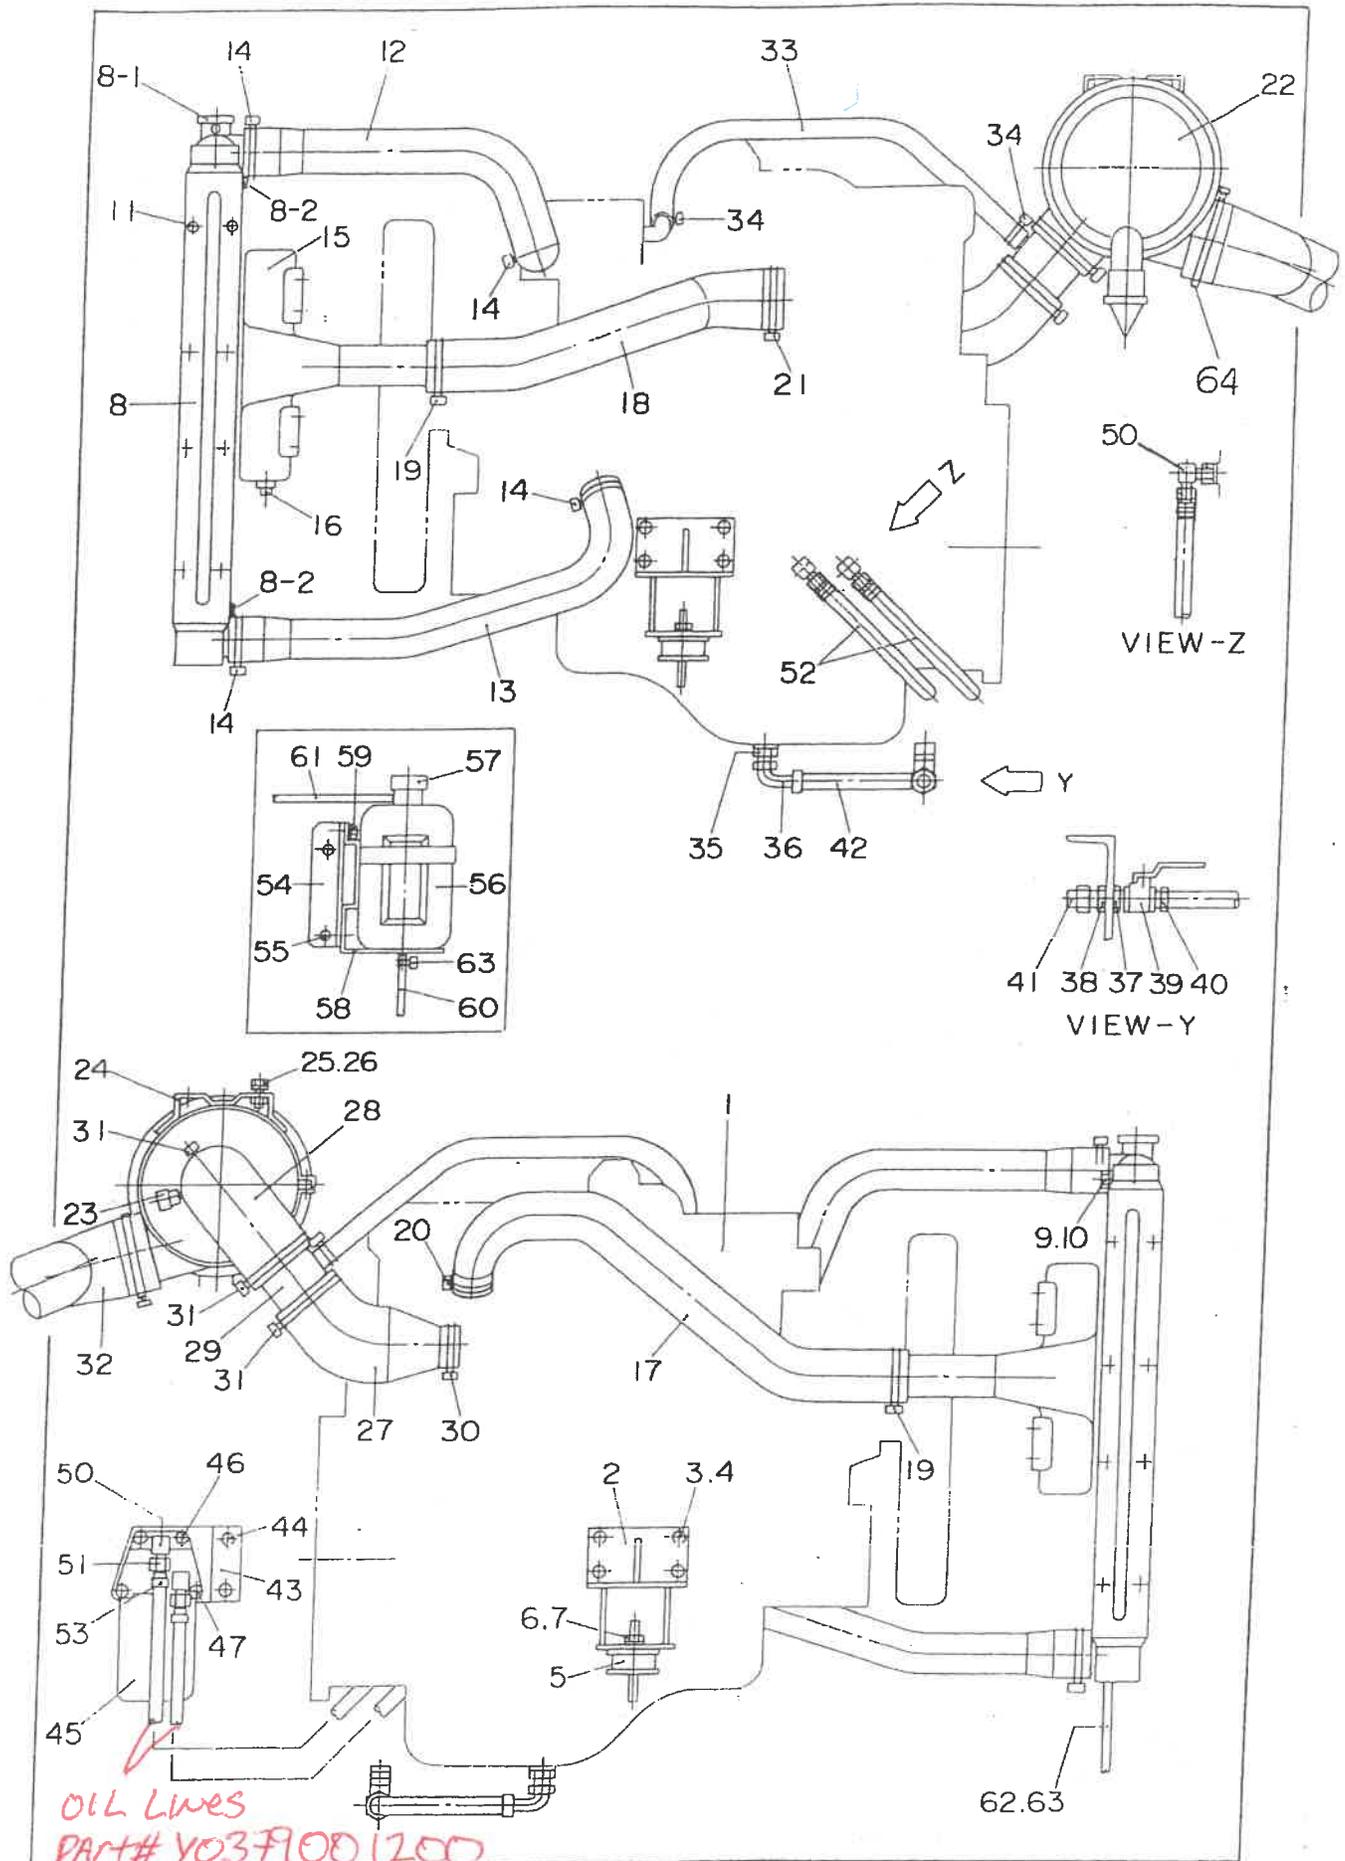


OIL LINES
PART# Y0379001200


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 39232 00134	Engine	ISUZU 4HK1X	1					
	06020 15253	Fan Belt	ISUZU 898062-7130	(1)					
2	M 33032 00603	Engine Foot		2					
3	00103 10025	Hex. Head Bolt		8					
4	00425 10000	Spring Washer		8					
5	06050 00060	Rubber Suspension	KA-80SS	2					
6	00300 12000	Hex. Nut		2					
7	00400 12000	Spring Washer		2					
8	M 39232 00114	Radiator	232000-6390	1					
8- 1	06020 11029	Cap	102600-0620	(1)					
8- 2	M 44936 01304	Rubber Seal		2					
9	M 92001 00904	Plug		1					
10	01500 00016	O Ring	P16	1					
11	00169 08020	Hex. Head Bolt		16					
12	M 33105 02203	Radiator Hose		1					
13	M 33105 02303	Radiator Hose		1					
14	06055 15148	Hose Band	5040	4					
15	M 39232 00124	Inter Cooler	135000-1140	1					
16	01320 04000	Plug	3/8	1					
17	M 33105 02403	Cooler Hose		1					
18	M 33105 02503	Cooler Hose		1					
19	06055 15208	Hose Band	90588K	2					
20	06055 15204	Hose Band	89581K	1					
21	06055 15207	Hose Band	89591K	1					
22	06020 46258	Air Cleaner	FRG100297	1					
	06020 46684	Element, air cleaner	P781039	(1)					
	06020 46685	Element, air cleaner	P777639	(1)					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
23	06020 40650	Indicator, air cleaner	PBX00-2252	1					
24	06020 40596	Band, air cleaner	P00-4076	2					
25	00169 08020	Hex. Head Bolt		4					
26	02070 08000	Hex. Nut		4					
27	M 33731 01003	Hose, air cleaner		1					
28	M 33731 01103	Hose, air cleaner		1					
29	M 33261 00104	Blowby Pipe		1					
30	06055 15146	Hose Band	5036	1					
31	06055 15197	Hose Band	5072	3					
32	M 33731 00703	Air Duct Hose		1					
33	01917 01200	Blowby Hose		1					
34	06055 15149	Hose Band	5024	2					
35	06020 22581	Adapter	10M24X2. 0F80X	1					7510001~ 7510275
	06020 22589	Adapter	7400-10-24	1					7510276~
36	06020 22561	90° Elbow	33982-10-10+	1					7510001~ 7510275
	06020 22579	90° Elbow	191321-10S	1					7510276~
37	06033 06590	Connector	10WFTX-S	1					7510001~ 7510275
	06033 06597	Connector	2706-10-08	1					7510276~
38	06033 00285	Locknut	10WLN	1					7510001~ 7510275
	06033 00286	Locknut	306-10	1					7510276~
39	06055 11395	Valve	XV500P-8	1					7510001~ 7510275
	06055 11399	Valve	FBV050	1					7510276~
40	06033 06395	Hose Joint	30182-8-10	1					7510001~ 7510275
	06033 06399	Hose Joint	PM10-8	1					7510276~
41	06020 21070	Cap	10FNTX-S	1					7510001~ 7510275
	06020 21071	Cap	304-C-10	1					7510276~

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
42	02692 00600	Drain Hose	836-10	1				7510001~ 7510275	
	03795 00600	Drain Hose	FC332-10	1				7510276~	
43	M 33235 00004	Bracket, oil filter		1					
44	00169 10025	Hex. Head Bolt		2					
45	06020 41007	Oil Filter	ISUZU 897324-3861	1					
	06020 41221	Cartridge, oil filter	ISUZU 113240-2322	(1)					
46	00101 10110	Hex. Head Bolt		2					
	00400 10000	Spring Washer		2					
	00412 10000	Plain Washer		2					
47	00101 10150	Hex. Head Bolt		2					
	00400 10000	Spring Washer		2					
	00412 10000	Plain Washer		2					
48	06020 22530	Adapter	1100-19	2					
49	01501 00024	O Ring	P24-1B	2					
50	06020 22535	Adapter	1071-12-19	4					
51	06020 22930	Hose Joint	103-12	4				7510001~ 7510250	
	06033 06398	Hose Joint	3GU82-8-8	4				7510251~ 7510285	
52	03790 01200	Hose		2				7510001~ 7510285	
	M33233 00004	Hose		2				7510286~	
53	06055 15198	Hose Band		4				7510001~ 7510250	
54	M 33162 00004	Bracket, reserve tank		1					
55	00169 08020	Hex. Head Bolt		2					
56	M 93000 00203	Reserve Tank		1					
57	06020 10900	Cap, reserve tank		1					
58	M 33161 00504	Bracket, reserve tank		1					
59	00169 08020	Hex. Head Bolt		2					


Key No.	Parts No.	Parts Name	Remarks	Q' ty				Symbol	Serial No.
				All	A	B	C		
60	01999 01050	Hose		1					
61	01936 01200	Hose		1					
62	01936 00450	Hose		1					
63	06055 15106	Hose Band	RS-8006	3					
64	06055 15202	Hose Band		1					

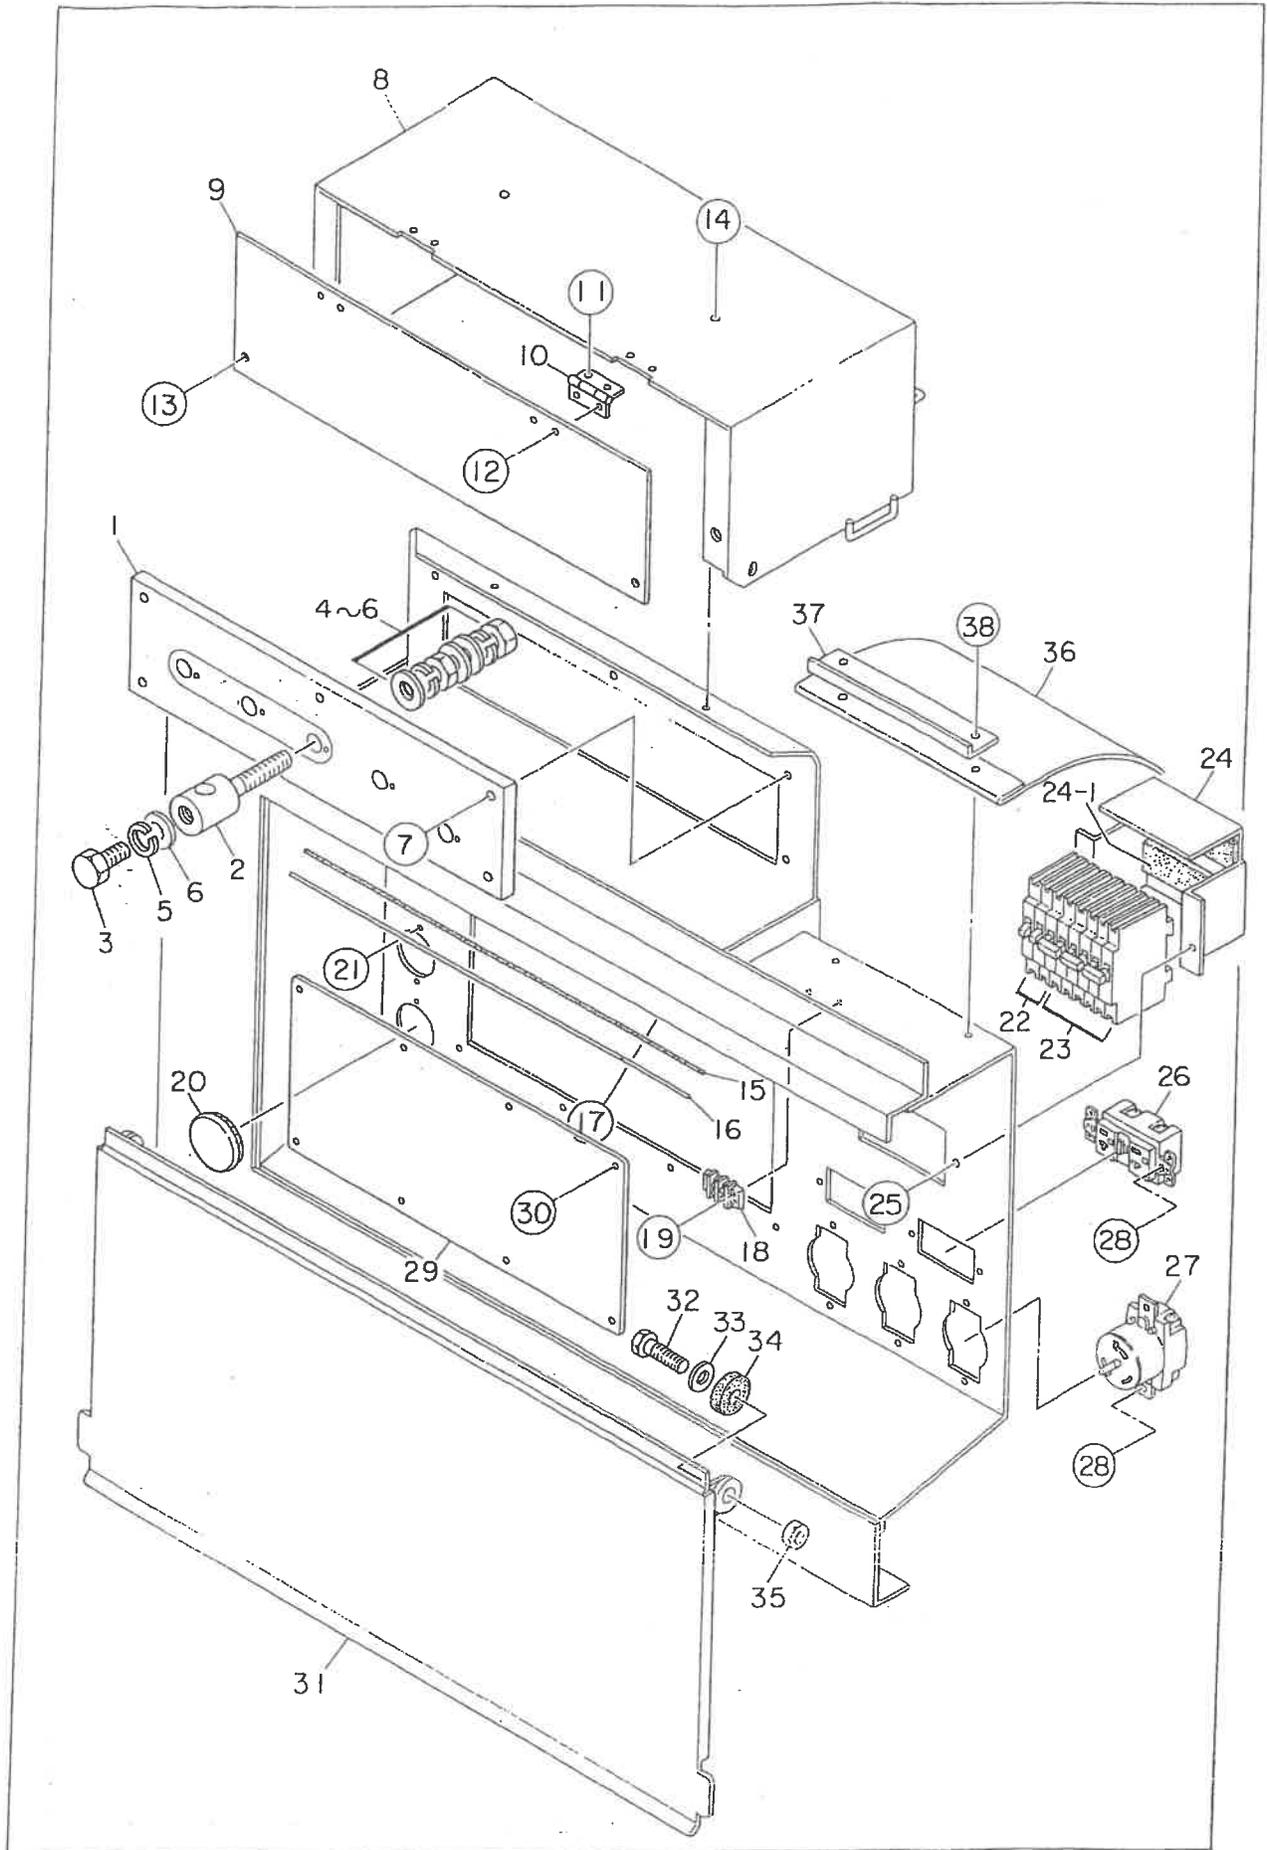

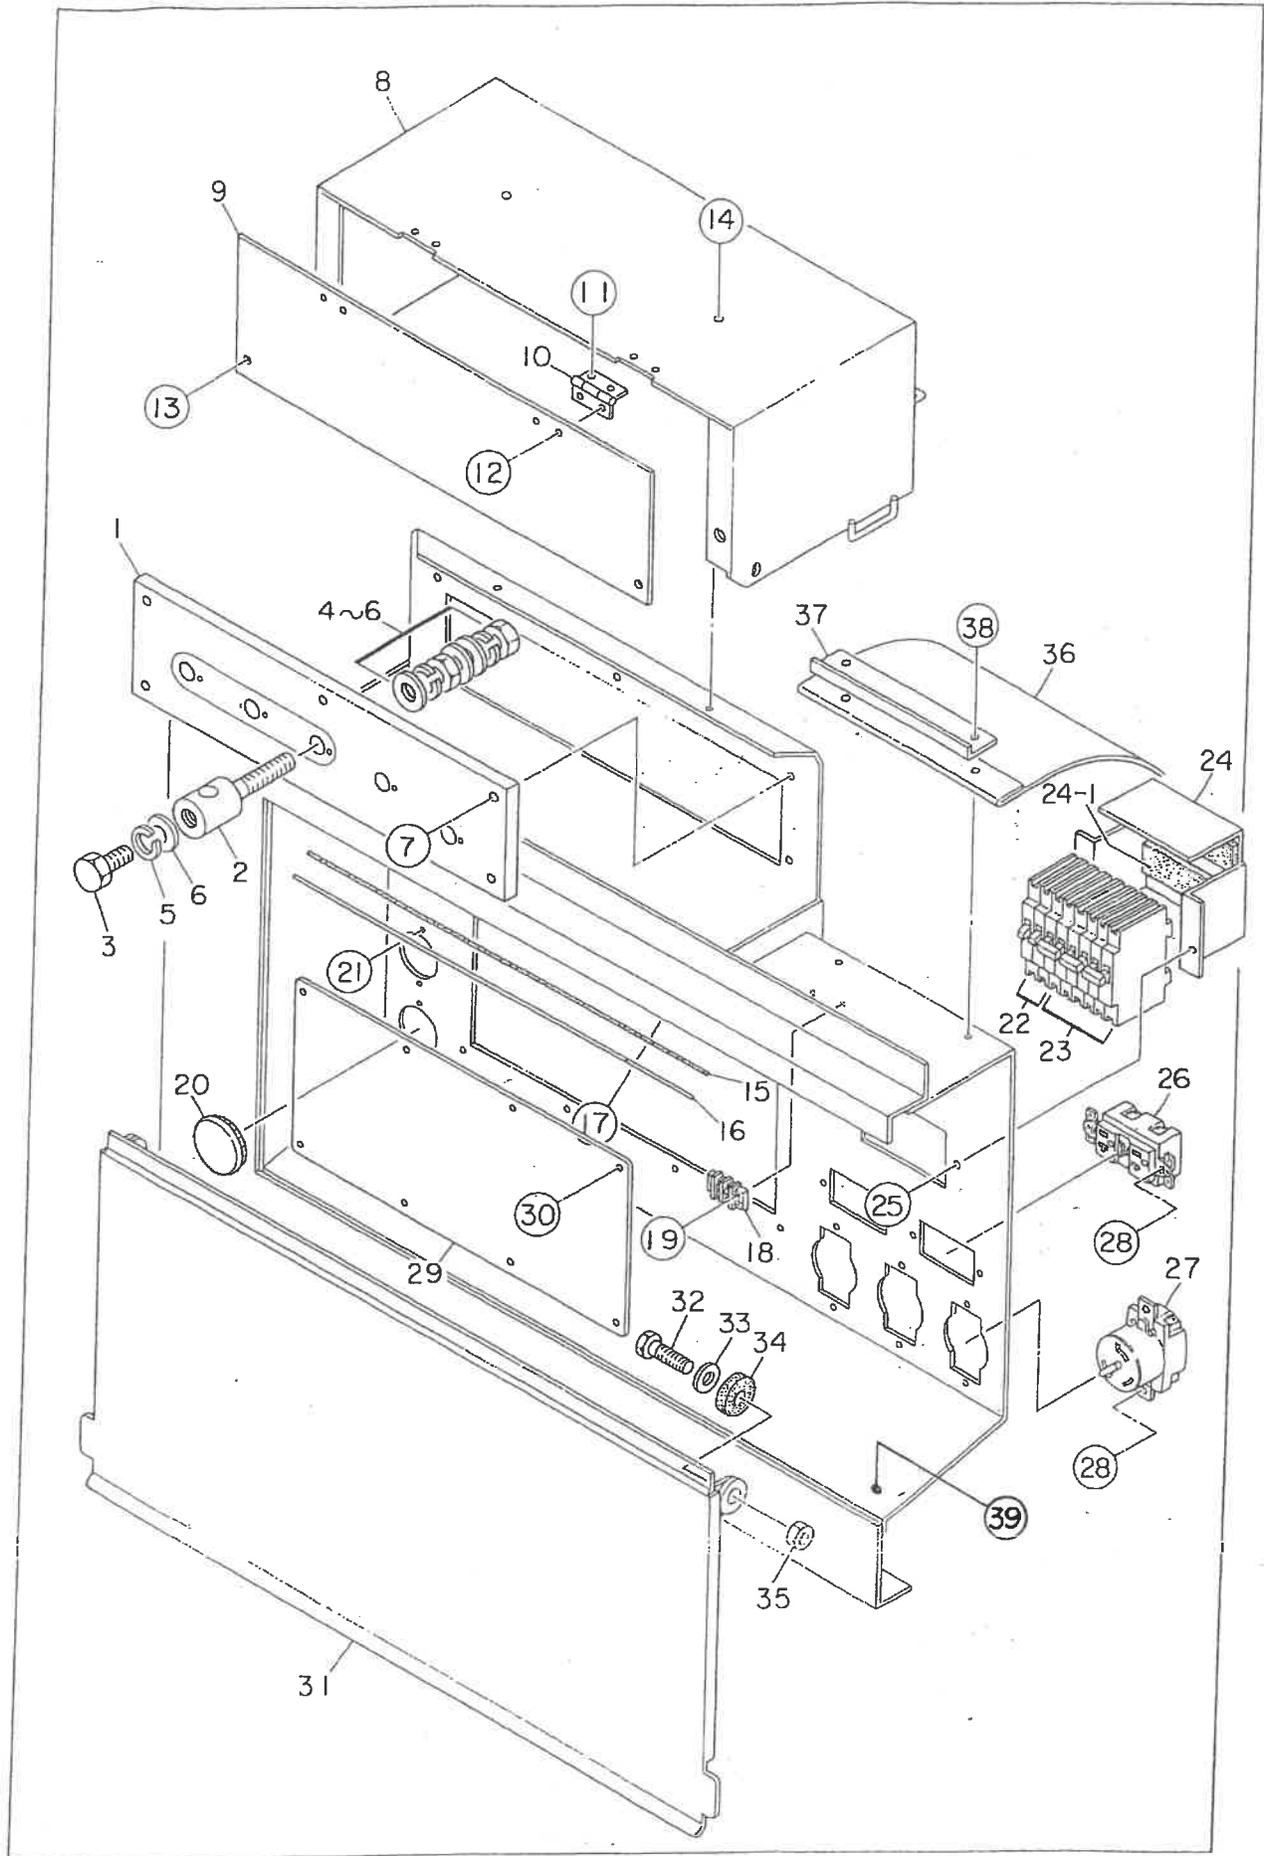


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 32307 00003	Terminal Board		1					
2	M 92201 00304	Output Terminal Bolt		5					
3	M 92201 00404	Tie Bolt		5					
4	00393 16000	Hex. Nut		10					
5	00400 16000	Spring Washer		15					
6	00414 16000	Plain Washer		20					
7	00169 08035	Hex. Head Bolt		5					
8	M 32361 00903	Terminal Cover		1					
9	M 32361 00104	Output Window		1					
10	06050 10040	Hinge	TH-TM122	2					
11	00271 03010	Machine Screw		4					
	00300 03000	Hex. Nut		4					
	00412 03000	Plain Washer		4					
12	00271 03010	Machine Screw		4					
	00300 03000	Hex. Nut		4					
13	M 92201 00804	Set Screw		2					
	00400 06000	Spring Washer		2					
	00412 06000	Plain Washer		2					
	00802 00005	Retainig Ring		2					
14	00169 06016	Hex. Head Bolt		4					
15	M 32364 00004	Cable, Outlet Cover		1					
16	M 32363 00004	Supporter, cable outlet cover		1					
17	00169 06020	Hex. Head Bolt		6					
18	06018 15194	Terminal Block	601-GP-02	1					
19	00271 04016	Machine Screw		2					
20	06033 06775	Blind Plug		2					
21	00271 04016	Machine Screw		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
22	06018 70440	Circuit Breaker	QCF1020 1P 20A	2				CB5, 6	
23	06018 70441	Circuit Breaker	QCF2050 2P 50A	3				CB2~4	
24	M 12607 00504	Breaker, Fitting Cover		1					
24- 1	02221 00100	Cushion Rubber		2					
25	00169 06020	Hex. Head Bolt		2					
26	06018 12598	Receptacle	GF530EM 125V 20A x 2	2				CON4, 5	
27	06018 12538	Receptacle	CS6369 250V 50A	3				CON1~3	7510001~ 7510275
	06018 14014	Receptacle	CS6369L 250V 50A	3				CON1~3	7510276~
28	00271 04016	Machine Screw		10					
	02070 04000	Hex. Nut		10					
29	M 32364 00204	Cover		1					
30	00169 06016	Hex. Head Bolt		8					
31	M 32361 00213	Terminal Cover		1					
32	00101 12045	Hex. Head Bolt		2					
33	00412 12000	Plain Washer		2					
34	M 93102 00004	Stay Rubber		2					
35	00300 12000	Hex. Nut		2					
36	M 42361 00604	Cover		1					
37	M 42364 00304	Bracket		1					
38	00169 06016	Hex. Head Bolt		2					
39	00192 08020	Hex. Head Bolt		1					7510366~
	00405 08000	Toothed Washer		1					7510366~

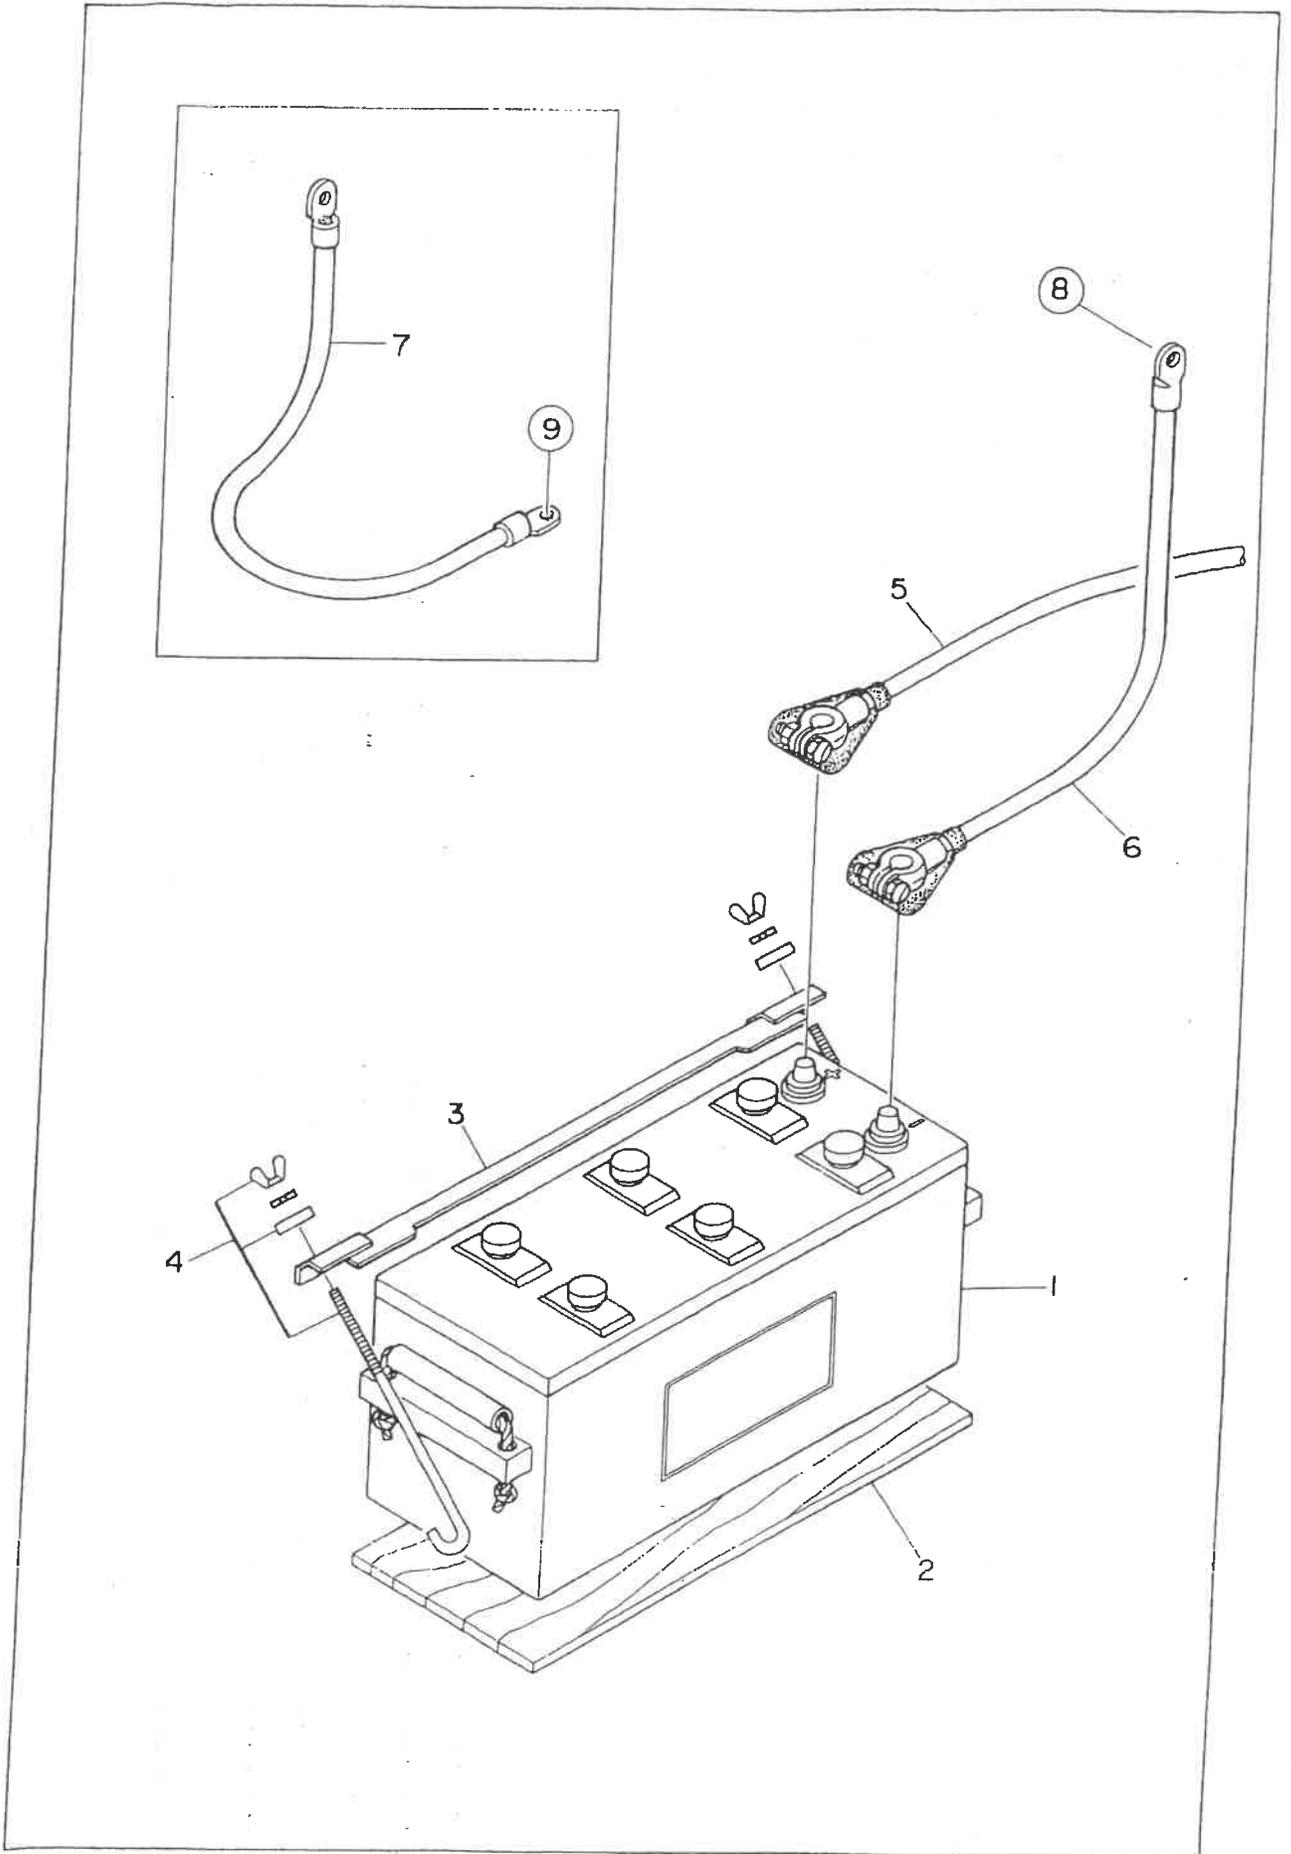

Battery Ass'y


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	06022 20198	Battery	904D	1					
2	M 93105 00404	Battery Sheet		1					
3	M 91030 00504	Battery Band		1					
4	06022 20921	Battery Bolt Set	BHB-12J 1/4-L12	2					
5	M 33469 01404	Battery Cable		1					
6	M 33469 01504	Battery Cable		1					
7		Cable		1					
8	00169 10025	Hex. Head Bolt		1					
	00405 10000	Toothed Washer		1					
9	00169 10025	Hex. Head Bolt		1					
	00405 10000	Toothed Washer		1					

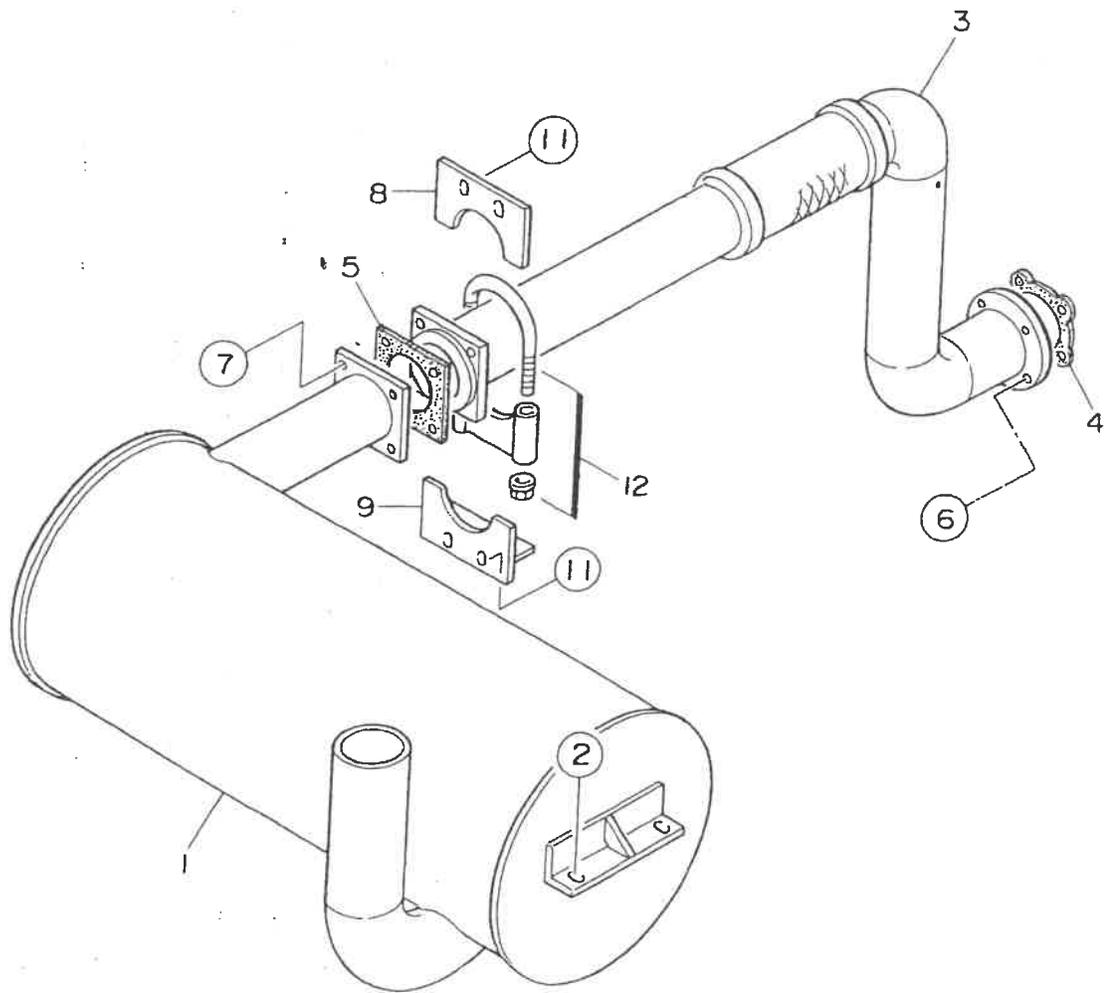

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 33301 00902	Muffler		1					
2	00169 10025	Hex. Head Bolt		4					
3	M 33330 01403	Exhaust Pipe		1					
4	06023 20108	Gasket	ISUZU 114145-1840	1					
5	M 33332 00004	Gasket		1					
6	00396 08000	Hex. Nut		8					
7	00171 10040	Hex. Head Bolt		4					
8	M 33304 00304	Cover		1					
9	M 33304 00403	Bracket		1					
11	00169 08020	Hex. Head Bolt		4					
12	06023 26061	U Bolt Set	89547K	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 33630 02002	Fuel Tank		1					
1- 1	06055 05070	Cap, fuel tank		(1)					
1- 2	06055 01076	Fuel Sender Unit	Y0605501064	(1)					
1- 3	06055 16090	Gasket		(1)					
1- 4	00271 04015	Machine Screw		(5)					
2	M 33632 00204	Tank Band		2					
3	M 93105 00104	Supporter Sheet		4					
4	00169 08020	Hex. Head Bolt		2					
5	02073 08000	Super Lock Nut		2					
6	02221 00150	Rubber Sheet		4					
7	M 92000 00003	Drain Joint		1					
8	M 92002 00004	Drain Bolt		1					
9	01500 00018	O Ring	AP18	1					
10	00169 06020	Hex. Head Bolt		2					
11	M 13634 00104	Drain Hose		1					
12	06055 15198	Hose Band	5008	2					
13	M 33667 00103	Fuel Filter Bracket		1					
14	00169 08020	Hex. Head Bolt		4					
15	06020 42426	Fuel Filter (Main)	ISUZU 898013-9861	1					
	06020 42515	Element, fuel filter	ISUZU 898008-8400	(1)					
16	06020 42405	Fuel Filter (Pre.)	ISUZU 898075-8550	1					
	06020 42516	Element, fuel filter	ISUZU 898075-8540	(1)					
17	06020 42661	Joint Pipe	ISUZU 897383-4270	4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
18	06020 42621	Joint Bolt	ISUZU 109675-0951	4					
19	06020 42641	Packing	ISUZU 109630-0860	8					
20	00153 10045	Hex. Head Bolt		4					
	00400 10000	Spring Washer		4					
	00412 10000	Plain Washer		4					
21	00101 10070	Hex. Head Bolt		2					
	00400 10000	Spring Washer		2					
	00412 10000	Plain Washer		2					
22	06020-23240	Fuel Feed Pump	ISUZU 898068-2750	1					
	06020-42517	Fuel Filter	ISUZU 898071-4010	(1)					
23	00169 06025	Hex. Head Bolt		2					
24	01913 01400	Suction Hose		1					
25	01913 00800	Suction Hose		1					
26	01913 00330	Suction Hose		1					
27	01913 00500	Suction Hose		1					
28	01913 03400	Return Hose		1					
29	06055 15109	Hose Band	RS-8010	10					



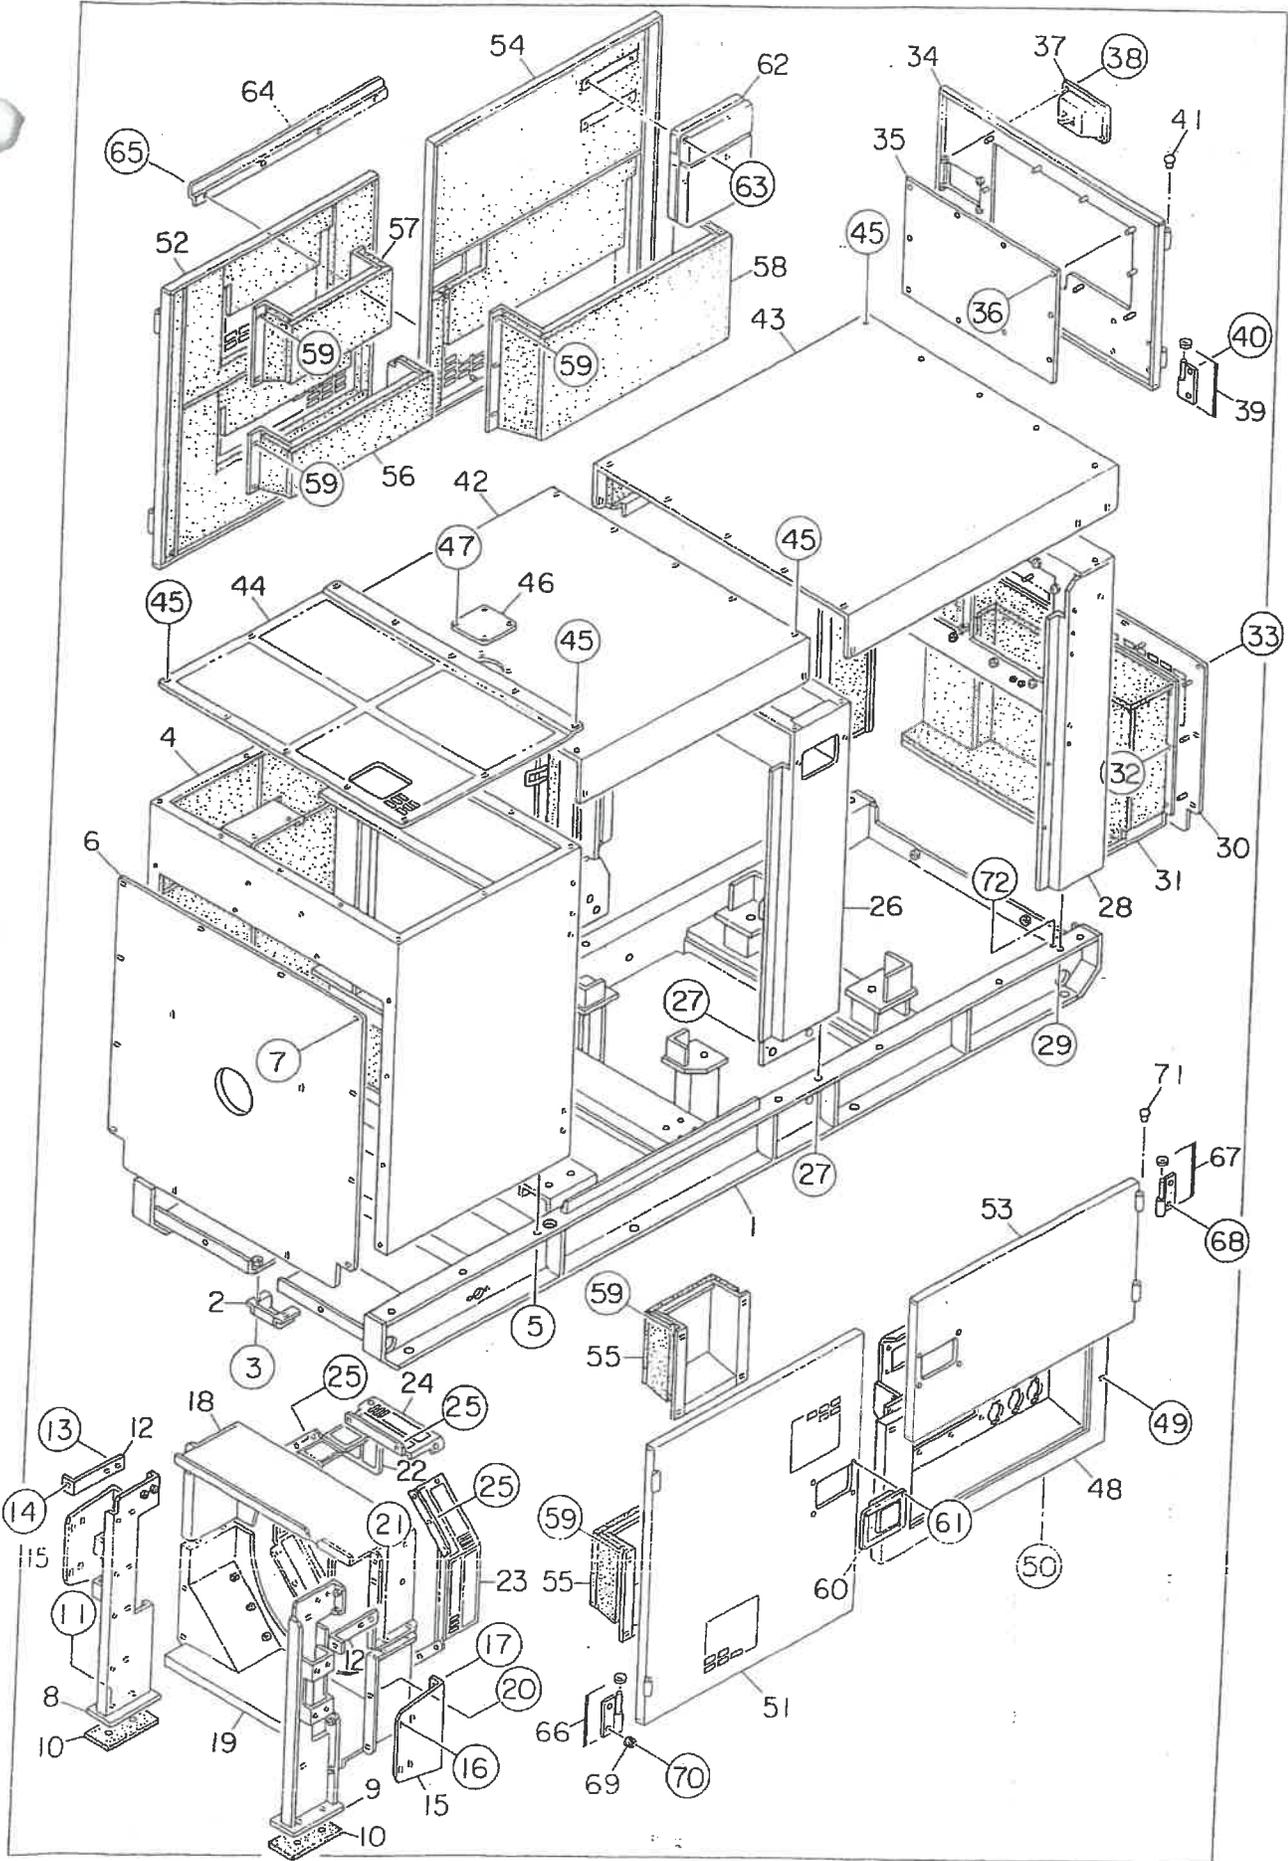


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 34130 02402	Base		1					
2	M 14134 00004	Cover		1					
3	00169 08020	Hex. Head Bolt		2					
4	M 34230 02702	Front Frame		1					
	M 34931 14303	Acoustic Sheet		1					
5	00169 10025	Hex. Head Bolt		6					
6	M 34232 00104	Cover, front frame		1					
	M 34931 00304	Acoustic Sheet		1					
7	00192 08020	Hex. Head Bolt		14					
8	M 33102 02203	Supporter, radiator		1					
	M 34936 00504	Acoustic Sheet		1					
9	M 33102 02303	Supporter, radiator		1					
	M 34936 00504	Acoustic Sheet		1					
10	M 43106 00304	Rubber Sheet		2					
11	00171 12055	Hex. Head Bolt		4					
12	M 33102 02504	Bracket, radiator		2					
13	00169 10025	Hex. Head Bolt		4					
14	00169 10025	Hex. Head Bolt		2					
15	M 33102 02403	Bracket, inter cooler		2					
16	00169 10025	Hex. Head Bolt		8					
17	00171 10020	Hex. Head Bolt		8					
18	M 33103 03303	Fan Shroud		1					
19	M 33103 03403	Fan Shroud		1					
20	00169 08020	Hex. Head Bolt		8					
21	00169 08020	Hex. Head Bolt		4					
	02070 08000	Hex. Nut		4					
22	M 33103 03603	Fan Guard		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
23	M 33103 03503	Fan Guard		1					
24	M 33103 03703	Fan Guard		1					
25	00169 08020	Hex. Head Bolt		16					
26	M 34330 01302	Center Frame		1					
	M 34932 00004	Acoustic Sheet		1					
27	00101 14040	Hex. Head Bolt		12					
	00300 14000	Hex. Nut		12					
	00400 14000	Spring Washer		24					
	00412 14000	Plain Washer		24					
28	M 34430 01802	Rear Frame		1					
	M 34933 00204	Acoustic Sheet		1					
29	00169 10030	Hex. Head Bolt		4					
	00405 10000	Toothed Washer		1					
30	M 34433 01603	Rear Cover		1					
31	M 34433 01703	Duct, rear cover		2					
	M 34933 08503	Acoustic Sheet		1					
32	02070 06000	Hex. Nut		9					
33	00192 08020	Hex. Head Bolt		10					
34	M 34432 00703	Rear Door		1					
35	M 34436 00104	Window Plate		1					
36	00379 06000	Self-Locking U Nut		10					
	00412 06000	Plain Washer		10					
37	M 91130 00002	Door Handle Ass'y		1					
38	00218 06016	Machine Screw		4					
	00300 06000	Hex. Nut		4					
39	M 91101 00204	Hinge		2					
	M 91161 00004	Washer		2					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
40	00192 08020	Hex. Head Bolt		3					
41	M 93100 00004	Blind Plug		2					
42	M 34631 01403	Roof Panel		1					
	M 34935 08803	Acoustic Sheet		1					
43	M 34632 01902	Roof Panel		1					
	M 34935 09003	Acoustic Sheet		1					
44	M 34232 02503	Over Cover, front frame		1					
45	00192 08020	Hex. Head Bolt		37					
46	M 33106 00004	Cover		1					
47	00192 08020	Hex. Head Bolt		4					
48	M 34532 01602	Splasher Panel		1					
	M 34934 26404	Acoustic Sheet		1					
49	00191 08055	Hex. Head Bolt		4					
	00423 08000	Spring Washer		4					
	00424 08000	Plain Washer		4					
50	00169 10025	Hex. Head Bolt		2					
51	M 34530 04903	Side Door		1					
	M 34934 25703	Acoustic Sheet		1					
52	M 34530 05003	Side Door		1					
	M 34934 25903	Acoustic Sheet		1					
53	M 34530 05103	Side Door		1					
	M 34934 26104	Acoustic Sheet		1					
54	M 34530 05203	Side Door		1					
	M 34934 26203	Acoustic Sheet		1					
55	M 34533 03103	Duct		2					
	M 34934 25804	Acoustic Sheet		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
56	M 34533 03203	Duct		1					
	M 34934 26004	Acoustic Sheet		1					
57	M 34533 02903	Duct		1					
	M 34934 23904	Acoustic Sheet		1					
58	M 34533 03303	Duct		1					
	M 34934 26304	Acoustic Sheet		1					
59	02070 06000	Hex. Nut		27					
60	M 91130 00002	Door Handle Ass'y		4					
61	00218 06016	Machine Screw		16					
	00300 06000	Hex. Nut		16					
62	06008 00320	Manual Pak	9000-07	1					
63	00218 06016	Machine Screw		4					
64	M 34537 00004	Gutter		1					
65	00192 06015	Hex. Head Bolt		4					
66	M 91101 00204	Hinge		4					
	M 91161 00004	Washer		4					
67	M 91101 00304	Hinge		4					
	M 91161 00004	Washer		4					
68	00192 08020	Hex. Head Bolt		9					
69	06018 50097	Stopper		8					
70	00272 08025	Machine Screw		8					
71	M 93100 00004	Blind Plug		8					
72	00169 08020	Hex. Head Bolt		1					
	00405 08000	Toothed Washer		1					

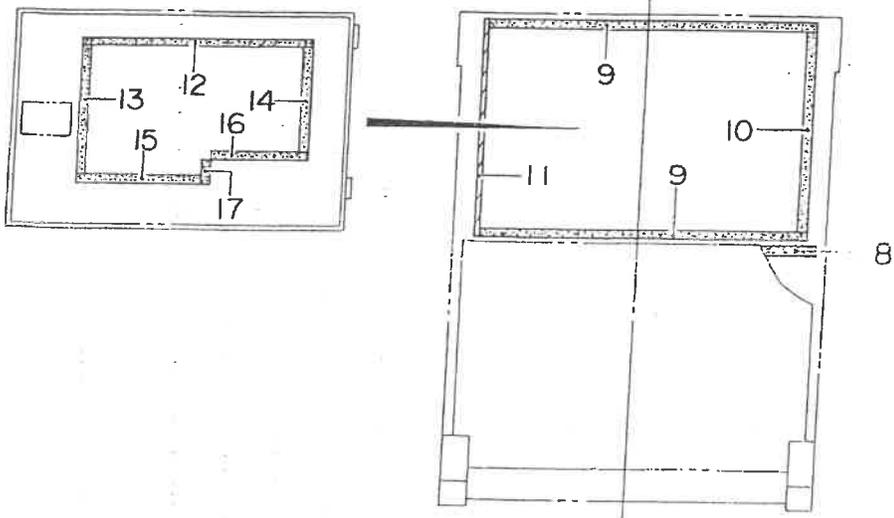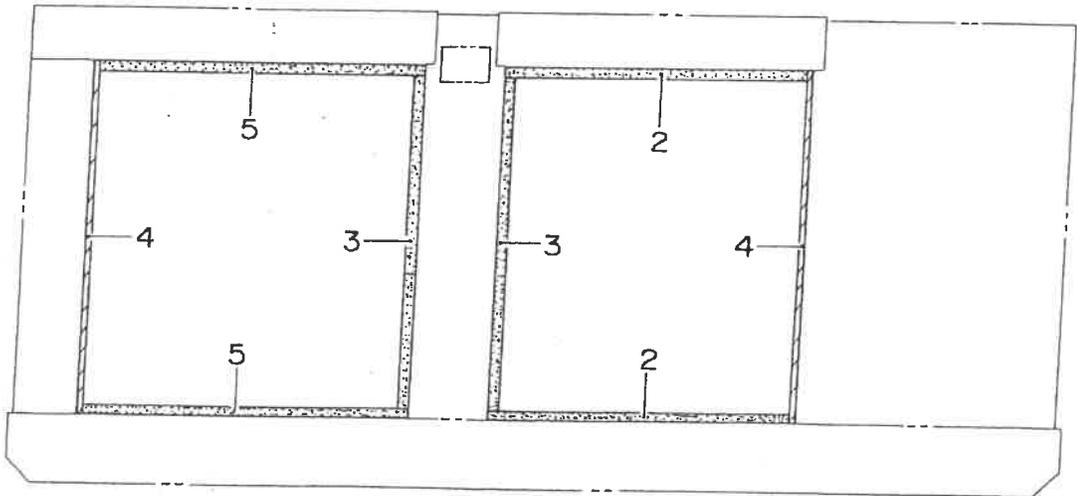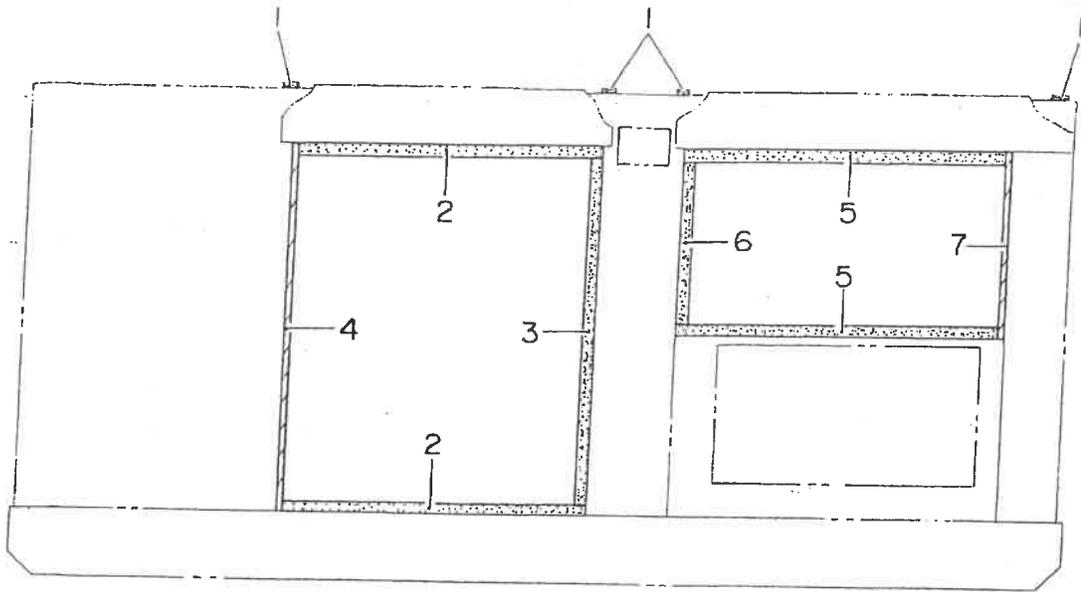

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	02292 01100	Seal Rubber		4					
2	02289 00880	Seal Rubber		4					
3	02289 00990	Seal Rubber		3					
4	02289 01050	Seal Rubber		3					
5	02289 00940	Seal Rubber		4					
6	02289 00470	Seal Rubber		1					
7	02289 00530	Seal Rubber		1					
8	02292 01040	Seal Rubber		1					
9	02288 00970	Seal Rubber		2					
10	02288 00590	Seal Rubber		1					
11	02288 00630	Seal Rubber		1					
12	02281 00665	Seal Rubber		1					
13	02281 00370	Seal Rubber		1					
14	02281 00300	Seal Rubber		1					
15	02281 00365	Seal Rubber		1					
16	02281 00280	Seal Rubber		1					
17	02281 00070	Seal Rubber		1					

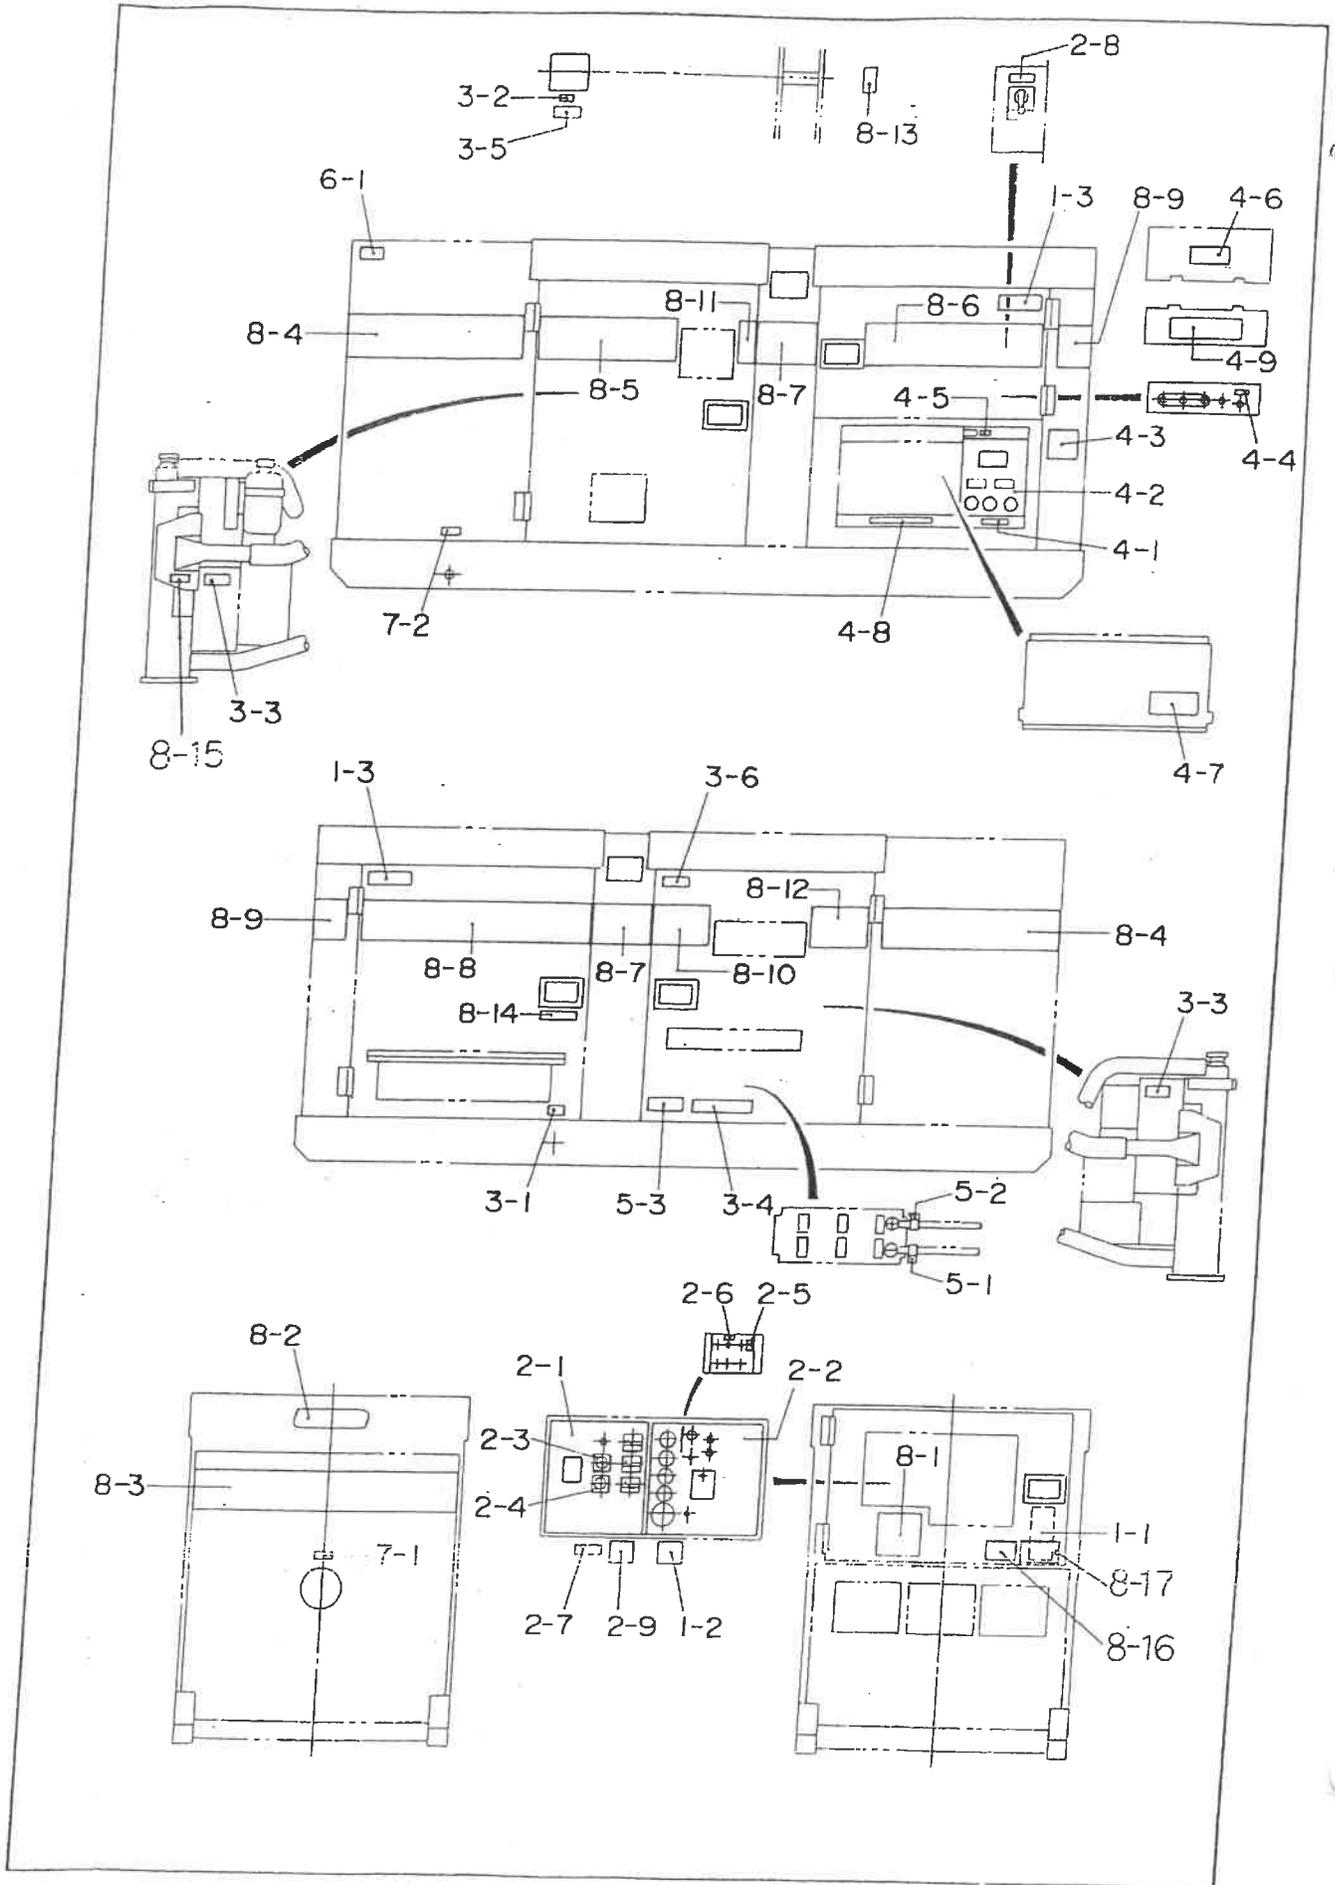

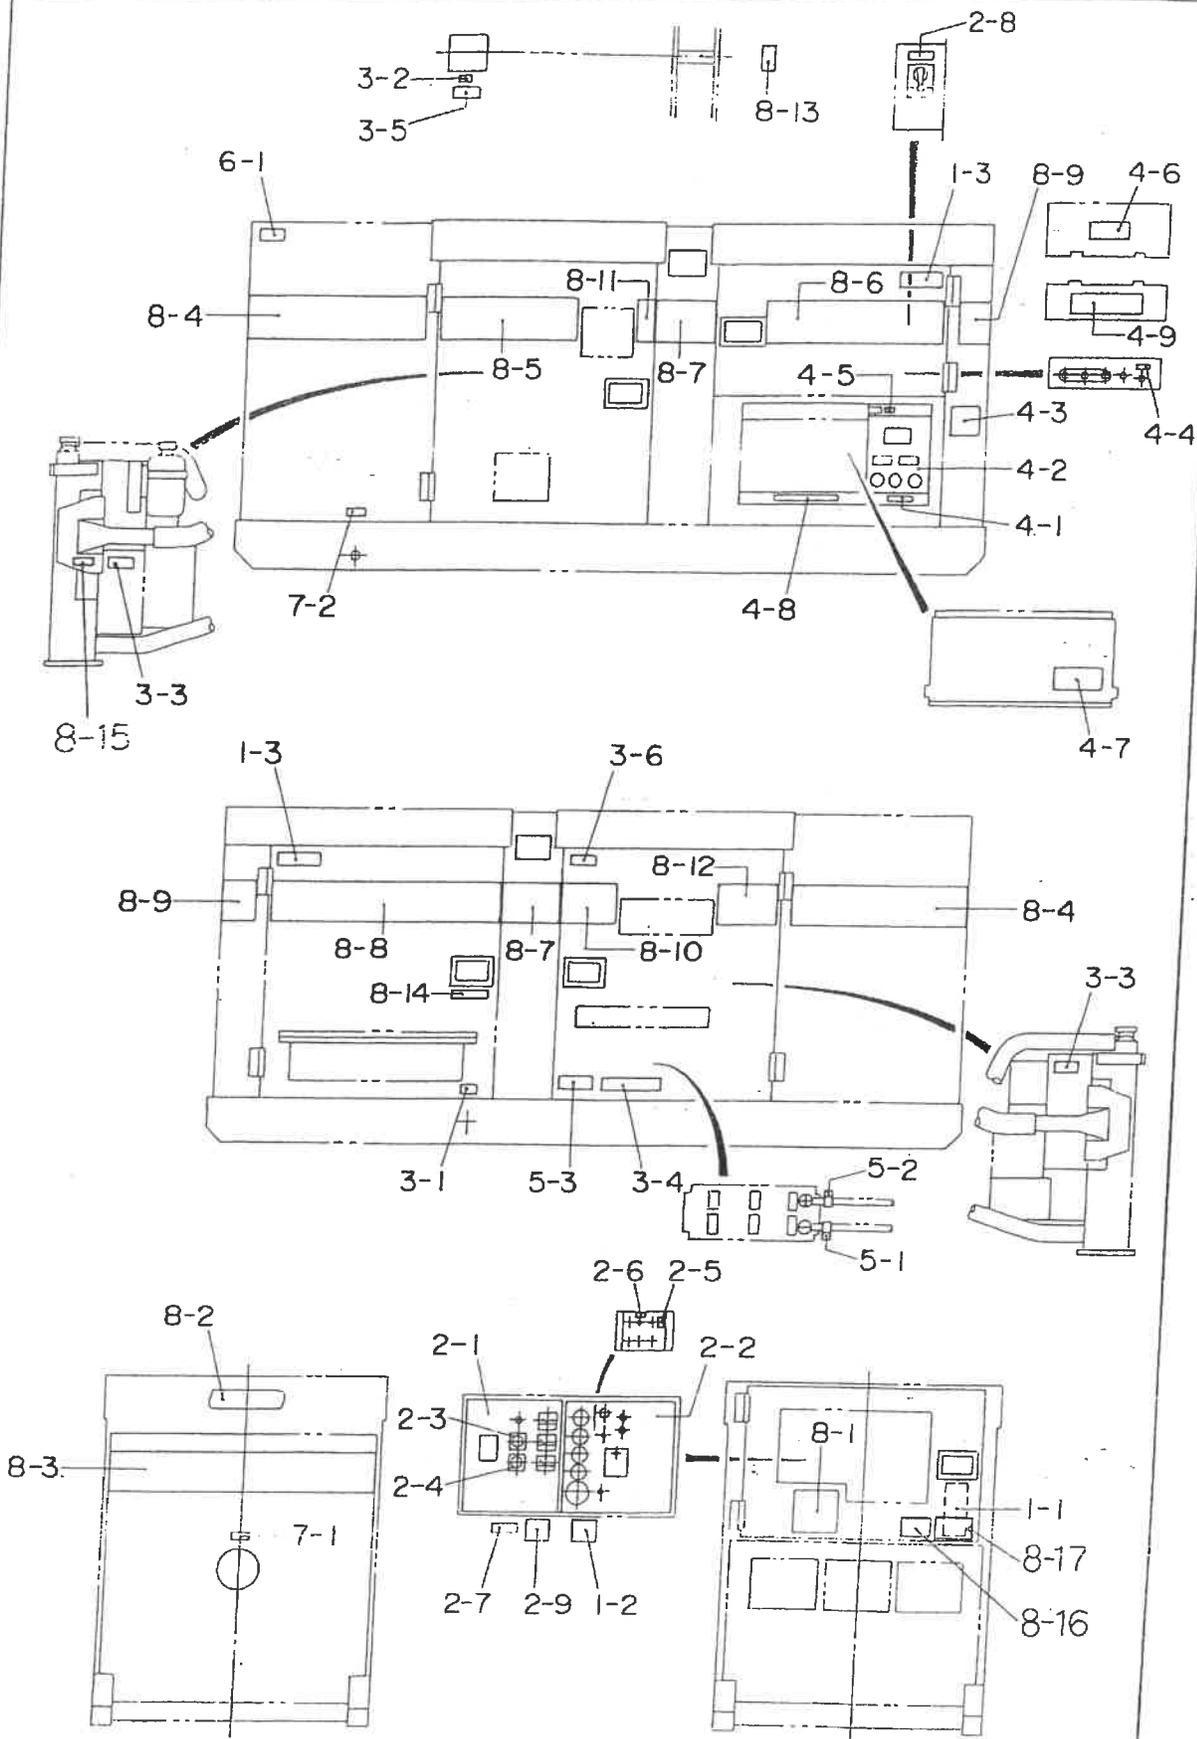

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1- 1	M 35500 03003	Decal:Operating Procedures	M3500 0300A	1					
1- 2	M 95201 00304	Decal:Safety Instructions	M9201 0030	1					
1- 3	M 95201 00603	Decal:Caution	M9201 0060	2					
		Control Box Group							
2- 1	M 35500 03303	Decal:Control Panel	M3500 0330	1					7510001~ 7510305
	M 35500 03313	Decal:Control Panel	M3500 0331	1					7510306~
2- 2	M 35500 03403	Decal:Operating Panel	M3500 0340	1					7510001~ 7510305
	M 35500 03413	Decal:Operating Panel	M3500 0341	1					7510306~
2- 3	M 95200 00104	Plate:Ammeter Change-Over Switch	M9200 0010	1					
2- 4	M 95200 00204	Plate:Voltmeter Change-Over Switch	M9200 0020	1					
2- 5	M 95200 00904	Decal:Diagnostic Switch	M9200 0090	1					
2- 6	M 95200 01104	Decal:Diagnostic Button	M9200 0110	1					
2- 7	M 95201 00004	Decal:Warning Electric Shock Hazard	M9201 0000	1					
2- 8	M 95201 00204	Decal:Caution	M9201 0020A	1					
2- 9	M 95202 00404	Decal:Over Current Relay	M9202 0040	1					
2-10	M 95200 02104	Decal:Fuel Pump Switch	M9200 0210	1					7510366~
		Engine & Radiator Group							
3- 1	M 95000 00004	Decal:Oil Drain Plug	M9000 0000	1					
3- 2	M 95001 00004	Decal:Water	M9001 0000	1					
3- 3	M 95030 00004	Decal:Warning Moving Parts	M9030 0000	2					
3- 4	M 95030 00103	Decal:Water - Oil Check	M9030 0010	1					
3- 5	M 95031 00004	Decal:Warning Hot Coolant	M9031 0000	1					
3- 6	M 95101 00004	Decal:Caution Hot Parts	M9101 0000	1					
		Output Terminal Group							
4- 1	M 15500 00204	Decal:Note	M1500 0020	1					
4- 2	M 15500 02203	Decal:Receptacle & Circuit Breaker	M1500 0220	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
4- 3	M 35500 00004	Decal:Note	M3500 0000	1					
4- 4	M 95200 00004	Decal:Ground	M9200 0000	2					7510366~
4- 5	M 95200 00504	Decal:Start Contact	M9200 0050	1					
4- 6	M 95201 00004	Decal:Warning Electric Shock Hazard	M9201 0000	1					
4- 7	M 95201 00404	Decal:Danger High Voltage	M9201 0040	1					
4- 8	M 95201 00503	Decal:Warning	M9201 0050	1					
4- 9	M 95202 00003	Decal:Output Terminal	M9202 0000	1					
		Battery Group							
5- 1	M 95003 00004	Decal: -	M9003 0000	1					
5- 2	M 95003 00104	Decal: +	M9003 0010	1					
5- 3	M 95101 00403	Decal:Caution	M9101 0040	1					
		Muffler Group							
6- 1	M 95032 00004	Decal:Warning Engine Exhaust	M9032 0000	1					
		Fuel Tank Group							
7- 1	M 95005 00004	Decal:Diesel Fuel	M9005 0000	1					
7- 2	M 95005 00104	Decal:Fuel Drain Plug	M9005 0010	1					
		Bonnet Group							
8- 1	M 95102 00002	Decal: MQ	M9102 0000	1					
8- 2	06005 00090	Emblem		1					
	00211 06016	Machine Screw		2					
8- 3	M 35601 00003	Stripe		1					
8- 4	M 35601 00103	Stripe		2					
8- 5	M 35601 03804	Stripe		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
8- 6	M 35601 00303	Stripe		1					
8- 7	M 35601 00404	Stripe		2					
8- 8	M 35601 00503	Stripe		1					
8- 9	M 35601 00604	Stripe		2					
8-10	M 35601 03504	Stripe		1					
8-11	M 35601 03604	Stripe		1					
8-12	M 35601 03704	Stripe		1					
8-13	M 35500 02204	Decal;Caution	M3500 0220	1					
8-14	M 95100 00104	Decal;Document Box Located	M9100 0010	1					
8-15	M 95001 00304	Decal;Intercooler Drain	M9001 0030	1					
8-16	M 95042 00004	Decal;Warning Start Fires	M9042 0000	1				7510251~	
8-17	M 95032 00104	Decal;Danger Ex. Gas (Indoor)	M9032 0010	1					

MANUFACTURED FOR MULTIQUIP INC.
by
DENYO MANUFACTURING CORP.



MULTIQUIP INC.
Post Office Box 6254 • Carson, Ca. 90749
18910 Wilmington Av. • Carson, Ca. 90746
Phone. (310) 537 3700 • (800) 421 1244
Fax. (310) 632 2656